Configuring RIP on the RV160 and RV260

Objective

This objective of this document is to configure RIP on the RV160 and RV260 series routers.

Introduction

Routing Information Protocol (RIP) documented as Request for Comments (RFC) 1058 is a distance-vector routing protocol and commonly used Interior Gateway Protocol (IGP). RIP uses broadcast User Datagram Protocol (UDP) data packets to exchange routing information. These RIP packets contain information about the network that the devices can reach and the number of routers or gateways that the packet must travel through in order to reach the destination address. It would send routing update messages every 30 seconds, which is termed as advertising. If a router doesn't receive an update from another router for 180 seconds or more then the receiving device would mark that route as unusable. The router will remove all routing table entries for devices that doesn't update after 240 seconds.

RIP uses a single routing metric called hop count to measure the distance between the source and destination. In a path from source to destination, each hop is assigned a hop count value, which is usually 1. When a router receives a new or changed destination network entry from a routing update, it would add a 1 to the metric value and add it in the routing table. It uses the IP address of the sender as the next hop.

RIP limits the number of hops allowed in a path from the source to a destination. This prevents routing loops from continuing indefinitely. The maximum number of hops in a path is 15. When the metric is 15 and a router receives a routing update that contains a new or changed entry, then the metric value would increase by 1 causing the metric to be 16 (infinity), this means that the network destination is considered unreachable. The downside of this feature is that it limits the maximum diameter of a RIP network to less than 16 hops. RIP implements the split horizon and hold down mechanisms to prevent incorrect routing information from being propagated.

RIP ensures a higher degree of network stability by quickly rerouting network packets if one of the network connections goes off-line. When RIP is active, users experience little to no service interrupts due to single router, switch, or server outages if there are sufficient network resources available. RIP also has advantages over static routes because the initial configuration is simple and doesn't require you to update the configuration when the topology changes. The disadvantage of RIP is that it requires more network and processing overhead than static routing.

The differences between RIP version 1 (RIPv1) and RIP version 2 (RIPv2) is that RIPv1 does not support Variable Length Subnet Masking (VLSM) and does not support authentication. It uses classful routing protocol and sends routing updates as broadcasts. RIPv2 supports plain text and Message Digest Algorithm 5 (MD5) authentication, route summarization, Classless Inter-domain Routing (CIDR), VLSMs, and send routing updates as multicast traffic.

RIP Next Generation (RIPng) is documented as RFC 2080 which functions the same and offers the same benefits as IPv4 RIP. RIPng supports IPv6 addresses and prefixes and the

use of the all-RIP-devices multicast group address, FF02::9, as the destination address for RIP update messages.

Applicable Devices

- RV160
- RV260

Software Version


1.0.00.13

Configuring RIP

Step 1. Log into the web configuration page of your router.




Router

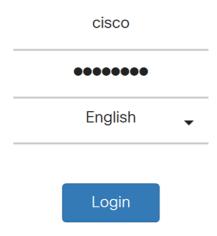

©2018 Cisco Systems, Inc. All Rights Reserved.

Cisco, the Cisco Logo, and the Cisco Systems are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.


Step 2. Navigate to **Routing > RIP**.

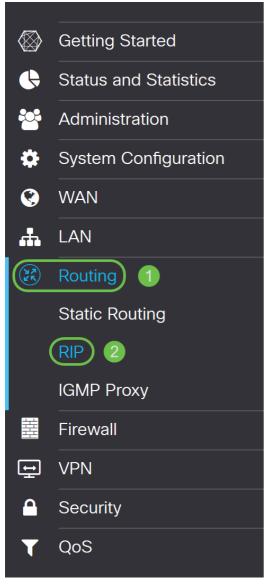

Step 3. To enable RIP, check for IPv4 or for IPv6 or both.

We have checked **both** for this demonstration.

Note: Transmission of RIP advertisement on the WAN interface is automatically disabled if NAT is enabled.

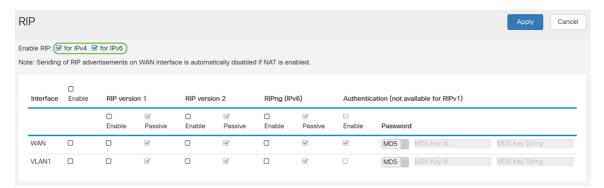

Step 4. Check **Enable** in the corresponding Interface to allow routes from upstream to be received.

For this example, we enabled the WAN interface.

Interface Enable		RIP versi	on 1	RIP version 2		RIPng (IPv6)		Authentic	Authentication (not available for RIPv1)		
		⊟ Enable	✓ Passive	⊟ Enable	✓ Passive	⊟ Enable	✓ Passive	□ Enable	Password		
WAN	Ø	€	€'	∀	€'	∀	€	0	MD5 WD5 Key Id	MD5 Key String	
VLAN1			€		✓	0	€*		MD5 V MD5 Kev Id	MD5 Kev String	

Note: Checking the checkbox above the *Enable* field will automatically check RIP version 1, RIP version 2, RIPng (IPv6), and authentication for all the interfaces. Similarly, unchecking *Enable* unchecks all.

Interface Enable		RIP versi	RIP version 1		RIP version 2		RIPng (IPv6)		Authentication (not available for RIPv1)		
		☑ Enable	✓ Passive	☑ Enable	✓ Passive	☑ Enable	✓ Passive	⊻ Enable	Password		
WAN		€	€	€	€	€	€	€	MD5 V MD5 Key Id	MD5 Key String	
VLAN1			∀		∀		∀		MD5 V MD5 Key Id	MD5 Key String	

Step 5. RIPv1 uses classful routing and does not include subnet information or authentication. Check **Enable** to enable sending and receiving routing information on RIP version 1. Check **Passive** to disable routing information from being sent on RIP version 1.

We checked the **Enable** checkbox for RIPv1 and left **Passive** as checked.

Note: Passive configuration is activated only when enable is checked.

Interface	Enable	RIP version 1		RIP version 2		RIPng (IPv6)		Authentic	cation (not available for RIPv1)	
		♂ Enable	✓ Passive	⊟ Enable	✓ Passive	⊟ Enable	✓ Passive	□ Enable	Password	
WAN			€	€	€			0	MD5 WD5 Key Id	MD5 Key String
VLAN1	8	@ 2	®		€		₹		MD5 MD5 Key Id	MD5 Key String

Step 6. RIPv2 is a classless protocol that uses multicast and has a password authentication. Check **Enable** to enable sending and receiving routing information on RIP version 2. Check **Passive** to disable routing information from being sent on RIP version 2.

For this demonstration, we checked **Enable** for RIPv2 and unchecked **Passive**.

Note: Passive configuration is activated only when enable is checked.

Interface	Interface Enable RIP version 1		RIP version 2		RIPng (IP	RIPng (IPv6)		cation (not available for RIPv1)		
		☑ Enable	✓ Passive	☑ Enable	⊟ Passive	⊟ Enable	✓ Passive	□ Enable	Password	
WAN	∀	€	€		⊌		€	0	MD5 V MD5 Key Id	MD5 Key String
VLAN1	Θ	∀	∀	® 2	0		✓		MD5 MD5 Key Id	MD5 Key String

Step 7. RIPng uses (UDP) to send routing information. This is based on RIP version 2 but used for IPv6 routing. Check **Enable** to enable RIP IPv6 routing. Check **Passive** to disable sending RIPng version.

Here, we checked **Enable** and unchecked **Passive** for *RIPng (IPv6)*.

Note: Passive configuration is activated only when enable is checked.




Step 8. Authentication is a security feature that forces authentication of RIP packets before routes are exchanged with other routers. Check **Enable** to enable authentication so that routes are exchanged only with trusted routers on the network. Then select either **Plain** (Common method of authentication) or **MD5** (Challenge-response authentication mechanism) for the authentication type and enter the password.

In this example, we enabled authentication and selected **MD5** as our authentication type. We entered **10** as our *MD5 Key Id* and **CiscoTest123!** as our *Md5 Key String*.

Note: This is not available for RIPv1.

Interface	nterface Enable RIP version 1		on 1	RIP version 2		RIPng (IPv6)		Authentic	cation (not available for RIPv1)	
		☑ Enable	✓ Passive	☑ Enable	⊟ Passive	⊻ Enable	⊟ Passive	⊟ Enable	Password	
WAN	∀	€	€	∀	€	€	€	0	MD5 V MD5 Key Id	MD5 Key String
VLAN1								©	MD5 V 10	••••••

Step 9. Click Apply.

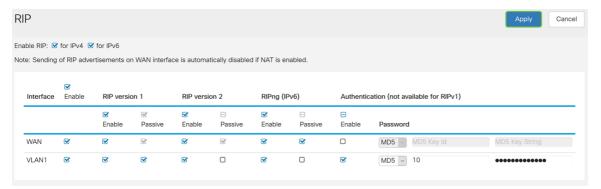


Step 10. At the top of the page, click the **Save** button to navigate to the *Configuration Management* to save your running configuration to the startup configuration. This is to retain the configuration between reboots.



Step 11. In the *Configuration Management*, make sure the *Source* is **Running Configuration** and the *Destination* is **Startup Configuration**. Then press **Apply** to save your running configuration to the startup configuration. All configurations that the router is

currently using are in the Running Configuration file which is volatile and is not retained between reboots. Copying the Running Configuration file to the Startup Configuration file will retain all the configuration between reboots.

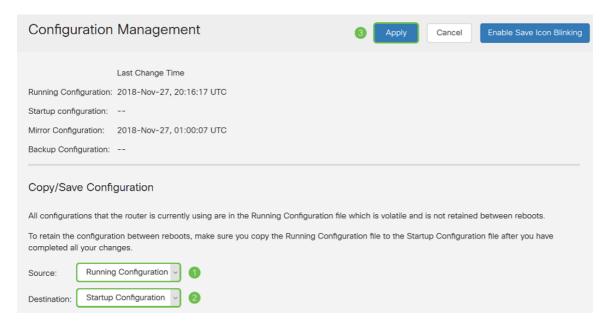

Conclusion

You should now have successfully configured RIP on your device. You can follow the steps below to check your routing table for RIP.

Step 1. Navigate to **Status and Statistics > Routing Table**.