Configure Time and Date on RV320 and RV325 VPN Routers

Objective

This article explains how to configure manual and automatic time and date settings on the RV32x VPN Router Series.

Introduction

Date and time configuration is useful to synchronize data transfer among devices. For the RV32x VPN Router Series, you can set the date and time manually or you can use a Network Time Protocol (NTP) server to automatically update the date and time.

Applicable Devices


- RV320 Dual WAN VPN Router
- RV325 Gigabit Dual WAN VPN Router

Software Version


• v1.1.0.09

Configure Time and Date

Step 1. Log in to the the web configuration Utility and choose **Setup > Time**.

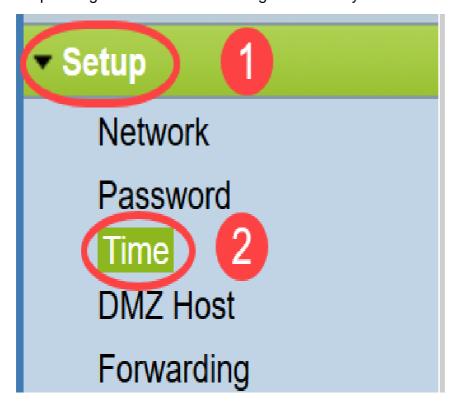

The *Time* page opens:

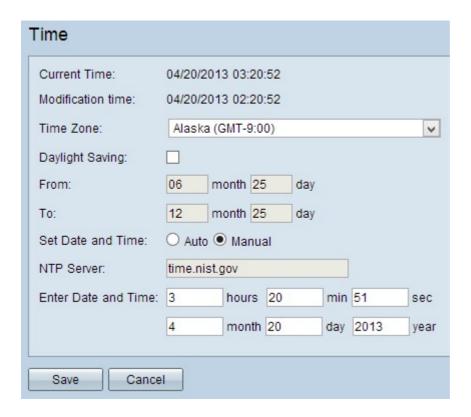


The page displays the following information:

- Current Time This represents the recent date and time.
- Modification Time This represents the date and time when the last modification was done.

Note: For manual and auto time settings, daylight savings and time zones have to be configured. NTP servers are not aware of daylight savings and time zones, so if the location of the router time zone undergoes daylight savings, it is necessary to configure daylight savings on the device.

Step 2. Choose the time zone based on the location of the router from the *Time Zone* drop-down list.

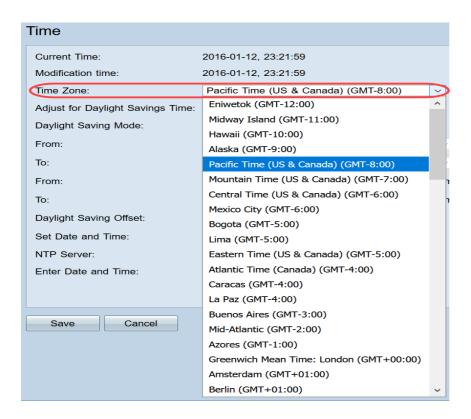


Step 3. (Optional) If the chosen time zone has daylight savings, check the **Daylight Saving** check box. If you check this box, continue to Step 4, otherwise go to <u>Step 10</u>.




Step 4. Choose the Daylight Savings Mode. The options are:


- By date If this is chosen, go to <u>Step 5</u>.
- Recurring If this is chosen, go to <u>Step 7</u>.

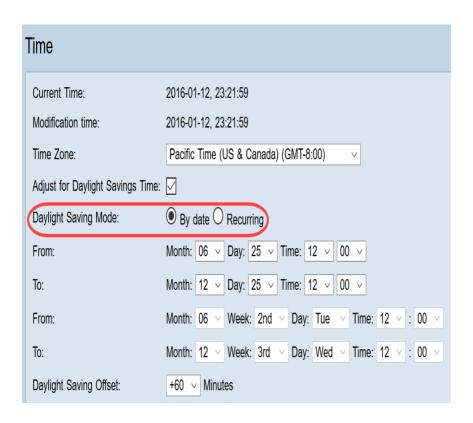


Step 5. In the From field, enter the Month, Day and Time at which the daylight saving begins.

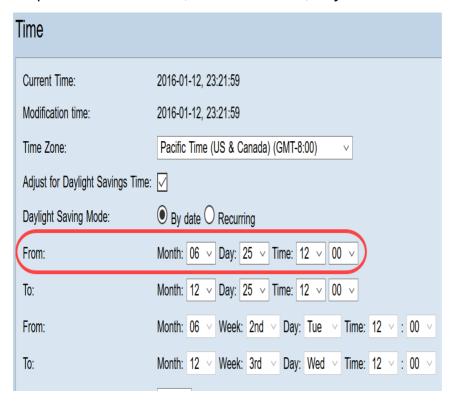


Step 6. In the *To* field, enter the *Month*, *Day* and *Time* at which the daylight saving ends.

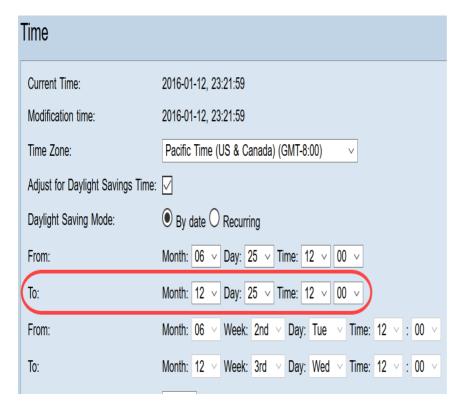


Step 7. In the *From* field, enter the *Month*, *Week*, *Day* and *Time* at which the daylight saving begins.

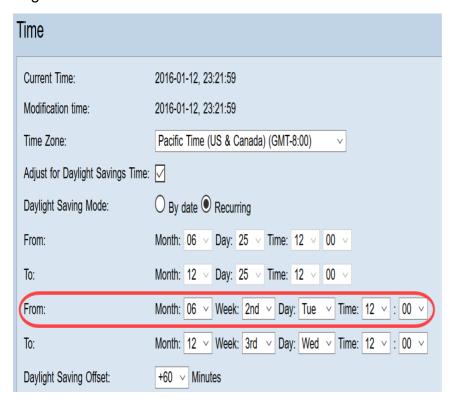

Step 8. In the *To* field, enter the *Month*, *Week*, *Day* and *Time* at which the daylight saving ends.

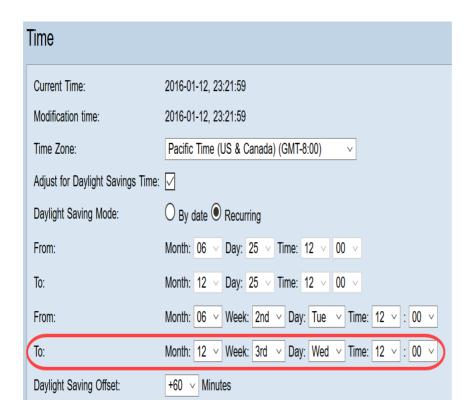


Step 9. Daylight Saving Offset

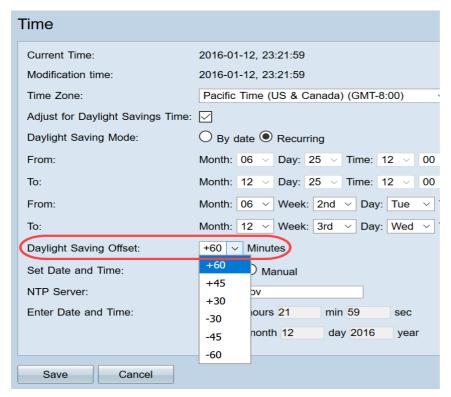


Step 10. Click the desired radio button to choose the method at which the date and time are to be set.


- Auto This automatically sets the date and time according to the date and time of the NTP server.
- Manual This is used for manual configuration of the date and time for the device.

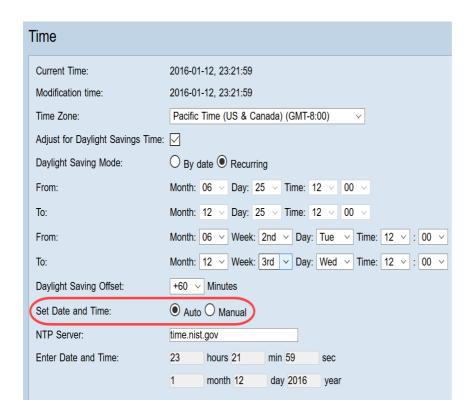


Step 11. If *Auto* is chosen in the previous step, enter the fully qualified *NTP Server* name or IP address.

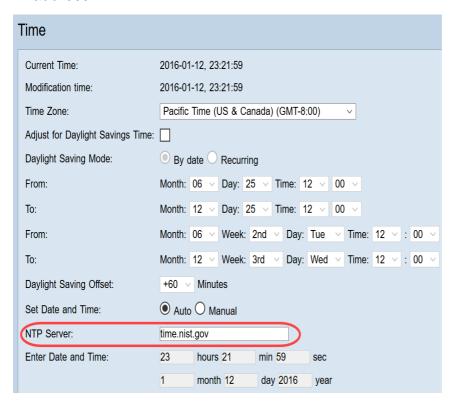

Step 12. If *Manual* is chosen in Step 10, in the *Enter Date and Time* field, enter the desired values in the *hours*, *min* and *sec* fields to set up the time. Do the same for the *month*, *day* and *year* fields.

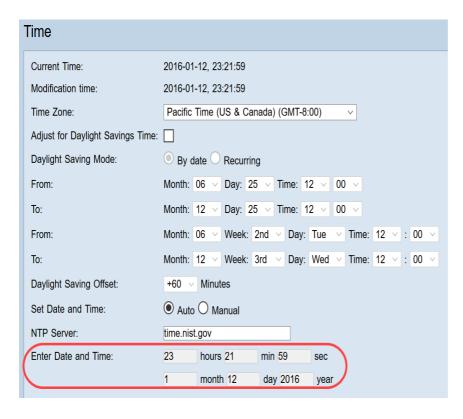

Step 13. Click **Save** to save the settings.

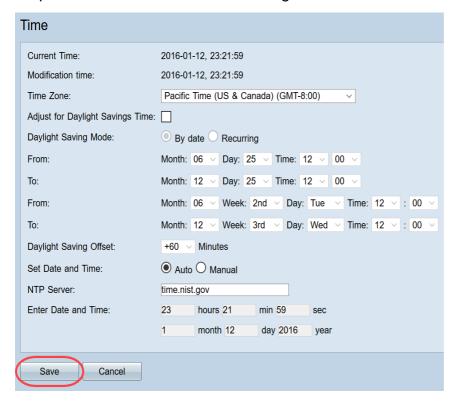

Conclusion

You have now successfully learned the steps to configure the manual and automatic time and date settings on the RV32x VPN router series.

To learn more about RV320 and RV325 routers, check out the following videos:

RV320 and RV325 Router Quick Setup

RV320 and RV325 Router Basic Configuration Tutorial