Configuration of Universal Plug and Play (UPnP) on RV320 and RV325 Routers

Objective

Universal Plug and Play (UPnP) is a set of networking protocols that allow devices to discover each other on the network. The discovered devices can establish network services for data sharing, communications, and entertainment. UPnP can be used to set up public services on your network. When the UPnP function is enabled, your operating system can add or delete entries to the UPnP Forwarding Table.

The objective of this document is to show you how to enable UPnP and manage the UPnP Port Forwarding Table on the RV320 and RV325 Routers.

Applicable Devices

•RV320

•RV325

Software Version

•1.1.1.19

Enable UPnP

Step 1. Log in to the web configuration utility and choose **Firewall > General**. The *General* window opens.

General		
Firewall:	✓ Enable	
SPI(Stateful Packet Inspection):	✓ Enable	
DoS (Denial of Service):	C Enable	
Block WAN Request:	C Enable	
Remote Management:	Enable Port: 443	
Multicast Pass Through:	Enable	
HTTPS:	C Enable	
SSL VPN:	Enable	
SIP ALG:	Enable	
UPnP:	Enable	
Restrict Web Features		
Block:	🔲 Java	
	Cookies	
	ActiveX	
	Access to HTTP Proxy Servers	
Exception:	Enable	
Trusted Domains Table		Items 0-0 of 0 5 🚽 per page
Domain Name		
0 results found!		
Add Edit Delete		Page 1 - of1
Save Cancel		

Step 2. Check the **Enable** checkbox in the UPnP field.

Firewall:	Enable	
SPI(Stateful Packet Inspection):	C Enable	
DoS (Denial of Service):	Enable	
Block WAN Request:	Enable	
Remote Management:	Enable	Port: 443
Multicast Pass Through:	Enable	
HTTPS:	Enable	
SSL VPN:	Enable	
SIP ALG:	Enable	
UPnP:	C Enable	

Step 3. Click Save.

General		
Firewall:	Enable	
SPI(Stateful Packet Inspection):	Enable	
DoS (Denial of Service):	Enable	
Block WAN Request:	V Enable	
Remote Management:	Enable F	Port: 443
Multicast Pass Through:	Enable	
HTTPS:	V Enable	
SSL VPN:	Enable	
SIP ALG:	Enable	
UPnP:	Enable	
Restrict Web Features		
Block:	🗖 Java	
	Cookies	
	ActiveX	
	Access to HTTP Proxy Servers	
Exception:	Enable	
Trusted Domains Table		Items 0-0 of 0 5 🔶 per page
Domain Name		
0 results found!		
Add Edit Delete		Page 1 - of1 🕨
Save Cancel		

Managing UPnP Port Forwarding Table

Step 1. In the web configuration utility sidebar, choose **Setup > Port Address Translation**. The *Port Address Translation* window opens:

ort Address Translation			
Port Address Translation Table			Items 0-0 of 0 5 🗸 per page
Service	Name or IP Address	Status	
0 results found!			
Add Edit Delete S	ervice Management		📕 🚽 Page 1 👻 of 1 🕨 🔛
UPnP Port Forwarding Table			Items 0-0 of 0 5 → per page
Service	Name or IP Address	Status	
0 results found!			
Delete			M Page 1 - of 1 🕨 🗎
Save Cancel			

Note: You can view all devices and applications that are using the UPnP protocol in the *UPnP Port Forwarding Table*. The *Service* field corresponds to the name of the device or service using UPnP as well as the ports opened. The *Name or IP Address* field corresponds to the IP address assigned to the device or service. The *Status* field corresponds to whether UPnP is being used by the device or service.

Step 2. (Optional) To delete an entry, check the checkbox next to the desired service.

Port Address Translation			
Port Address Translation Table			Items 1-1 of 1 5 🚽 per page
Service	Name or IP Address	Status	
0 results found!			
Add Edit Delete Service Mana	Add Edit Delete Service Management		
UPnP Port Forwarding Table			Items 0-0 of 0 5 👻 per page
Service	Name or IP Address	Status	
🕖 DNS[UDP/53~53]	192.168.1.1		
Delete			id A Page 1 ▼ of 1 ▶ ▶
Save Cancel			

Step 3. (Optional) Click **Delete** to delete the service.

Port Address Translation				
Port Address Translation Table	Port Address Translation Table Items 1-1 of 1 5 💗 per p			
Service	Name or IP Address	Status		
0 results found!				
Add Edit Delete Service Management			🙀 🚽 Page 1 🖵 of 1 📦 📦	
UPnP Port Forwarding Table			Items 0-0 of 0 5 👻 per page	
Service	Name or IP Address	Status		
☑ DNS[UDP/53~53]	192.168.1.1			
Delete			🌬 < Page 1 🗸 of 1 🕨 🖿	
Save Cancel				

Step 4. Click Save.

ort Address Translation			
Port Address Translation Table			ltems 0-0 of 0 5 👻 per page
Service	Name or IP Address	Status	
0 results found!			
Add Edit Delete Service Manage	ment		🖌 🔺 Page 1 🗸 of 1 🕨 🕨
UPnP Port Forwarding Table			Items 0-0 of 0 5 👻 per pag
Service	Name or IP Address	Status	
0 results found!			
Delete			📕 ┥ Page 1 🗸 of 1 🕨 🕨
Save Cancel			