

How to Reboot and Reset to Factory Default Settings on the RV130 and RV130W

Objective

The factory default reset erases all configuration settings that have been modified by the user, and restores the device to its original settings. This may be helpful if you lose the password to a device and wish to regain access. Performing a reboot restarts the device with a saved configuration.

The objective of this document is to show you how to reset to factory default settings and how to reboot the RV130 and RV130W.

Applicable Devices

- RV130
- RV130W

Software Version


- v1.0.1.3

Reset to Factory Default Settings


The router can be reset to the factory default settings through either the web configuration utility or the reset button on the back of the router.

Reset with the use of the Web Configuration Utility


Step 1. Log in to the web configuration utility and choose **Administration > Restore Factory Defaults**. The *Restore Factory Defaults* page opens:

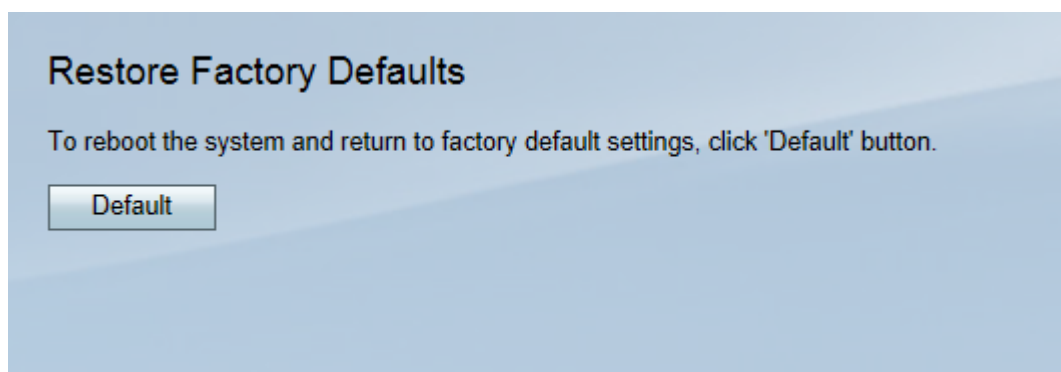

Step 2. To reset the device, click the **Default** button. This will erase all current configurations.

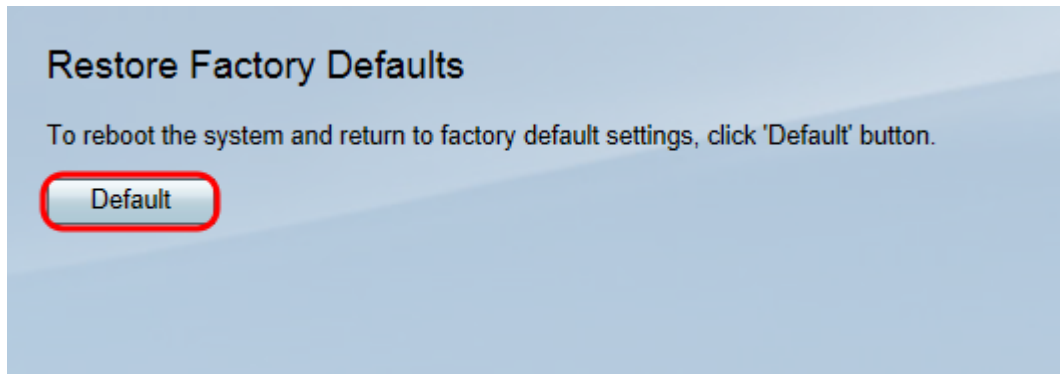

Step 3. A confirmation window appears. Click **Yes** to continue.

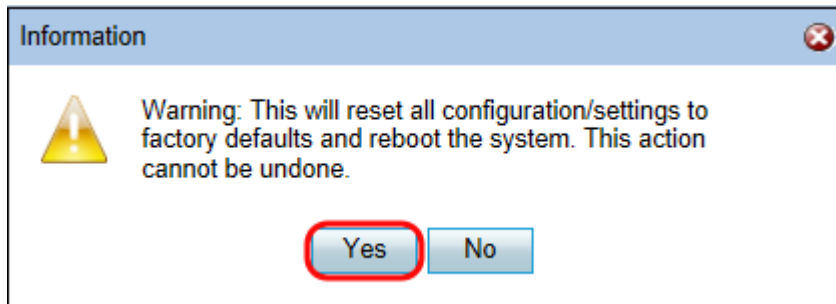

Step 4. After the reboot is completed, login with the default credentials. The default username is *cisco* and the default password is *cisco*.

Hardware Reset

Step 1. Press the Reset button located at the back of the device with a pin for approximately 15 seconds or until the power light on the front of the device starts flashing.



The Router reloads and is set to the default configuration settings.


Step 2. Login with the default credentials. The default username is *cisco* and the default password is *cisco*.

Rebooting the Device


The router can be reset to the factory default settings through either the web configuration utility or the power button on the back of the router.

Reboot with the use of the Web Configuration Utility

Step 1. Log in to the web configuration utility and choose **Administration > Reboot**. The *Reboot* page opens:

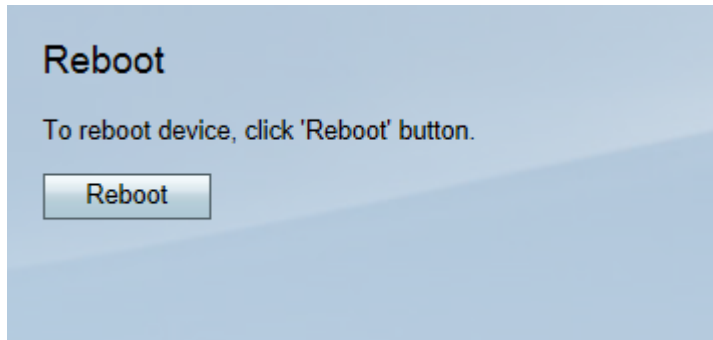

Step 2. Click the **Reboot** button to reboot the device.

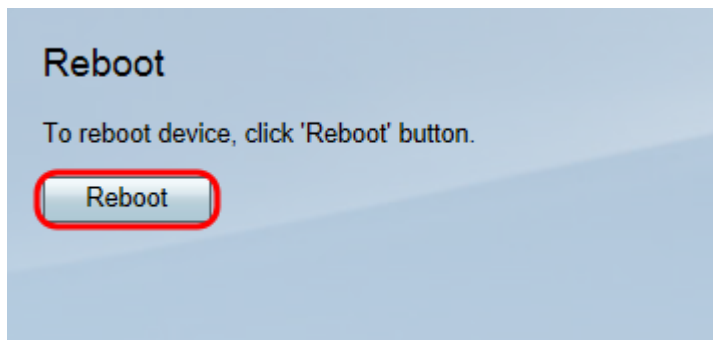

Step 3. After the reboot is completed, login with the saved administration credentials.

Hardware Reboot

Step 1. Press the power button to turn off your device. After 15 seconds have passed, press the power button a second time to power the device back on.



Step 2. After the reboot is completed, login with the saved administration credentials.