

# View the Summary Information for VPN on RV016, RV042, RV042G and RV082 VPN Routers

## Objective

A Virtual Private Network (VPN) is a private network that is used to connect devices of the remote user through the public network virtually to provide security. The *VPN Summary* page displays general information of the VPN tunnels, such as how many VPN tunnels are available, how many are enabled, and how many are used. The page also displays Gateway to Gateway, Client to Gateway, and Group VPN status information.

This article explains the information given in the *VPN Summary* page on a RV0XX Series VPN router.

## Applicable Devices

- RV016
- RV042
- RV042G
- RV082

## Software Version

- v4.2.2.08

## VPN Summary

Step 1. Log in to the Router Configuration Utility and choose **VPN > Summary**. The *Summary* page opens:

## Summary


0 Tunnel(s) Used      50 Tunnel(s) Available

[Details](#)

### Tunnel Status


1 Tunnel(s) Enabled      1 Tunnel(s) Defined

Items 1-1 of 1 Rows per page : 5

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3	<a href="#">Connect</a>	

[Add](#) Page 1 of 1

### Group VPN Status

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1	<a href="#">Detail List</a>	N/A	

[Add](#)

### VPN Client Status

Items 1-2 of 2 Rows per page : 5

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

Page 1 of 1

## Summary

**Summary**

0 Tunnel(s) Used      50 Tunnel(s) Available      [Details](#)

**Tunnel Status**

1 Tunnel(s) Enabled      1 Tunnel(s) Defined

Items 1-1 of 1 Rows per page : 5

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3	<a href="#">Connect</a>	

[Add](#)      Page 1 of 1

**Group VPN Status**

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1	<a href="#">Detail List</a>	N/A	

[Add](#)

**VPN Client Status**

Items 1-2 of 2 Rows per page : 5

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

Page 1 of 1

- Tunnel(s) Used — Displays the number of tunnels which are in use.
- Tunnel(s) Available — Displays the total number of tunnels available for VPN connection.

Step 1. (Optional) If you want to view more information about the tunnel, click **Details**. A new window appears:

<https://192.168.1.1/VpnSetting.htm>      [Refresh](#)      [Close](#)

No.	Name	Status	Phase 2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3

Group Name	Connected Tunnels	Phase 2 Enc/Auth/Grp	Local Group	Remote Client
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1

- No. — The tunnel number which is used for VPN connection.
- Name — The tunnel name which is used for VPN connection.
- Status — The current status of the VPN connection.
  - Connected — The tunnel is currently used for VPN connection.
  - Waiting for Connection — The tunnel is used but waiting for a connection establishment.
- Phase 2 Enc/Auth/Grp — The authentication which is used for the VPN connection.

- Local Group — The IP address and subnet mask of the local group.
- Remote Group — The IP address and subnet mask of the remote group.
- Remote Gateway — The IP address of the remote gateway.

Step 2. (Optional) If you want to refresh the data of the tunnels, click **Refresh**.

Step 3. Click **Close** to close the window.

## VPN Tunnel Status

Summary

0 Tunnel(s) Used      50 Tunnel(s) Available      Details

**Tunnel Status**

1 Tunnel(s) Enabled      1 Tunnel(s) Defined

Items 1-1 of 1 Rows per page : 5

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3	Connect	

Add

Page 1 of 1

---

Group VPN Status

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1	Detail List	N/A	

Add

---

VPN Client Status

Items 1-2 of 2 Rows per page : 5

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

Page 1 of 1

- Tunnel(s) Enabled — Displays the number of tunnels which are enabled for VPN connection. This shows how many tunnels are successfully configured for VPN connection.
- Tunnel(s) Defined — Displays the number of tunnels which are defined for VPN connection. This shows how many tunnels are available for the VPN connection which includes enabled and disabled tunnels

## Connection Table

Displays Gateway to Gateway and Client to Gateway (Single) VPN connections.

**Summary**

0 Tunnel(s) Used    50 Tunnel(s) Available    [Details](#)

---

**Tunnel Status**

1 Tunnel(s) Enabled    1 Tunnel(s) Defined

Items 1-1 of 1 Rows per page : 5

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3	<a href="#">Connect</a>	

[Add](#)    Page 1 of 1

---

**Group VPN Status**

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1	<a href="#">Detail List</a>	N/A	

[Add](#)

---

**VPN Client Status**

Items 1-2 of 2 Rows per page : 5

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

Page 1 of 1

- No. — The tunnel number which is used for VPN connection.
- Name — The tunnel name which is used for VPN connection.
- Status — The current status of the VPN connection.
  - Connected — The tunnel is currently used for VPN connection.
  - Waiting for Connection — The tunnel is used but waiting for a connection establishment.
- Phase 2 Enc/Auth/Grp — The authentication which is used for the VPN connection.
- Local Group — The IP address and subnet mask of the local group.
- Remote Group — The IP address and subnet mask of the remote group.
- Remote Gateway — The IP address of the remote gateway.

Step 1. (Optional) If you are not currently connected to the tunnel, click **Connect** to connect with the VPN tunnel.

Step 2. (Optional) If you are currently connected with the VPN tunnel, click **Disconnect** to discontinue the connection.

Step 3. (Optional) To add a new Gateway to Gateway or Client to Gateway VPN, click **Add**.

Step 4. (Optional) To edit any information of the installed VPN, click **Edit** under the configuration column.

Step 5. (Optional) To delete the VPN, click **Delete**.

**Note:** If you want to know more on how to add a Gateway to Gateway VPN, refer to the article *Configuration of Gateway to Gateway VPN on RV016, RV042, RV042G and RV082 VPN Routers*. If you want to know more on how to add Client to Gateway VPN, refer to the article *Set Up a Remote Access Tunnel (Client to Gateway) for VPN Clients on RV016, RV042, RV042G and RV082 VPN Routers*.

## Group VPN Connection Table

The Group VPN connection table displays general information about Client to Gateway Group VPN.

Summary

0 Tunnel(s) Used    50 Tunnel(s) Available    [Details](#)

---

Tunnel Status

1 Tunnel(s) Enabled    1 Tunnel(s) Defined

Items 1-1 of 1 Rows per page : 5

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1	tunnel_1	waiting for connection	DES/MD5/1	192.168.1.0 255.255.255.0	N/A	192.168.1.3	<a href="#">Connect</a>	

[Add](#)    Page 1 of 1

---

Group VPN Status

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
tunnel_2	0	DES/MD5/1	192.168.1.0 255.255.255.0	domain1	<a href="#">Detail List</a>	N/A	

[Add](#)

---

VPN Client Status

Items 1-2 of 2 Rows per page : 5

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

Page 1 of 1

- Group Name — The group name which is used for the VPN connection.
- Connected Tunnels — The number of users who are logged in to the VPN tunnel.
- Phase 2 Enc/Auth/Grp — The authentication which is used for the VPN connection.
- Local Group — The IP address and subnet mask of the local group.
- Remote Client — The domain name of the remote client.
- Remote Client Status — The detail information of the VPN group, IP address, and connection time in seconds for the VPN connection.
- Tunnel Test — The tunnel status whether the VPN tunnel is used for VPN connection or not.

Step 1. (Optional) If you are not currently connected to the tunnel, click **Connect** to connect with the VPN tunnel.

Step 2. (Optional) If you are currently connected with the VPN tunnel, click **Disconnect** to discontinue the connection.

Step 3. (Optional) To add a new Group VPN, click **Add**.

Step 4. (Optional) To edit any information of the installed VPN, click **Edit**.

Step 5. (Optional) To delete the VPN, click **Delete**.

## VPN Clients Status

The VPN Client Status table displays detailed information about the VPN client.

The screenshot displays the VPN Client Status interface. It is divided into four main sections:

- Summary:** Shows 0 Tunnel(s) Used and 50 Tunnel(s) Available. A Details button is present.
- Tunnel Status:** Shows 1 Tunnel(s) Enabled and 1 Tunnel(s) Defined. It contains a table with one row for 'tunnel\_1' with status 'waiting for connection'. A 'Connect' button is next to it.
- Group VPN Status:** Shows a table with one row for 'tunnel\_2' with 0 Connected Tunnels and Remote Client 'domain1'. A 'Detail List' link is provided.
- VPN Client Status:** This section is highlighted with a red border. It shows a table with two rows for 'user\_1' and 'user\_2', both with status 'Offline'. A 'Disconnect' button is visible for each row.

No.	Username	Status	Start Time	End Time	Duration	Disconnect
1	user_1	Offline	---	---	---	<input type="checkbox"/>
2	user_2	Offline	---	---	---	<input type="checkbox"/>

- No. — The identification number of the VPN client.
- Username — The unique name used to identify the VPN user.
- Status — The current status of the VPN connection for the client.
  - Offline — The tunnel is not used.
  - Connected — The tunnel is currently used for VPN connection.
  - Waiting for Connection — The tunnel is used but waiting for a connection establishment.

- Start Time — The start time when the VPN client established the VPN connection.
- End Time — The end time when the VPN client stops the VPN connection.
- Duration — The active time duration for the VPN connection.

Step 1. (Optional) If you want to discontinue the connection, check the check box under the Disconnect to specify the specific connection and then click **Disconnect**.