



Client Limit

- [Information About Client Limit, on page 1](#)
- [Configuring Client Limit \(GUI\), on page 1](#)
- [Configuring Client Limit \(CLI\), on page 1](#)

Information About Client Limit

This feature enforces a limit to the number of clients that can be associated with an access point. Further, you can configure the number of clients that can be associated with each access point radio.

Configuring Client Limit (GUI)

Procedure

- Step 1** Choose Configuration > Tags & Profiles > WLANs.
- Step 2** Choose a WLAN.
- Step 3** Go to the Advanced tab.
- Step 4** Under the Max Client Connections settings, enter the client limit **Per WLAN**, **Per AP Per WLAN** and **Per AP Radio Per WLAN**.
- Step 5** Click **Update & Apply to Device**.
-

Configuring Client Limit (CLI)

Procedure

	Command or Action	Purpose
Step 1	enable Example:	Enters privileged EXEC mode.

	Command or Action	Purpose
	Device# enable	
Step 2	configure terminal Example: Device # configure terminal	Enters global configuration mode.
Step 3	wlan wlan-name Example: Device (config)# wlan ramban	Specifies the WLAN name.
Step 4	client association limit maximum-clients-per-WLAN Example: Device (config-wlan)# client association limit 110	Configures the maximum limit of clients that can be associated to the given WLAN. Note Depending on the primary AP in the Cisco Embedded Wireless Controller network, the maximum number of clients supported varies. For more information about the client count limit per WLAN in a Cisco Embedded Wireless Controller network, see Table 1: Scale Supported in a Cisco Embedded Wireless Controller Network, on page 2
		Table 1: Scale Supported in a Cisco Embedded Wireless Controller Network
Step 5	client association limit ap maximum-clients-per-AP-per-WLAN(0—400) Example: Device (config-wlan) # client association limit ap 120	Configures the maximum limit of clients that can be associated to an AP in the WLAN.
Step 6	client association limit radio maximum-clients-per-AP-radio-per-WLAN(0—200) Example: Device (config-wlan) # client association limit radio 100	Configures the maximum limit of clients that can be associated to an AP radio in the WLAN.
Step 7	end Example: Device(config)# end	Returns to privileged EXEC mode. Alternatively, you can also press Ctrl-Z to exit global configuration mode.
Step 8	show wlan id wlan-id Example: Device# show wlan id 2	Displays the current configuration of the WLAN and the corresponding client association limits.