

Configuring InterVLAN Routing Using an Internal Router (Layer 3 Card) on Catalyst 5500/5000 and 6500/6000 Switches That Run CatOS System Software

Document ID: 10589

Introduction

Prerequisites

- Requirements
- Components Used
- Conventions

Network Diagram

General Configuration Tasks

Configure InterVLAN Routing

- Common Issue: VLAN Interface Shows down/down
- Verify the Configuration

Appendix

- Supervisor Engine Module Configuration
- RSM Configuration

NetPro Discussion Forums – Featured Conversations

Related Information

Introduction

This document provides basic information on how to configure interVLAN routing on a Catalyst switch (running Catalyst OS [CatOS] system software) using an internal router (Layer 3 [L3] card/module). The term internal router refers to these L3 cards/modules on the Catalyst 5500/5000 and 6500/6000 switches:

- Multilayer Switch Feature Card (MSFC) on the Catalyst 6500/6000 series switches
- MSFC2 on the Catalyst 6500/6000 series switches
- Route Switch Feature Card (RSFC) on the Catalyst 5500/5000 series switches
- Route Switch Module (RSM) on the Catalyst 5500/5000 series switches

Any Catalyst 5500/5000 or Catalyst 6500/6000 series switch running CatOS with a supported L3 card could have been used in this document to obtain the same results.

Prerequisites

Requirements

Readers of this document should have knowledge of these topics:

Note: This document does not discuss how to configure interVLAN routing on Catalyst 4500/4000 switches using the L3 services module (WS-X4232-L3). For those details, refer to these documents:

- *Configuring the Module for InterVLAN Routing* section of Installation and Configuration Note for the Catalyst 4000 Layer 3 Services Module
- Configuration and Overview of the Router Module for the Catalyst 4000 Family (WS-X4232-L3)

Components Used

The information in this document is based on these software and hardware versions:

- Catalyst 5500 switch with an RSM
- Supervisor Engine Module (WS-X5530) that runs CatOS 6.1(1) software
- RSM (WS-X5302) that runs Cisco IOS® Software Release 12.0(5)W5(12)


The configurations on all devices were cleared with the **clear config all** and **write erase** commands to ensure that they had a default configuration.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

For more information on document conventions, refer to the Cisco Technical Tips Conventions.

Network Diagram

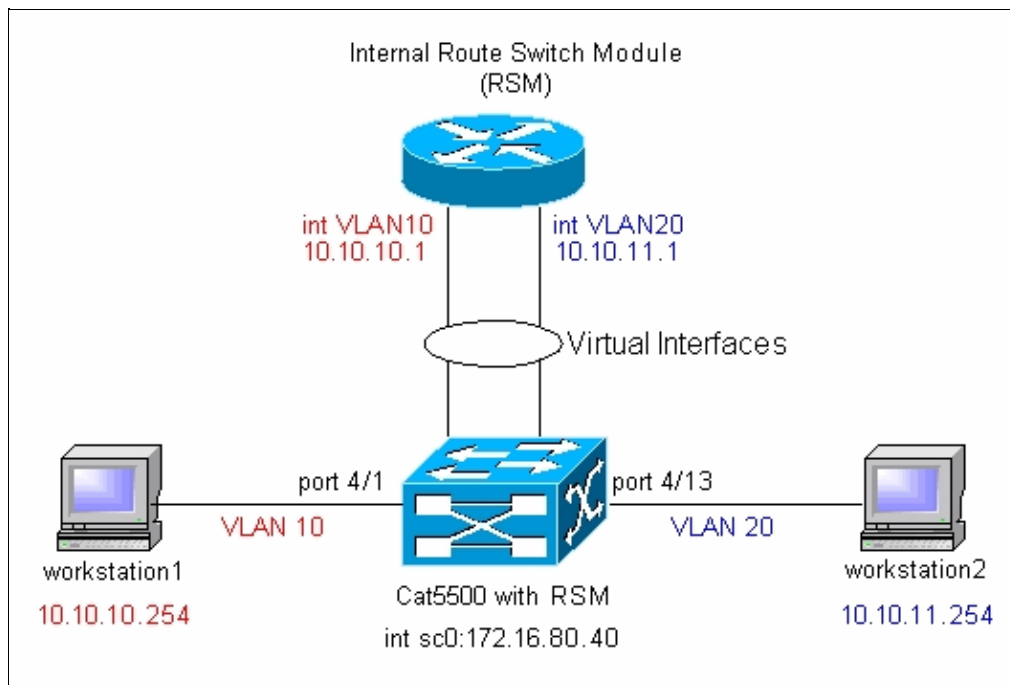

Note: Do not connect workstation1 and workstation2 unless you are asked to do so in this document. This document points out a common problem that customers report when they configure interVLAN routing or multiple VLAN interfaces on the router module. See the Common Issue: VLAN Interface Shows down/down section for details.

General Configuration Tasks

This section provides a summary of the main configuration tasks that are performed in this document:

- Configure the switch for management
- Create VLANs on the switch

- Add ports to the configured VLANs
- Configure the internal router for management
- Configure interVLAN routing
- Verify the configuration

Configure InterVLAN Routing

Complete these steps to configure interVLAN routing on the Catalyst switch:

1. Access the console port on the Supervisor Engine.

If you have difficulty with access to the console, refer to these documents:

- ◆ For Catalyst 5500/5000 series switches [Connecting a Terminal to the Console Port on Catalyst Switches](#).
- ◆ For Catalyst 6500/6000 series switches [Connecting a Terminal to the Console Port on Catalyst Switches](#) and [Connecting a Modem to the Console Port on Catalyst Switches](#)

2. Configure the switch for basic management.

Use this set of commands to configure the Catalyst switch for management:

```
Console> enable) set system name Cat5500

!--- Configure the system name.

System name set.
Cat5500> (enable) set interface sc0 172.16.80.40 255.255.255.0

!--- Configure the IP address.

Interface sc0 IP address and netmask set.
Cat5500> (enable) set ip route 0.0.0.0 172.16.80.1

!--- Configure the default gateway.
```

Note: If you want to manage a switch that is on the other side of a router, you need to configure a default gateway on the switch, since the switch does not participate in IP routing and therefore has no knowledge of the L3 topology of the network. You can also use the **set ip route default 172.16.80.1** command to configure the default gateway instead of using the **set ip route 0.0.0.0 172.16.80.1** command.

3. Configure the required number of VLANs on the switch.

According to the Network Diagram, you need to configure two new VLANs (VLAN 10 and VLAN 20) on the switch.

Before you can create a new VLAN, the switch must be in VLAN Trunk Protocol (VTP) server mode or VTP transparent mode. If the switch is a VTP server, you must define a VTP domain name before you can add any VLANs. This has to be defined regardless of the number of switches in the network (one or many), and regardless of whether you are using VTP to propagate VLANs to other switches in the network. For more information on VTP, refer to this document:

- ◆ [Understanding and Configuring VLAN Trunk Protocol \(VTP\)](#)

The default VTP configuration on the switch is:

```

Cat5500> (enable) show vtp domain
Domain Name                               Domain Index VTP Version Local Mode Password
-----
                                         1             2             server      -

Vlan-count Max-vlan-storage Config Revision Notifications
-----
5           1023             0             disabled

Last Updater V2 Mode Pruning PruneEligible on Vlans
-----
0.0.0.0      disabled disabled 2-1000

```

Use the **set vtp** command to set the domain name and mode:

```

Cat5500> (enable) set vtp domain mode transparent
VTP domain modified

```

!--- Set the VTP mode.

```

Cat5500> (enable) set vtp domain cisco
VTP domain cisco modified

```

!--- Set the VTP domain name.

Note: In the example, the VTP mode is set to be transparent. Depending on your network, set the VTP mode accordingly. The transparent mode was chosen to avoid being affected by other switches, and to avoid affecting the other switches in the lab.

4. Verify the VTP configuration by issuing the **show vtp domain** command:

```

Cat5500> (enable) show vtp domain
Domain Name                               Domain Index VTP Version Local Mode Password
-----
cisco                                   1             2             Transparent -

Vlan-count Max-vlan-storage Config Revision Notifications
-----
5           1023             0             disabled

Last Updater V2 Mode Pruning PruneEligible on Vlans
-----
0.0.0.0      disabled disabled 2-1000

```

5. Create VLANs on the switch.

By default, there is only one VLAN on the switch, named VLAN 1. VLAN 1 is also called the default VLAN. All ports belong to this VLAN by default. This VLAN cannot be renamed or deleted.

To create VLANs, use the **set vlan** command:

```

Cat5500> (enable) set vlan
Usage: set vlan <mod/port>
      (An example of mod/port is 1/1,2/1-12,3/1-2,4/1-12)
      set vlan [name ] [type ] [state ]
                [said ] [mtu ] [ring ]
                [decring ]
                [bridge ] [parent ]
                [mode ] [stp ]
                [translation ] [backupcrf <off/on>]
                [aremaxhop ] [stemaxhop ]
      (name = 1..32 characters, state = (active, suspend)
      type = (ethernet, fddi, fddinet, trcrf, trbrf)
      said = 1..4294967294, mtu = 576..18190

```

```

hex_ring_number = 0x1..0xffff, decimal_ring_number = 1..4095
bridge_number = 0x1..0xf, parent = 2..1005, mode = (srt, srb)
stp = (ieee, ibm, auto), translation = 1..1005
hopcount = 1..13)

```

Set vlan commands:

```

-----
set vlan                Set vlan information
set vlan mapping       Map an 802.1Q vlan to an Ethernet vlan
set vlan              Vlan number(s)

```

Cat5500> (enable) **set vlan 10**

!--- Create VLAN 10.

VTP advertisements transmitting temporarily stopped
and will resume after the command finishes.

Vlan 10 configuration successful

Cat5500> (enable) **set vlan 20**

!--- Create VLAN 20.

VTP advertisements transmitting temporarily stopped
and will resume after the command finishes.

Vlan 20 configuration successful

Cat5500> (enable) **set vlan 10 4/1-12**

!--- Add ports to VLAN 10.

VLAN 10 modified.

VLAN 1 modified.

VLAN Mod/Ports

```

-----
10    4/1-12

```

Cat5500> (enable) **set vlan 20 4/13-20**

!--- Add ports to VLAN 20.

VLAN 20 modified.

VLAN 1 modified.

VLAN Mod/Ports

```

-----
20    4/13-20

```

Cat5500> (enable) **show vlan**

VLAN	Name	Status	IfIndex	Mod/Ports, Vlans
1	default	active	443	1/1-2 3/1-3 4/21-24 11/1-48 12/1-2
10	VLAN0010	active	448	4/1-12
20	VLAN0020	active	449	4/13-20
1002	fddi-default	active	444	
1003	token-ring-default	active	447	
1004	fdnet-default	active	445	
1005	trnet-default	active	446	

VLAN	Type	SAID	MTU	Parent	RingNo	BrdgNo	Stp	BrdgMode	Trans1	Trans2
1	enet	100001	1500	-	-	-	-	-	0	0
10	enet	100010	1500	-	-	-	-	-	0	0
20	enet	100020	1500	-	-	-	-	-	0	0
1002	fddi	101002	1500	-	-	-	-	-	0	0
1003	trcrf	101003	1500	-	-	-	-	-	0	0
1004	fdnet	101004	1500	-	-	-	-	-	0	0

```
1005 trbrf 101005      1500 - - -      ibm -      0      0
```

```
!--- Output suppressed.
```

6. Configure Spanning Tree Protocol (STP) PortFast on those ports that connect to the workstations or servers.

Issue the following command to enable the STP PortFast feature:

```
Cat5500> (enable) set spantree portfast 4/1-20 enable
```

```
Warning: Spantree port fast start should only be enabled on ports connected to a
single host. Connecting
hubs, concentrators, switches, bridges, etc. to a fast start port can cause
temporary spanning tree loops.
Use with caution.
```

```
Spantree ports 4/1-20 fast start enabled.
```

Note: This step is optional, but it is good practice to enable STP PortFast on the ports that connect to regular workstations or servers. For details on why to enable PortFast, refer to this document:

- ◆ Using PortFast and Other Commands to Fix Workstation Startup Connectivity Delays

7. Configure a VLAN interface on the router module for each of the VLANs between which you want to route traffic.

Access the router module by issuing the **session module#** command, where *module#* is the slot at which the router module is located. In the example, the RSM is located in slot 7, as shown here:

```
Cat5500> (enable) show module 7
Mod Slot Ports Module-Type          Model          Sub Status
-----
7 7 1 Route Switch WS-X5302 no ok

Mod Module-Name      Serial-Num
-----
7                    00006591991

Mod MAC-Address(es)      Hw   Fw   Sw
-----
7 00-e0-1e-91-b5-08 to 00-e0-1e-91-b5-09 4.5  20.20 12.0(5)W5(12)
Cat5500> (enable) session 7
Trying Router-7...
Connected to Router-7.
Escape character is '^]'.

Router>
```

8. Configure the enable and Telnet password on the router module.

Again, this step is optional, but the Telnet password is required if you try to access the router module directly with Telnet and not through the Supervisor Engine. Use this set of commands to configure the passwords on the router module:

```
Router> enable
Router# configure terminal
```

```
!--- Enter the global configuration mode.
```

```
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# enable password cisco
```

```
!--- Set enable password.
```

```
Router(config)# line vty 0 4  
Router(config-line)# login  
Router(config-line)# password cisco
```

```
!--- Set Telnet password.
```

```
Router(config-line)# end  
Router#  
05:22:40: %SYS-5-CONFIG_I: Configured from console by vty0 (127.0.0.2)  
Router#
```

9. Create two VLAN interfaces, assign IP addresses to those VLAN interfaces, and enable routing on the module.

Note: This step is key for configuring interVLAN routing.

Note: On the router module, the VLAN interfaces are virtual interfaces, but they are configured as physical interfaces.

Issue this set of commands from the privileged exec mode:

```
Router# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.
```

```
!--- Configure interface VLAN 1 and assign it an IP address.  
!--- An interface VLAN 1 is configured for management purposes only  
!--- so that you can establish a Telnet session or ping the switch  
!--- from the workstation.
```

```
Router(config)# interface vlan 1  
Router(config-if)# no shutdown  
Router(config-if)# ip address 172.16.80.79 255.255.255.0  
Router(config-if)# exit
```

```
!--- Configure interface VLAN 10 and assign it an IP address.
```

```
Router(config)# interface vlan 10  
Router(config-if)# no shutdown  
Router(config-if)# ip address 10.10.10.1 255.255.255.0  
Router(config-if)# exit
```

```
!--- Configure interface VLAN 20 and assign it an IP address.
```

```
Router(config)# interface vlan 20  
Router(config-if)# ip address 10.10.11.1 255.255.255.0  
Router(config-if)# no shutdown  
Router(config)# ip routing
```

```
!--- Enable routing protocol on the module.  
!--- The following two commands are optional;  
!--- they are only used if you have multiple routers in your network.  
!--- Depending on your network, you may want to use a different routing protocol.
```

```
Router(config)# router rip  
Router(config-router)# network 10.0.0.0  
Router(config-router)# network 172.16.0.0
```

```
Router(config-router)# Ctrl-Z  
Router#  
07:05:17: %SYS-5-CONFIG_I: Configured from console by vty0 (127.0.0.2)  
Router# write memory
```

```
!--- Save the configuration.
```

```
Building configuration...  
Router#
```

At this point, according to the Network Diagram, the interVLAN configuration is complete.

10. Return to the Supervisor Engine module by issuing the **exit** command at the Router# prompt:

```
Router# exit  
Cat5500> (enable
```

Common Issue: VLAN Interface Shows down/down

This section explains a common issue that customers encounter when they try to configure VLAN interfaces on the Catalyst 5500/5000 or Catalyst 6500/6000 series router modules (RSM, MSFC, RSFC).

Customers report that they are not able to ping some or all of the configured VLAN interfaces on the router module. Also, their status is not displayed as up/up when they issue the **show interface vlan** *vlan#* command. They have made sure that they have configured **no shutdown** on those interfaces. The only VLAN interface that shows as up/up is VLAN 1.

In this situation, if some or all of your VLAN interfaces are not showing up/up, the first thing you should check is whether there are any active ports on the switch for the VLANs in question.

Important Note: A VLAN interface on the router module is only up/up if there is at least one port assigned to that VLAN on the switch (other than the router interface), and that port is connected. A port configured as a trunk also satisfies this VLAN up/up requirement. If this condition is not met, the router interface does not come up.

In the Network Diagram section, you are warned not to connect the workstations to the Catalyst 5500 switch. At this point, if you issue this set of commands, you notice that only interface VLAN 1 is showing up/up, and the other two are down:

```
Router# show ip interface brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	172.16.80.79	YES	manual	up	up
Vlan10	10.10.10.1	YES	manual	down	down
Vlan20	10.10.11.1	YES	manual	down	down

```
Router# show interface vlan 1
```

```
Vlan1 is up, line protocol is up
```

```
Hardware is Cat5k Virtual Ethernet, address is 0010.f6a9.9800 (bia 0010.f6a9.9800)  
Internet address is 172.16.80.79/24  
MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255  
Encapsulation ARPA, loopback not set  
ARP type: ARPA, ARP Timeout 04:00:00  
Last input 00:00:00, output 00:00:02, output hang never  
Last clearing of "show interface" counters never  
Queueing strategy: fifo  
Output queue 0/40, 0 drops; input queue 0/75, 0 drops  
5 minute input rate 0 bits/sec, 1 packets/sec  
5 minute output rate 0 bits/sec, 0 packets/sec
```

```
!--- Output suppressed.
```

```
Router# show interface vlan 10
```

```
Vlan10 is down, line protocol is down
```

```
Hardware is Cat5k Virtual Ethernet, address is 0010.f6a9.9800 (bia 0010.f6a9.9800)  
Internet address is 10.10.10.1/24
```

```

MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation ARPA, loopback not set
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:01, output 00:25:48, output hang never
Last clearing of "show interface" counters never
Queueing strategy: fifo
Output queue 0/40, 0 drops; input queue 0/75, 0 drops
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
!--- Output suppressed.

Router# show interface vlan 20
Vlan20 is down, line protocol is down
Hardware is Cat5k Virtual Ethernet, address is 0010.f6a9.9800 (bia 0010.f6a9.9800)
Internet address is 10.10.11.1/24
MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation ARPA, loopback not set
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:01, output 00:01:04, output hang never
Last clearing of "show interface" counters never
Queueing strategy: fifo
Output queue 0/40, 0 drops; input queue 0/75, 0 drops
5 minute input rate 2000 bits/sec, 2 packets/sec
5 minute output rate 1000 bits/sec, 2 packets/sec
!--- Output suppressed.

Router#

```

Interface VLAN 1 is up/up, although on the switch, you do not have any connected and active ports in VLAN 1. You do have an active port/interface in VLAN 1, the sc0 interface on the Supervisor Module. By default, the sc0 interface is a member of VLAN 1. Issue this command on the switch (Supervisor Engine) to check the sc0 interface configuration:

```

Cat5500> (enable) show interface
s10: flags=51 <UP ,POINTOPOINT ,RUNNING>
      slip 0.0.0.0 dest 0.0.0.0
sc0: flags=63 <UP ,BROADCAST ,RUNNING>
      vlan 1 inet 172.16.80.40 netmask 255.255.255.0 broadcast 172.16.80.255
Cat5500> (enable)

```

At this point, connect workstation1 on port 4/1 and workstation2 on port 4/13. Issue the **show port 4/1** and **show port 4/13** command on the switch to be sure that these ports show the status as connected:

```

Cat5500> (enable) show port 4/1
Port Name                Status      Vlan      Level Duplex Speed Type
-----
4/1                      connected  10        normal a-half a-10  10/100BaseTX
!--- Output suppressed.

Cat5500> (enable) show port 4/13
Port Name                Status      Vlan      Level Duplex Speed Type
-----
4/13                    connected  20        normal a-full a-100 10/100BaseTX
!--- Output suppressed.

Cat5500> (enable)

```

Now, log in to the router module and check the status of interfaces VLAN 10 and VLAN 20. You should see them as up/up. Issue this set of commands to check the status of the VLAN interfaces on the router module:

```
Cat5500> (enable) session 7
Trying Router-7...
Connected to Router-7.
Escape character is '^']'.
```

User Access Verification

Password:

!--- Enter the password; in this case, it is cisco.

Router> **enable**

Password:

!--- Enter the password; in this case, it is cisco.

Router# **show ip interface brief**

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	172.16.80.79	YES	manual	up	up
Vlan10	10.10.10.1	YES	manual	up	up
Vlan20	10.10.11.1	YES	manual	up	up

Router# **show interface vlan 10**

Vlan10 is up, line protocol is up

```
Hardware is Cat5k Virtual Ethernet, address is 0010.f6a9.9800 (bia 0010.f6a9.9800)
Internet address is 10.10.10.1/24
MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation ARPA, loopback not set
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:01, output 00:46:14, output hang never
Last clearing of "show interface" counters never
Queueing strategy: fifo
Output queue 0/40, 0 drops; input queue 0/75, 0 drops
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
```

!--- Output suppressed.

Router# **show interface vlan 20**

Vlan20 is up, line protocol is up

```
Hardware is Cat5k Virtual Ethernet, address is 0010.f6a9.9800 (bia 0010.f6a9.9800)
Internet address is 10.10.11.1/24
MTU 1500 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation ARPA, loopback not set
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:00, output 00:00:56, output hang never
Last clearing of "show interface" counters never
Queueing strategy: fifo
Output queue 0/40, 0 drops; input queue 0/75, 0 drops
5 minute input rate 2000 bits/sec, 5 packets/sec
5 minute output rate 2000 bits/sec, 2 packets/sec
```

!--- Output suppressed.

Router# **exit**

Cat5500> (enable)

Verify the Configuration

Several ping tests can be performed to verify the configuration explained in this document. In this section, you use workstation2 to ping workstation1, the sc0 interface on the switch, and the VLAN interfaces on the router module.

Note: Be sure that you have set the default gateways on your workstations to be the VLAN interfaces on the router module. According to the Network Diagram, the default gateway on workstation1 is set as **10.10.10.1**, and as **10.10.11.1** for workstation2.

Test 1: Ping from Workstation2 to Workstation1

```
C:\> ipconfig

!--- This command is used to check the IP configuration on the
!--- Windows 2000 workstation. Use the appropriate commands on the workstations
!--- that you use.

Windows 2000 IP Configuration

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix  . :
    IP Address. . . . . : 10.10.11.254
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.10.11.1

C:\> ping 10.10.10.254

Pinging 10.10.10.254 with 32 bytes of data:

Reply from 10.10.10.254: bytes=32 time=10ms TTL=31
Reply from 10.10.10.254: bytes=32 time<10ms TTL=31
Reply from 10.10.10.254: bytes=32 time<10ms TTL=31
Reply from 10.10.10.254: bytes=32 time<10ms TTL=31

Ping statistics for 10.10.10.254:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 10ms, Average = 2ms
```

Test 2: Ping from Workstation2 to the sc0 Interface on the Supervisor Engine

```
C:\> ping 172.16.80.40

Pinging 172.16.80.40 with 32 bytes of data:

Reply from 172.16.80.40: bytes=32 time<10ms TTL=59
Reply from 172.16.80.40: bytes=32 time<10ms TTL=59
Reply from 172.16.80.40: bytes=32 time<10ms TTL=59
Reply from 172.16.80.40: bytes=32 time<10ms TTL=59

Ping statistics for 172.16.80.40:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Test 3: Ping from Workstation2 to Interface VLAN 1 on the Router Module

```
C:\> ping 172.16.80.79

Pinging 172.16.80.79 with 32 bytes of data:

Reply from 172.16.80.79: bytes=32 time<10ms TTL=255
Reply from 172.16.80.79: bytes=32 time<10ms TTL=255
Reply from 172.16.80.79: bytes=32 time<10ms TTL=255
Reply from 172.16.80.79: bytes=32 time<10ms TTL=255

Ping statistics for 172.16.80.79:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
```

Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms

Test 4: Ping from Workstation2 to Interface VLAN 10 on the Router Module

```
C:\> ping 10.10.10.1
```

Pinging 10.10.10.1 with 32 bytes of data:

```
Reply from 10.10.10.1: bytes=32 time<10ms TTL=255
Reply from 10.10.10.1: bytes=32 time<10ms TTL=255
Reply from 10.10.10.1: bytes=32 time<10ms TTL=255
Reply from 10.10.10.1: bytes=32 time<10ms TTL=255
```

Ping statistics for 10.10.10.1:

```
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Test 5: Ping from Workstation2 to Interface VLAN 20 on the Router Module

```
C:\> ping 10.10.11.1
```

Pinging 10.10.11.1 with 32 bytes of data:

```
Reply from 10.10.11.1: bytes=32 time<10ms TTL=255
Reply from 10.10.11.1: bytes=32 time<10ms TTL=255
Reply from 10.10.11.1: bytes=32 time<10ms TTL=255
Reply from 10.10.11.1: bytes=32 time<10ms TTL=255
```

Ping statistics for 10.10.11.1:

```
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Appendix

Supervisor Engine Module Configuration

```
Cat5500> (enable) show config
This command shows non-default configurations only.
Use show config all to show both default and non-default configurations.
...
```

```
begin
!
# ***** NON-DEFAULT CONFIGURATION *****
!
!
#time: Tue Apr 10 2001, 09:09:54
!
#version 6.1(1)
!
set option fddi-user-pri enabled
set password $2$lx7B$WipkVnLnbYIfRBSqD2SN9.
set enablepass $2$6/eK$I3lDb2nnP7Fc9JKF3XwRW/
set prompt Cat5500>
!
#error-detection
set error-detection port-counter enable
!
#system
set system name Cat5500
```

```

!
#frame distribution method
set port channel all distribution mac both
!
#vtp
set vtp domain cisco
set vtp mode transparent
set vlan 1 name default type ethernet mtu 1500 said 100001 state active
set vlan 1002 name fddi-default type fddi mtu 1500 said 101002 state active
set vlan 1004 name fddinet-default type fddinet mtu 1500 said 101004 state active stp ieee
set vlan 1005 name trnet-default type trbrf mtu 1500 said 101005 state active stp ibm
set vlan 10,20
set vlan 1003 name token-ring-default type trcrf mtu 1500 said 101003 state active
mode srb aremaxhop 7 stemaxhop 7 backupcrf off
!
#ip
set interface sc0 1 172.16.80.40/255.255.255.0 172.16.80.255

set ip route 0.0.0.0/0.0.0.0          172.16.80.79
!
#set boot command
set boot config-register 0x2102
clear boot system all
!
# default port status is enable
!
!
#module 1 : 2-port 1000BaseSX Supervisor
!
#module 2 : 4-port 10/100BaseTX Supervisor
!
#module 3 : 3-port 1000BaseX Ethernet
!
#module 4 : 24-port 10/100BaseTX Ethernet
set vlan 10    4/1-12
set vlan 20    4/13-20
set spantree portfast    4/1-20 enable
!
#module 5 : 2-port MM OC-3 Dual-Phy ATM
!
#module 6 empty
!
#module 7 : 1-port Route Switch
!
#module 8 empty
!
#module 9 empty
!
#module 10 empty
!
#module 11 : 48-port 10BaseT Ethernet
!
#module 12 : 2-port MM MIC FDDI
!
#module 13 empty
end
Cat5500> (enable)

```

RSM Configuration

```

Router# show running-config
Building configuration...

Current configuration:
!

```

```

version 12.0
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
!
hostname Router
!
enable password cisco
!
ip subnet-zero
ip cef
!
!
process-max-time 200
!
interface Vlan1
 ip address 172.16.80.79 255.255.255.0
 no ip directed-broadcast
!
interface Vlan10
 ip address 10.10.10.1 255.255.255.0
 no ip directed-broadcast
!
interface Vlan20
 ip address 10.10.11.1 255.255.255.0
 no ip directed-broadcast
!
ip classless
!
!
line con 0
 transport input none
line aux 0
line vty 0 4
 password cisco
 login
!
end

Router#

```

NetPro Discussion Forums – Featured Conversations

Networking Professionals Connection is a forum for networking professionals to share questions, suggestions, and information about networking solutions, products, and technologies. The featured links are some of the most recent conversations available in this technology.

NetPro Discussion Forums – Featured Conversations for LAN
Network Infrastructure: LAN Routing and Switching
Network Infrastructure: Getting Started with LANs

Related Information

- *Configuring the Module for InterVLAN Routing* section of Installation and Configuration Note for the Catalyst 4000 Layer 3 Services Module
- Configuration and Overview of the Router Module for the Catalyst 4000 Family (WS-X4232-L3)
- Using PortFast and Other Commands to Fix Workstation Startup Connectivity Delays
- LAN Product Support Pages

- **LAN Switching Support Page**
 - **Technical Support – Cisco Systems**
-

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2008 – 2009 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Aug 30, 2005

Document ID: 10589
