

NM-16ESW and amp; NM-36ESW with DLSw

Document ID: 26888

- Introduction**
- Prerequisites**
 - Requirements
 - Components Used
 - Conventions
- Configure**
- Verify**
- Troubleshoot**
- Related Information**

Introduction

This document provides functionality information for the NM-16ESW and NM 36ESW network modules.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

This document is not restricted to specific software and hardware versions.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

Configure

Transparent bridging support on the NM-16ESW or NM 36ESW modules was added in Cisco IOS® Software Releases 12.2(15)ZJ and 12.3(4)T. Prior to these releases, both transparent bridging and DLSw were not supported on these modules.

Verify

There is currently no verification procedure available for this configuration.

Troubleshoot

There is currently no specific troubleshooting information available for this configuration.

Related Information

- **Technical Support & Documentation – Cisco Systems**
-

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2009 – 2010 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Oct 20, 2006

Document ID: 26888
