

Cisco DSL Router Configuration and Troubleshooting Guide – Cisco DSL Router: PC Acting as a PPPoE Client

Document ID: 71121

Introduction

Prerequisites

Requirements

Components Used

Conventions

Tasks to Perform

Configure

Configuration

Verify

Troubleshoot

NetPro Discussion Forums – Featured Conversations

Related Information

Introduction

In this implementation, your Cisco Digital Subscriber Line (DSL) Router is unable to provide value-added services and acts as a simple Asymmetric Digital Subscriber Line (ADSL) to Ethernet bridge. Therefore, you must load Point-to-Point-Protocol over Ethernet (PPPoE) client software on each PC on the LAN that requires access to the Internet.

Tip: If you are not familiar with configuring Cisco devices and would like to follow a step-by-step configuration, refer to Step-by-Step Configuration of a PC Acting as a PPPoE Client.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

This document is not restricted to specific software and hardware versions.

Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

Tasks to Perform

- Configure the ATM interface (the ADSL interface) of the Cisco DSL Router with an ATM permanent virtual circuit (PVC) and encapsulation.

- Configure bridging on your Cisco DSL Router.
- Disable IP routing on your Cisco DSL Router.
- Load PPPoE client software on each PPPoE client PC.
- Configure each PPPoE client per instructions from the software vendor or Internet Service Provider (ISP); for example, domain name, username, and password).

Configure

In this section, you are presented with the information to configure the features described in this document.

Note: Use the Command Lookup Tool (registered customers only) to find more information on the commands used in this document.

Configuration

Tip: If you are not familiar with configuring Cisco devices and would like to follow a step-by-step configuration, refer to Step-by-Step Configuration of a PC Acting as a PPPoE Client.

This document uses this configuration:

Cisco DSL Router with a PC Acting as a PPPoE Client
<pre> !--- Comments contain explanations and additional information. service timestamps debug datetime msec service timestamps log datetime msec ! no ip routing ! interface ethernet0 no shut no ip address no ip directed-broadcast bridge-group 1 ! interface atm0 no shut no ip address no ip directed-broadcast no atm ilmi-keepalive pvc <vpi/vci> encapsulation aal5snap !--- Common PVC values supported by ISPs are 0/35 or 8/35. !--- Confirm your PVC values with your ISP. ! bridge-group 1 ! bridge 1 protocol ieee ! end </pre>

Verify

There is currently no verification procedure available for this configuration.

Troubleshoot

If your ADSL service is not working properly, refer to Troubleshooting a PPPoE PC Client.

NetPro Discussion Forums – Featured Conversations

Networking Professionals Connection is a forum for networking professionals to share questions, suggestions, and information about networking solutions, products, and technologies. The featured links are some of the most recent conversations available in this technology.

NetPro Discussion Forums – Featured Conversations for DSL
Network Infrastructure: Remote Access
Service Providers: VPN Service Architectures

Related Information

- [Cisco DSL Router Configuration and Troubleshooting Guide – PPPoE Implementation Options](#)
- [Cisco DSL Router Configuration and Troubleshooting Guide](#)
- [Technical Support & Documentation – Cisco Systems](#)

All contents are Copyright © 1992–2006 Cisco Systems, Inc. All rights reserved. Important Notices and Privacy Statement.

Updated: Sep 25, 2006

Document ID: 71121
