

# Cisco DSL Router Configuration and Troubleshooting Guide – RFC1483 Pure Bridging Troubleshooting

Document ID: 71129

---

## Introduction

### Prerequisites

- Requirements
- Components Used
- Conventions

### Layer 1 Issues

- Is the carrier detect (CD) light on the front panel of the Cisco DSL Router on or off?
- Does your ISP use a DSLAM that supports the Alcatel chipset?
- Is the DSL port on the back of the Cisco DSL Router plugged into the DSL wall jack?
- Is the ATM interface in an administratively down state?
- Is the cable pinout correct?
- Do you have the correct power supply for the Cisco 827?
- Is the DSL operating-mode correct?
- Is the circuit tested/provisioned correctly?

### Layer 2 Issues

- Do you have the correct Permanent Virtual Circuit (PVC) values (VPI/VCI)?
- Can you ping the default gateway from your PC?
- Is the bridge port in a forwarding state?
- Is there an entry in the bridge table?

## NetPro Discussion Forums – Featured Conversations

### Related Information

---

## Introduction

There are many reasons why your Digital Subscriber Line (DSL) connection does not function properly. The goal of this document is to isolate the cause of the failure and repair it. The first troubleshooting step is to determine which layer of your Asymmetric Digital Subscriber Line (ADSL) service is failing. There are three layers in which the failure can occur.

- Layer 1 DSL physical connectivity to your ISP's Digital Subscriber Line Access Multiplexer (DSLAM)
- Layer 2.1 ATM connectivity
- Layer 2.2 Point-to-Point Protocol over ATM (PPPoA), Point-to-Point Protocol over Ethernet (PPPoE), RFC1483 Bridging, or RFC1483 Routing
- Layer 3 IP

The easiest way to determine which layer you should begin to troubleshoot is to issue the command **show ip interface brief**. The output of this command differs slightly based on your configuration.

```
827-ESC#show ip interface brief
Interface      IP-Address      OK?      Method      Status      Protocol
ATM0           unassigned      YES      manual      up          up
ATM0.1         unassigned      YES      unset       up          up
Ethernet0     10.10.10.1      YES      manual      up          up
```

If the statuses of ATM0 and ATM0.1 are up and the protocol is up, begin to troubleshoot at Layer 2.

If the ATM interfaces are down, or if they continue to come up and then go down (they do not stay up), start to troubleshoot at Layer 1.

## Prerequisites

### Requirements

There are no specific requirements for this document.

### Components Used

This document is not restricted to specific software and hardware versions.

### Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

## Layer 1 Issues

### Is the carrier detect (CD) light on the front panel of the Cisco DSL Router on or off?

If the CD light is on, go to the Layer 2 Issues section of this document.

If the CD light is off, continue with the next question.

### Does your ISP use a DSLAM that supports the Alcatel chipset?

Verify this information with your ISP.

### Is the DSL port on the back of the Cisco DSL Router plugged into the DSL wall jack?

If the DSL port is not plugged into the DSL wall jack, connect the port to the wall with a 4-pin or 6-pin RJ-11 cable. This is a standard telephone cable.

### Is the ATM interface in an administratively down state?

In order to determine if the ATM0 interface is administratively down, issue this command in **enable** mode on the router:

```
Router#show interface atm 0
ATM0 is administratively down, line protocol is down
<... snipped ...>
```

If the ATM0 interface status is administratively down, issue the **no shutdown** command under the ATM0 interface.

```

Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface atm 0
Router(config-if)#no shut
Router(config-if)#end
Router#write memory

```

## Is the cable pinout correct?

If the ATM0 interface status is down and down, the router does not see a carrier on the ADSL line. This generally indicates one of two issues:

- The active pins on the DSL wall jack are incorrect.
- Your ISP has not turned up a DSL service on this wall jack.

### Cisco DSL Router xDSL Port Pinouts

The RJ-11 connector provides an xDSL connection to external media via a standard RJ-11 6-pin modular jack.

Pin	Description
3	XDSL_Tip
4	XDSL_Ring

Issue the **show interface atm 0** command from **enable** mode of the router in order to determine if the ATM0 interface is down and down.

```

Router#show interface atm 0
ATM0 is down, line protocol is down
<... snipped ...>

```

If the ATM interface is down and down *not* administratively down check the pinout of your DSL wall jack. The DSL Router uses a standard RJ-11 (4-pin or 6-pin) cable to provide the ADSL connection to the wall jack. The center pair of pins on the RJ-11 cable is used to carry the ADSL signal (pins 3 and 4 on a 6-pin cable, or pins 2 and 3 on a 4-pin cable).

If you are sure you have the right pins on the wall jack and the ATM0 interface is still down and down, replace the RJ-11 cable between the DSL port and your wall jack. If the interface is still down and down after you replace the RJ-11 cable, contact your ISP and have the ISP verify that DSL service has been enabled on the wall jack you use.

If you are not sure what pins on your wall jack are active, ask your ISP.

## Do you have the correct power supply for the Cisco 827?

If you have verified that your ADSL cable is good and that you have the correct pinouts, the next step is to make sure you have the correct power supply for the 827.

**Note:** The 827 does not use the same power supply as other 800 series routers.

In order to determine if you have the correct power supply, on the back of the power adapter look for **Output +12V 0.1A, -12V 0.1A, +5V 3A, -24V 0.12A, and -71V 0.12A**. If your power supply is missing the +12V

and –12V feeds, then it is for a different Cisco 800 series router and does not work on the 827. Note that if you use the wrong power supply, the Cisco 827 powers up but is unable to train up (connect) to the ISP DSLAM.

## Is the DSL operating-mode correct?

If everything up to this point in the Layer 1 troubleshooting procedure is correct, the next step is to make sure you have the correct DSL operating mode. Cisco recommends using **dsl operating-mode auto** if you are not sure what DMT technology your ISP is using.

These are the commands to configure operating-mode autodetection:

```
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface atm 0
Router(config-if)#dsl operating-mode auto
Router(config-if)#end
Router#write memory
```

## Is the circuit tested/provisioned correctly?

Obtain this information from your ISP or telephone company.

## Layer 2 Issues

### Do you have the correct Permanent Virtual Circuit (PVC) values (VPI/VCI)?

Complete these steps in order to determine whether you have the correct virtual path identifier/virtual circuit identifier (VPI/VCI) values configured on the router.

1. Verify your version of Cisco IOS® software.

**Important:** This does not work with Cisco IOS Software Release 12.1(1)XB.

```
Router#show version

!--- Used to determine your Cisco IOS software release.

Cisco Internetwork Operating System Software
IOS (tm) C820 Software (C820-OSY656I-M), Version 12.1(3)XG3,
EARLY DEPLOYMENT RELEASE SOFTWARE (fc1)

!--- The two lines immediately preceding appear on one line on the router.

TAC:Home:SW:IOS:Specials for info
Copyright (c) 1986-2000 by cisco Systems, Inc.
Compiled Wed 20-Dec-00 16:44 by detang
Image text-base: 0x80013170, data-base: 0x80725044
<... snipped ...>
```

2. Configure the router for debug logging.

```
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```

Router(config)#logging console
Router(config)#logging buffer
Router(config)#service timestamp debug datetime msec
Router(config)#service timestamp log datetime msec
Router(config)#end
Router#write memory
Building configuration...
[OK]
Router#terminal monitor

```

### 3. Enable debugging on the router.

```

Router#debug atm events
ATM events debugging is on
Router#
2d18h:
2d18h: RX interrupt: conid = 0, rxBd = 0x80C7EF74 length=52
2d18h: Data Cell received on vpi = 8 vci = 35

```

*!--- Your VPI/VCI.*

```

2d18h:
2d18h: RX interrupt: conid = 0, rxBd = 0x80C7EEC0 length=52
2d18h: Data Cell received on vpi = 8 vci = 35
2d18h:
2d18h: RX interrupt: conid = 0, rxBd = 0x80C7EECC length=52
2d18h: Data Cell received on vpi = 8 vci = 35
2d18h:
2d18h: RX interrupt: conid = 0, rxBd = 0x80C7EED8 length=52
2d18h: Data Cell received on vpi = 8 vci = 35

```

### 4. Make sure you have **debug ATM events** running on the Cisco DSL Router, and then go to a working Internet connection and begin to ping the IP address your ISP statically assigned to you.

It does not matter whether you have configured this IP address on the Cisco DSL Router. What is important is that your ATM interface is up/up and that you are pinging the IP address your ISP gave you. If you do not see the expected output after the ping test, contact your ISP for support.

### 5. Disable debugging on the router.

<< wait 60 seconds >>

```

Router#undebug all

!--- Used to turn off the debug events.

```

All possible debugging has been turned off.

Verify your VPI/VCI values, and then make the necessary changes to your configuration.

If you do not see output during the 60 seconds of debugging, contact your ISP.

## Can you ping the default gateway from your PC?

In a bridged environment, pinging the default gateway is a good test of connectivity. In general, if you can ping to your default gateway, you know that Layer 1 and Layer 2 services function properly. Open an MS-DOS window and try to ping the default gateway.

```

C:\>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

```

```
Reply from 192.168.1.1: bytes=32 time<10ms TTL=247
Reply from 192.168.1.1: bytes=32 time<10ms TTL=247
Reply from 192.168.1.1: bytes=32 time<10ms TTL=247
Reply from 192.168.1.1: bytes=32 time<10ms TTL=247
Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

If your success rate is 80–100 percent, try to ping a valid Internet address (198.133.219.25 is www.cisco.com). If you can ping the default gateway from the PC but you cannot ping another Internet address, make sure you have only one static default route in the configuration (for example, IP route 0.0.0.0 0.0.0.0 192.168.1.1).

For this example, if you already have a correct static default route and cannot ping Internet addresses, contact your ISP in order to resolve the routing issue.

If the ping test fails, you see output similar to this output. In this case, continue with the troubleshooting steps in this document.

```
C:\>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:
Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

## Is the bridge port in a forwarding state?

For your Cisco DSL Router to forward packets to your ISP, your bridged interface must be in a forwarding state. If your bridged interface is in a blocking state, there is a loop in your network that you have to remove before you are able to pass traffic. The most common cause of a loop in a DSL network is to have two bridged DSL circuits to the same ISP.

```
Router#show spanning-tree

Bridge group 1 is executing the ieee compatible Spanning Tree protocol
Bridge Identifier has priority 32768, address 0001.96a4.a8bc
Configured hello time 2, max age 20, forward delay 15
Current root has priority 32768, address 0000.0c25.36f4
Root port is 3 (ATM0), cost of root path is 1562
Topology change flag not set, detected flag not set
Number of topology changes 2 last change occurred 00:00:56 ago from Ethernet0
Times: hold 1, topology change 35, notification 2
       hello 2, max age 20, forward delay 15
Timers: hello 0, topology change 0, notification 0, aging 300

Port 2 (Ethernet0) of Bridge group 1 is forwarding
Port path cost 100, Port priority 128, Port Identifier 128.2.
Designated root has priority 32768, address 0000.0c25.36f4
Designated bridge has priority 32768, address 0001.96a4.a8bc
Designated port id is 128.2, designated path cost 1562
Timers: message age 0, forward delay 0, hold 0
Number of transitions to forwarding state: 1
```

```
BPDU: sent 44, received 0
```

```
Port 3 (ATM0) of Bridge group 1 is forwarding  
Port path cost 1562, Port priority 128, Port Identifier 128.3.  
Designated root has priority 32768, address 0000.0c25.36f4  
Designated bridge has priority 32768, address 0000.0c25.36f4  
Designated port id is 128.17, designated path cost 0  
Timers: message age 2, forward delay 0, hold 0  
Number of transitions to forwarding state: 1  
BPDU: sent 2, received 53
```

```
Router#
```

## Is there an entry in the bridge table?

When you are sure that your bridged interface is forwarding, you need to determine if you have the Layer 2 media access control (MAC) address of your ISP gateway router. Use the **show bridge** command in order to check for the Layer 2 address. This command lists all the Layer 2 entries for a specific bridge group.

In this example, there are two entries in the bridge table. The first entry is the MAC address of the PC client in the LAN. The second entry is the MAC address of the ISP gateway router (default gateway). If the MAC address of the ISP gateway router is not in the bridge table, contact your ISP to verify your network settings.

```
Router#show bridge
```

```
Total of 300 station blocks, 298 free  
Codes: P - permanent, S - self
```

```
Bridge Group 1:
```

Address	Action	Interface	Age	RX count	TX count
0010.a492.e1d2	forward	Ethernet0	4	163	4
0010.7bb9.bd1a	forward	ATM0	0	4	3

```
Router#
```

## NetPro Discussion Forums – Featured Conversations

Networking Professionals Connection is a forum for networking professionals to share questions, suggestions, and information about networking solutions, products, and technologies. The featured links are some of the most recent conversations available in this technology.

NetPro Discussion Forums – Featured Conversations for DSL

Network Infrastructure: Remote Access

Service Providers: VPN Service Architectures

## Related Information

- [Cisco DSL Router Configuration and Troubleshooting Guide – Cisco DSL Router – Cisco DSL Router: RFC1483 Pure Bridging](#)
- [Cisco DSL Router Configuration and Troubleshooting Guide](#)
- [Technical Support & Documentation – Cisco Systems](#)

All contents are Copyright © 1992–2006 Cisco Systems, Inc. All rights reserved. Important Notices and Privacy Statement.

Cisco – Cisco DSL Router Configuration and Troubleshooting Guide – RFC1483 Pure Bridging Troubleshooting

