

Troubleshooting Router Crashes

Document ID: 7900

Interactive: This document offers customized analysis of your Cisco device.

Introduction

Prerequisites

Requirements

Components Used

Conventions

Getting Information About the Crash

Types of Crashes

Router Module Crashes

Examples of Output which Indicate the Crash

Information to Collect if You Open a TAC Service Request

NetPro Discussion Forums – Featured Conversations

Related Information

Introduction

When we refer to a "system crash", we mean a situation where the system has detected an unrecoverable error, and has restarted itself.

The errors that cause crashes are typically detected by processor hardware, which automatically branches to special error handling code in the ROM monitor. The ROM monitor identifies the error, prints a message, saves information about the failure, and restarts the system.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

This document is not restricted to specific software and hardware versions.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

For more information on document conventions, see the Cisco Technical Tips Conventions.

Getting Information About the Crash

When the router crashes, it is extremely important to gather as much information as possible about the crash before you manually reload or power-cycle the router. All information about the crash, except that which has been successfully stored in the crashinfo file, is lost after a manual reload or power-cycle. The following outputs give some indication and information on the crash.

If you have the output of a **show version**, **show stacks**, **show context**, or **show tech support** command from your Cisco device, you can use to display potential issues and fixes. To use, you must be a registered customer, be logged in, and have JavaScript enabled.

| Command | Description |
|--------------------------|--|
| show version | <p>This command first appeared in Cisco IOS® Software Release 10.0. The show version EXEC command displays the configuration of the system hardware, the software version, the names and sources of configuration files and software images, the router uptime, and information on how the system has been restarted.</p> <p>IMPORTANT: If the router is reloaded after the crash (for example, if it has been power-cycled or the reload command has been issued), this information will be lost, so try to collect it before reloading!</p> |
| show stacks | <p>This command first appeared in Cisco IOS Software Release 10.0. The show stacks EXEC command is used to monitor the stack usage of processes and interrupt routines. The show stacks output is one of the most indispensable sources of information to collect when the router crashes.</p> <p>IMPORTANT: If the router is reloaded after the crash (for example, through power-cycle or the reload command), this information will be lost so try to collect it before reloading!</p> |
| show context | <p>This command first appeared in Cisco IOS Software Release 10.3. The show context EXEC command is used to display information stored in nonvolatile RAM (NVRAM) when an exception occurs. Context information is specific to processors and architectures, whereas software version and uptime information are not. Context information for different router types could therefore differ. The output displayed from the show context command includes:</p> <ul style="list-style-type: none">• the reason for the system reboot.• stack trace.• software version.• signal number, code, and router uptime information.• all the register contents at the time of the crash. |
| show tech-support | <p>This command first appeared in Cisco IOS Software Release 11.2. This command is useful in collecting general information about the router when you report a problem. It includes:</p> <ul style="list-style-type: none">• show version• show running-config• show stacks• show interface |

| | |
|--------------------|---|
| | <ul style="list-style-type: none"> • show controller • show process cpu • show process memory • show buffers |
| console log | <p>If you are connected to the console of the router at the time of the crash, you will see something like this during the crash:</p> <pre> *** System received a Software forced crash *** signal= 0x17, code= 0x24, context= 0x619978a0 PC = 0x602e59dc, Cause = 0x4020, Status Reg = 0x34008002 DCL Masked Interrupt Register = 0x000000f7 DCL Interrupt Value Register = 0x00000010 MEMD Int 6 Status Register = 0x00000000 </pre> <p>Keep this information and the logs before it. Once the router comes up again, do not forget to get the show stacks output.</p> |
| syslog | <p>If the router is set up to send logs to a syslog server, you will see some information on what happened before the crash on the syslog server. However, when the router is crashing, it may not be able to send the most useful information to this syslog server. So most of the time, syslog output is not very useful for troubleshooting crashes.</p> |
| crashinfo | <p>The crashinfo file is a collection of useful information related to the current crash, stored in bootflash or flash memory. When a router crashes due to data or stack corruption, more reload information is needed to debug this type of crash than just the output from the normal show stacks command.</p> <p>The crashinfo is written by default to bootflash:crashinfo on the Cisco 12000 Gigabit Router Processor (GRP), the Cisco 7000 and 7500 Route Switch Processors (RSPs), and the Cisco 7200 series routers. For the Cisco 7500 Versatile Interface Processor 2 (VIP2), this file is stored by default to bootflash:vip2_slot_no_crashinfo where the <i>slot_no</i> is the VIP2 slot number. For the Cisco 7000 Route Processor (RP), the file is stored by default to flash:crashinfo.</p> <p>For more details, see Retrieving Information from the Crashinfo File.</p> |
| core dump | <p>A core dump is a full copy of the router's memory image. This information is not necessary for troubleshooting most types of crashes, but it is highly recommended when filing a new bug. You may need to enable some debugs to add more information into the core dump such as debug sanity, scheduler heapcheck process, and memory check-interval 1.</p> <p>For more details, see Creating Core Dumps.</p> |
| rom monitor | <p>The router might end up in ROM monitor after a crash when its config-register setting ends with 0. If the processor is a 68k, the prompt will be ">". You can get the stack trace with the k command. If the processor is a reduced instruction set computing (RISC), the prompt will be "rommon 1>". Get the output of stack 50 or show context.</p> |

Types of Crashes

The **show version** and **show stacks** commands provide you with output that gives you an indication of the type of the crash that occurred, such as bus error, or software forced crash. You can also get crash type information from the **crashinfo** and **show context** commands. For some later Cisco IOS Software versions, the crash reasons are not clearly indicated (for example, you see "Signal = x" where x is a number). Refer to Versatile Interface Processor Crash Reason Codes to translate this number into something meaningful. For example, "Signal = 23" translates to a software forced crash. Follow these links to troubleshoot the specific type of crash your router is experiencing:

- Abort
- Address Error
- Bus Error
- Cache Error Exception
- Error – Level <x>
- Format Error
- Illegal Instruction
- Illegal Opcode Exception
- Jump to Zero Error
- Line Emulator Trap
- Power–On
- Processor Memory Parity Error
- Reserved Exception
- Restarted by Error
- Segmentation Violation Exception
- Shared Memory Parity Error
- SIGTRAP
- Software–forced Crash
- Trace Trap
- Undefined Trap
- Unexpected Hardware Interrupt
- Unknown Failure
- Unknown Reload Cause
- Watchdog Timeout
- Write Bus Error Interrupt

Router Module Crashes

Sometimes, only a specific router module crashes, and not the router itself. Here are some documents that describe how to troubleshoot crashes on some router modules:

- Troubleshooting VIP Crashes
- Troubleshooting SAR Crashes on PA–A3
- Troubleshooting Line Card Crashes on the Cisco GSR12000 Series

Examples of Output which Indicate the Crash

```
Router#show version
Cisco Internetwork Operating System Software
IOS (tm) RSP Software (RSP-PV-M), Version 12.0(10.6)ST, EARLY DEPLOYMENT
MAINTENANCE INTERIM SOFTWARE
Copyright (c) 1986–2000 by cisco Systems, Inc.
Compiled Fri 23-Jun-00 16:02 by richv
Image text-base: 0x60010908, data-base: 0x60D96000
```

ROM: System Bootstrap, Version 12.0(19990806:174725), DEVELOPMENT SOFTWARE
BOOTFLASH: RSP Software (RSP-BOOT-M), Version 12.0(9)S, EARLY DEPLOYMENT
RELEASE SOFTWARE (fc1)

Router uptime is 20 hours, 56 minutes
System returned to ROM by error - a Software forced crash, PC 0x60287EE8
System image file is "slot0:rsp-pv-mz.120-10.6.ST"

cisco RSP8 (R7000) processor with 131072K/8216K bytes of memory.
R7000 CPU at 250Mhz, Implementation 39, Rev 1.0, 256KB L2, 2048KB L3 Cache
Last reset from power-on
G.703/E1 software, Version 1.0.
G.703/JT2 software, Version 1.0.
X.25 software, Version 3.0.0.
Chassis Interface.
1 EIP controller (6 Ethernet).
1 VIP2 R5K controller (1 FastEthernet)(2 HSSI).
6 Ethernet/IEEE 802.3 interface(s)
1 FastEthernet/IEEE 802.3 interface(s)
2 HSSI network interface(s)
2043K bytes of non-volatile configuration memory.
20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
16384K bytes of Flash internal SIMM (Sector size 256K).
No slave installed in slot 7.
Configuration register is 0x2102

Router#**show stacks**

Minimum process stacks:

| Free/Size | Name |
|------------|-----------------------|
| 5188/6000 | CEF Reloader |
| 9620/12000 | Init |
| 5296/6000 | RADIUS INITCONFIG |
| 5724/6000 | MDFS Reload |
| 2460/3000 | RSP memory size check |
| 8176/9000 | DHCP Client |

Interrupt level stacks:

| Level | Called | Unused/Size | Name |
|-------|--------|-------------|--------------------------|
| 1 | 163 | 8504/9000 | Network Interrupt |
| 2 | 14641 | 8172/9000 | Network Status Interrupt |
| 3 | 0 | 9000/9000 | OIR interrupt |
| 4 | 0 | 9000/9000 | PCMCIA Interrupt |
| 5 | 5849 | 8600/9000 | Console Uart |
| 6 | 0 | 9000/9000 | Error Interrupt |
| 7 | 396230 | 8604/9000 | NMI Interrupt Handler |

System was restarted by error - a Software forced crash, PC 0x602DE884 at 05:07:31
UTC Thu Sep 16 1999

RSP Software (RSP-JSV-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)

Compiled Mon 06-Dec-99 19:40 by phanguye

Image text-base: 0x60010908, database: 0x61356000

Stack trace from system failure:

FP: 0x61F73C30, RA: 0x602DE884
FP: 0x61F73C30, RA: 0x6030D29C
FP: 0x61F73D88, RA: 0x6025E96C
FP: 0x61F73DD0, RA: 0x6026A954
FP: 0x61F73E30, RA: 0x602B94BC
FP: 0x61F73E48, RA: 0x602B94A8

When a crashinfo is available in bootflash, the following is displayed at the end of the **show stacks** command:

```
*****  
***** Information of Last System Crash *****  
*****
```

```
Using bootflash:crashinfo_20000323-061850. 2000
CMD: 'sh int fas' 03:23:41 UTC Thu Mar 2 2000
CMD: 'sh int fastEthernet 6/0/0' 03:23:44 UTC Thu Mar 2 2000
CMD: 'conf t' 03:23:56 UTC Thu Mar 2 2000
CMD: 'no ip cef di' 03:23:58 UTC Thu Mar 2 2000
CMD: 'no ip cef distributed ' 03:23:58 UTC Thu Mar 2 2000
...
```

Router#**show context**

```
System was restarted by error - a Software forced crash, PC 0x602DE884 at
05:07:31 UTC Thu Sep 16 1999
RSP Software (RSP-JSV-M), Version 12.0(7)T,  RELEASE SOFTWARE (fc2)
Compiled Mon 06-DEC-99 19:40 by phanguye
Image text-base: 0x60010908, database: 0x61356000
```

Stack trace from system failure:

```
FP: 0x61F73C30, RA: 0x602DE884
FP: 0x61F73C30, RA: 0x6030D29C
FP: 0x61F73D88, RA: 0x6025E96C
FP: 0x61F73DD0, RA: 0x6026A954
FP: 0x61F73E30, RA: 0x602B94BC
FP: 0x61F73E48, RA: 0x602B94A8
```

Fault History Buffer:

```
RSP Software (RSP-JSV-M), Version 12.0(7)T,  RELEASE SOFTWARE (fc2)
Compiled Mon 06-DEC-99 19:40 by phanguye
Signal = 23, Code = 0x24, Uptime 3w0d
$0 : 00000000, AT : 619A0000, v0 : 61990000, v1 : 00000032
a0 : 6026A114, a1 : 61A309A4, a2 : 00000000, a3 : 00000000
t0 : 61F6CD80, t1 : 8000FD88, t2 : 34008700, t3 : FFFF00FF
t4 : 00000083, t5 : 3E840024, t6 : 00000000, t7 : 00000000
s0 : 0000003C, s1 : 00000036, s2 : 00000000, s3 : 61F73C48
s4 : 00000000, s5 : 61993A10, s6 : 61982D00, s7 : 61820000
t8 : 0000327A, t9 : 00000000, k0 : 61E48C4C, k1 : 602E7748
gp : 6186F3A0, sp : 61F73C30, s8 : 00000000, ra : 6030D29C
EPC : 602DE884, SREG : 3400E703, Cause : 00000024
Error EPC : BFC00000, BadVaddr : 40231FFE
```

Information to Collect if You Open a TAC Service Request

If you still need assistance after following the troubleshooting steps above, and want to open a service request with the Cisco TAC, be sure to include the following information for troubleshooting a router crash:

- Troubleshooting performed before opening the service request.
- **show technical-support** output (if possible, in enable mode).
- **show log** output or console captures, if available.
- crashinfo file (if present, and not already included in the **show technical-support** output).
- **show region** output (if not already included in the **show technical-support** output).

Please attach the collected data to your service request in non-zipped, plain text format (.txt). You can attach information to your service request by uploading it using the TAC Service

Request tool (registered customers only) . If you cannot access the Service Request tool, you can attach the relevant information to your service request by sending it to attach@cisco.com with your case number in the subject line of your message.

Note: Please do not manually reload or power-cycle the router before collecting the above information unless required to troubleshoot a router crash, as this can cause important information to be lost that is needed for determining the root cause of the problem.

NetPro Discussion Forums – Featured Conversations

Networking Professionals Connection is a forum for networking professionals to share questions, suggestions, and information about networking solutions, products, and technologies. The featured links are some of the most recent conversations available in this technology.

| |
|---|
| NetPro Discussion Forums – Featured Conversations for Router and IOS Architecture |
| Network Infrastructure: LAN Routing and Switching |
| Network Infrastructure: WAN Routing and Switching |

Related Information

- [Less Common Types of System Crashes](#)
- [Troubleshooting Router Hangs](#)
- [Hardware Troubleshooting Index Page](#)
- [Technical Support – Cisco Systems](#)

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2008 – 2009 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Nov 28, 2006

Document ID: 7900