

This installation guide covers MX300 G2 with a floor stand.

## Dimensions

Height: 1521 mm / 59.9 in.

Width: 1278 mm / 50.4 in.

Depth: 671 mm / 26.5 in.

Weight total: 53 kg / 117 lb

Weight monitor: 35 kg / 78 lb

## Manpower



Two people working together are required to mount the monitor to the base module.

## Room setup

Explore the Cisco Project Workplace website to find inspiration and guidelines when preparing your office or meeting room for video conferencing, <http://www.cisco.com/go/projectworkplace>




## Documentation


Cisco Spark: Visit the Cisco Spark help site to find more information about Spark registered room systems, <http://help.ciscospark.com>




Other services: Visit the Cisco web site to find user guides and compliance and safety information for the video system, <http://www.cisco.com/go/mx-docs>



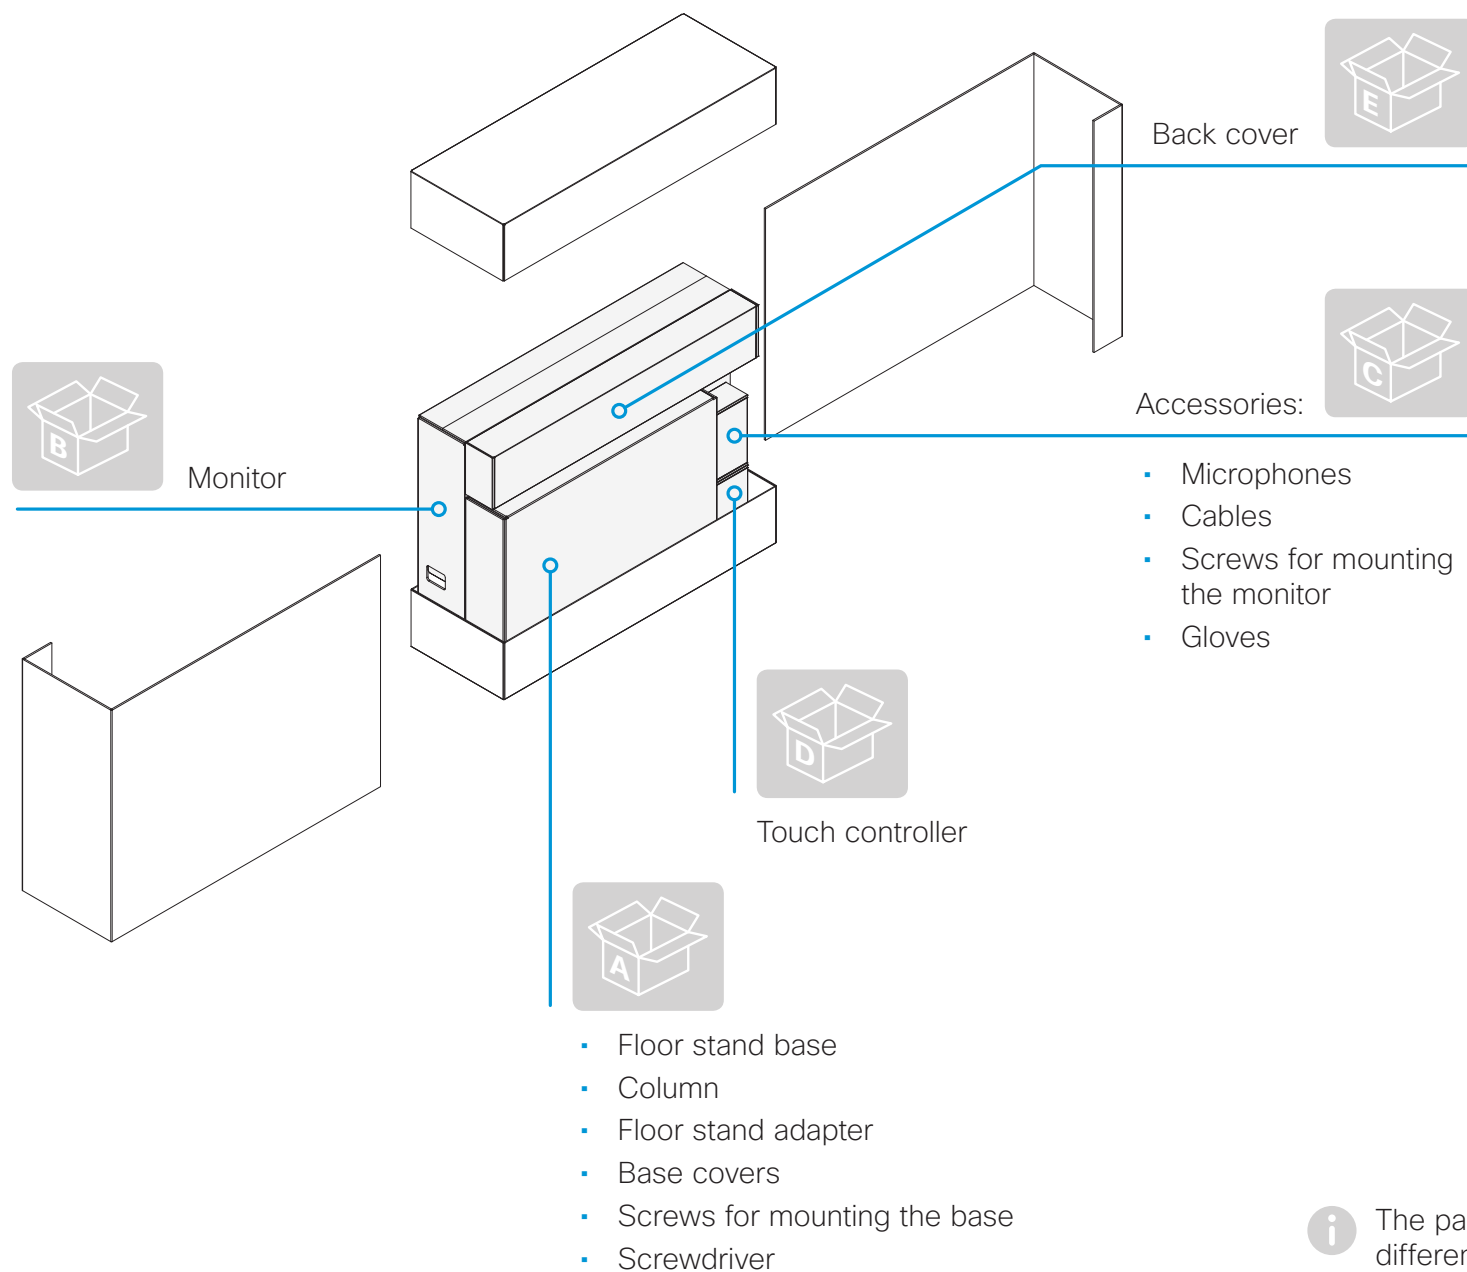

 The packaging may be slightly different for some shipments.

## 1 Mounting the floor stand

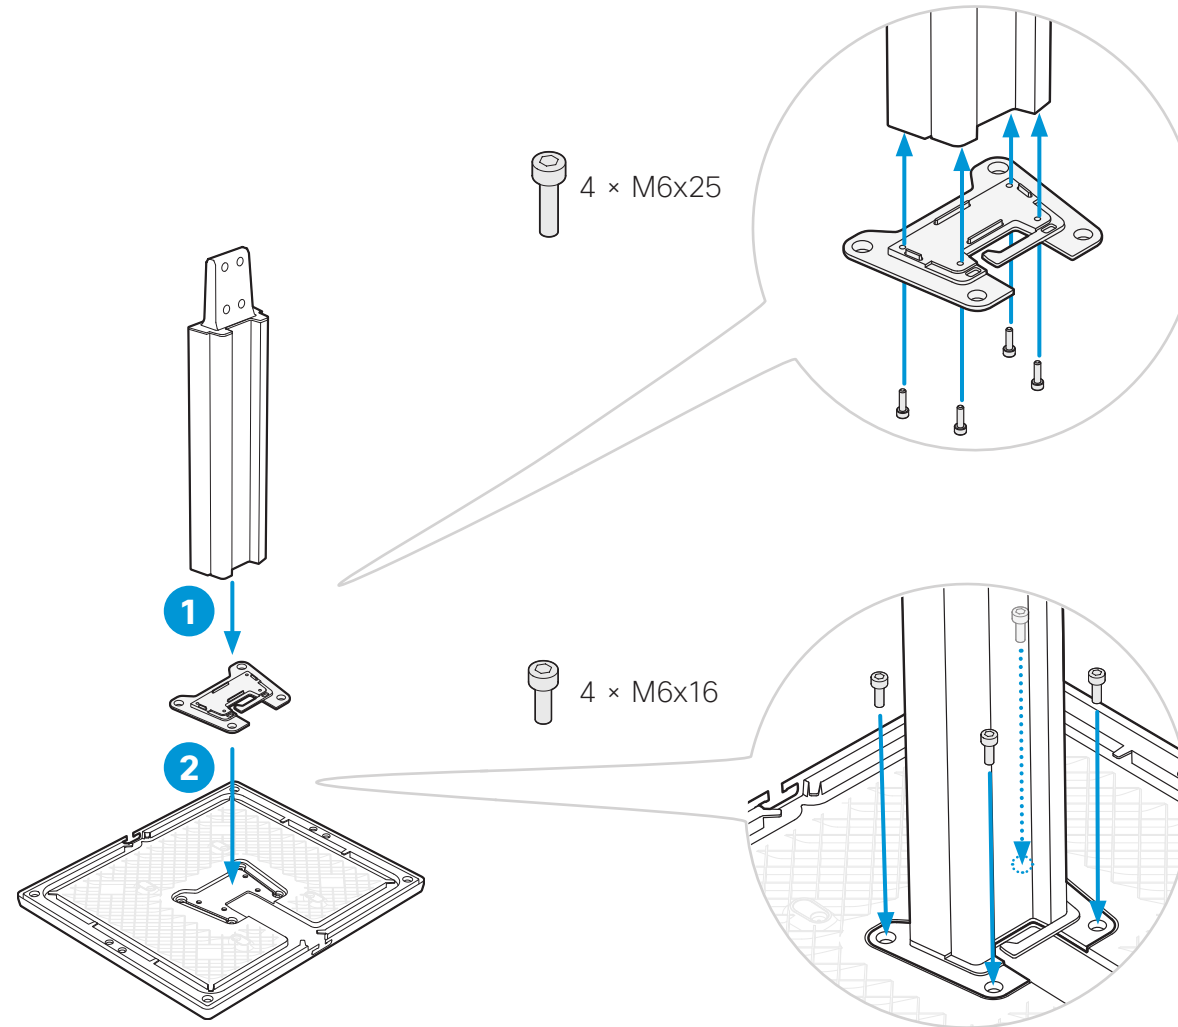

## 2 Mounting the monitor





x2


Use gloves when handling the monitor.



4 × M6x16

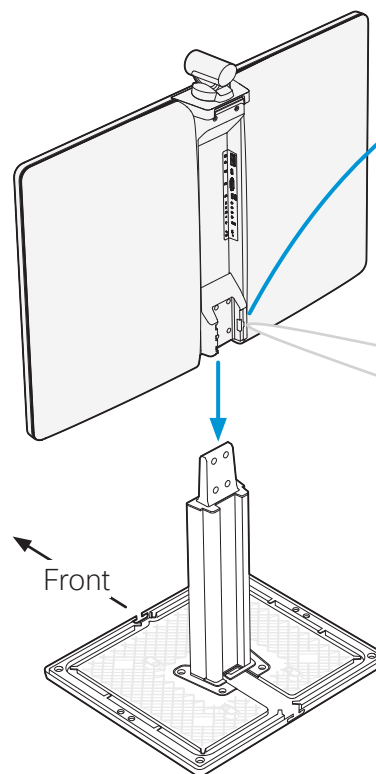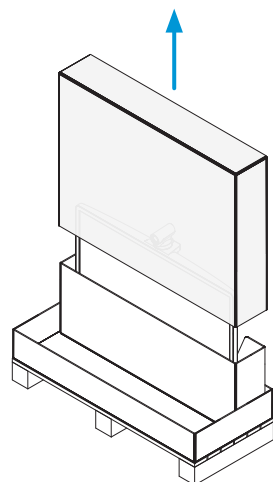


Remove the cable channel lid for now. You need it in step 4.

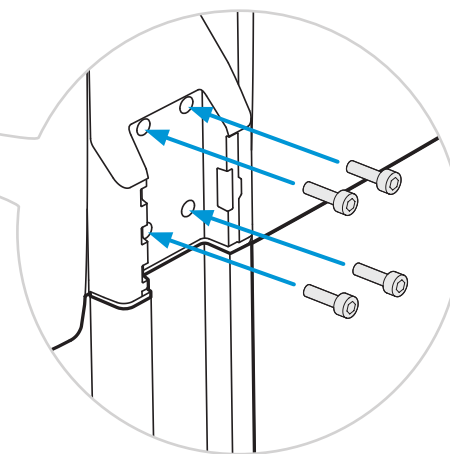


The monitor may be tilting slightly forward. If you gently pull it to a vertical position, the screws enter more easily.

## 3 Connecting the cables

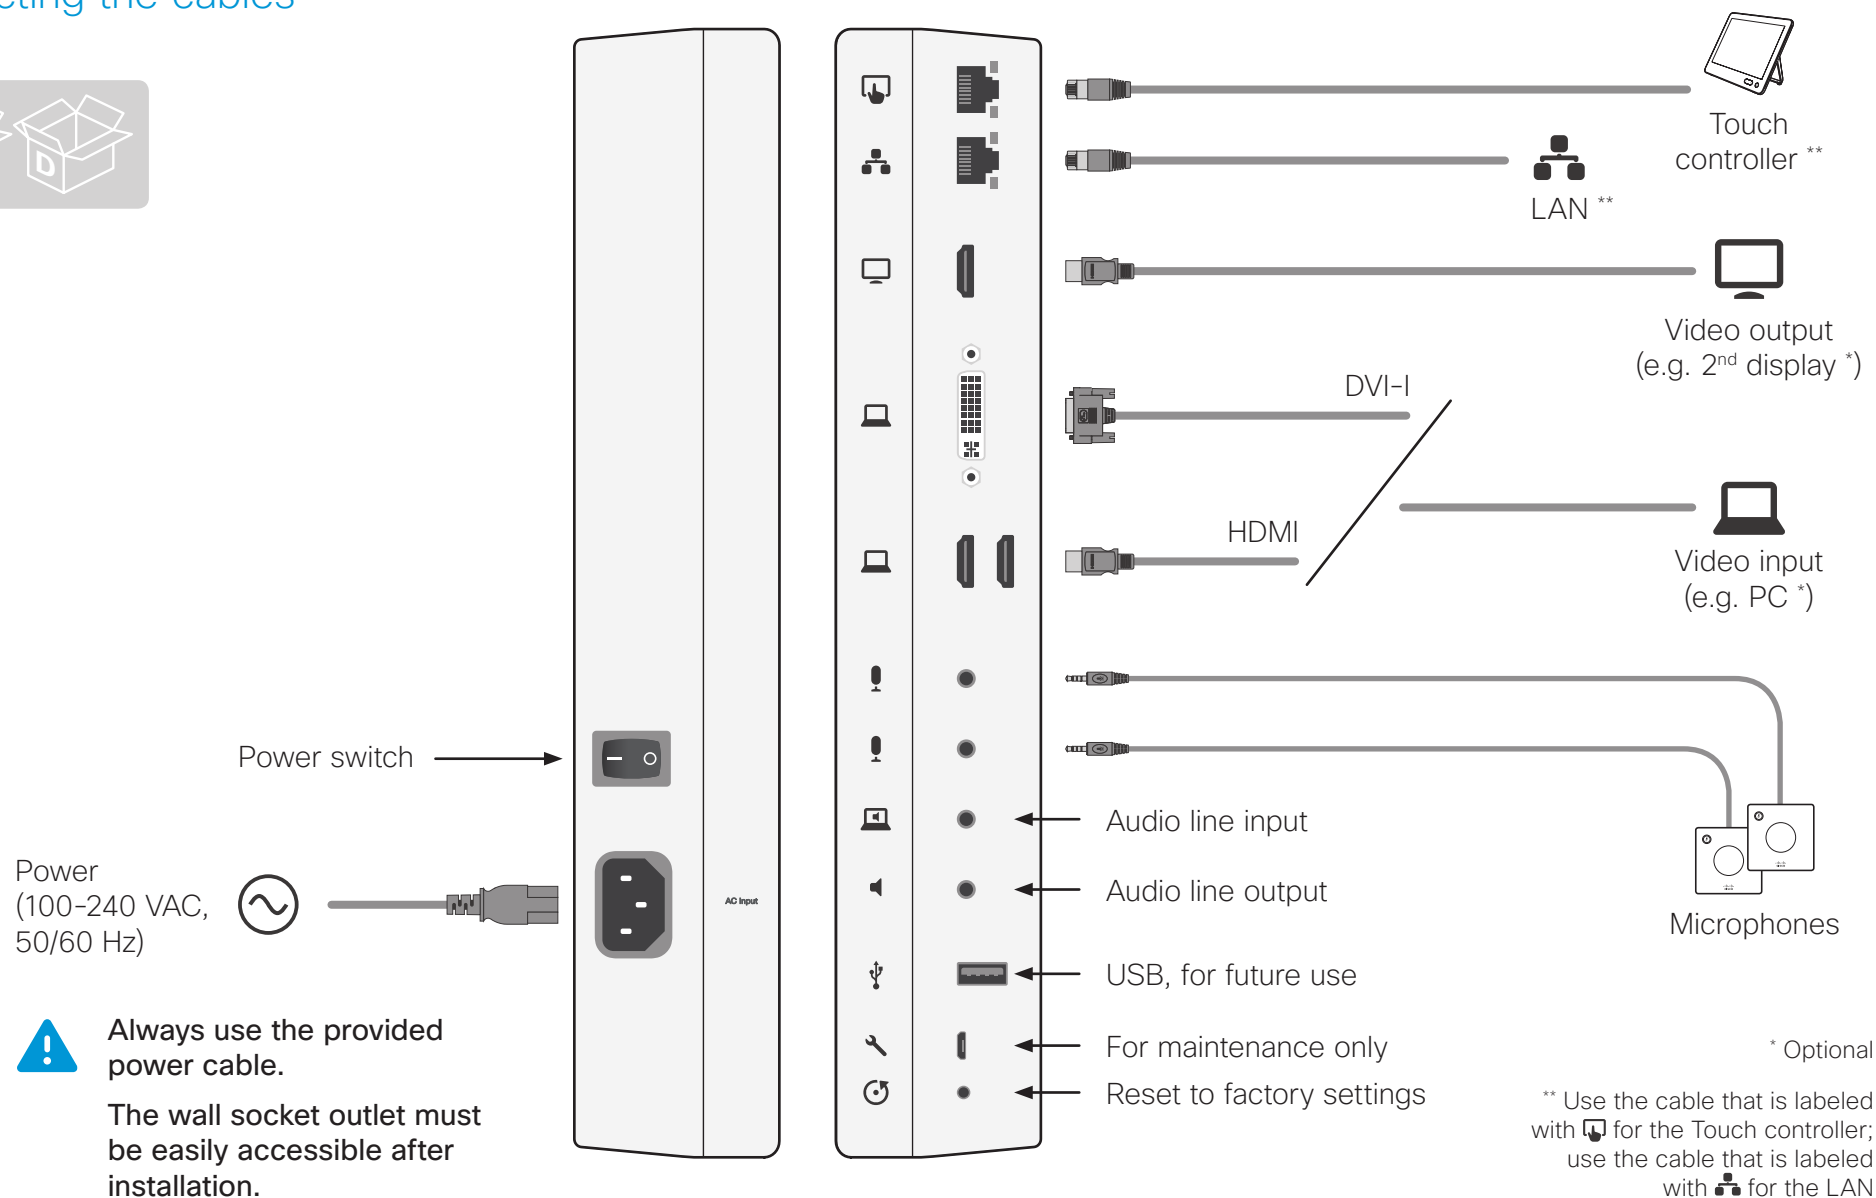

## 4 Leading out the cables

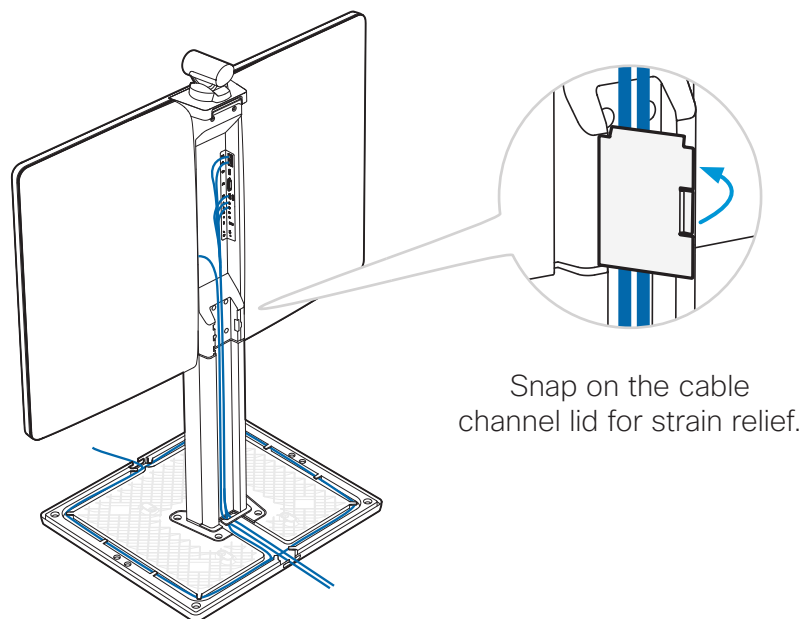

Lead the cables in the cable slots. Lead them out at the front or back as appropriate.

Lead the cables around the cable slot several times if the cables are longer than you need.

## 5 Starting up the system

- Connect to power and LAN/Ethernet.
- Switch on the system. The power switch is next to the power connector at the rear side of the system.



Wait while the unit starts up. Normally this takes a few minutes. It may include automatic software upgrade and restart of the Touch controller.


- Follow the instructions on the Touch controller.  
Cisco Spark: To find more information on how to get started with Spark registered systems, visit <http://help.ciscospark.com> and look for Getting Started articles for room systems.

Other services: For further information on set-up and configuration, download the *Getting Started Guide* from the Cisco web site, <http://www.cisco.com/go/mx-docs>




Never move the camera manually when power is switched on; always use the camera control function on the Touch controller to change the camera position.

## 6 Mounting the covers

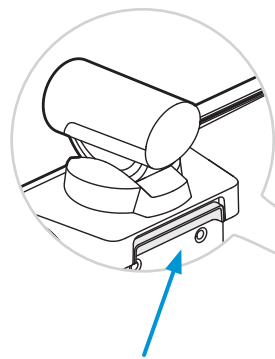

Lift this handle to lock/unlock the back cover. Use both hands if required.

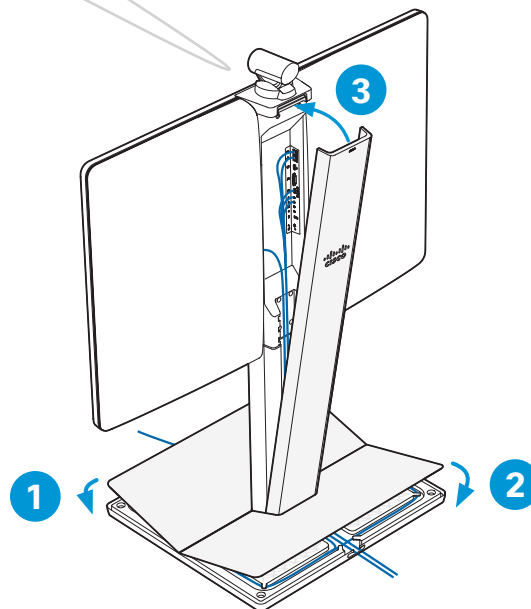

### EMC Class A declaration

**WARNING:** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### 声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

On our web site you will find an overview of the worldwide Cisco contacts.

Go to: <http://www.cisco.com/go/offices>

Corporate Headquarters  
Cisco Systems, Inc.  
170 West Tasman Dr.  
San Jose, CA 95134 USA