

This installation guide covers MX300 G2 with a wheel base.

## Dimensions

Height: 1606 mm / 63.3 in.

Width: 1278 mm / 50.4 in.

Depth: 755 mm / 29.8 in.

Weight total: 47 kg / 104 lb

Weight monitor: 35 kg / 78 lb

## Manpower



Two people working together are required to mount the monitor to the base module.

## Room setup

Explore the Cisco Project Workplace website to find inspiration and guidelines when preparing your office or meeting room for video conferencing, <http://www.cisco.com/go/projectworkplace>



 
## Documentation

Cisco Spark: Visit the Cisco Spark help site to find more information about Spark registered room systems, <http://help.ciscospark.com>





Other services: Visit the Cisco web site to find user guides and compliance and safety information for the video system, <http://www.cisco.com/go/mx-docs>



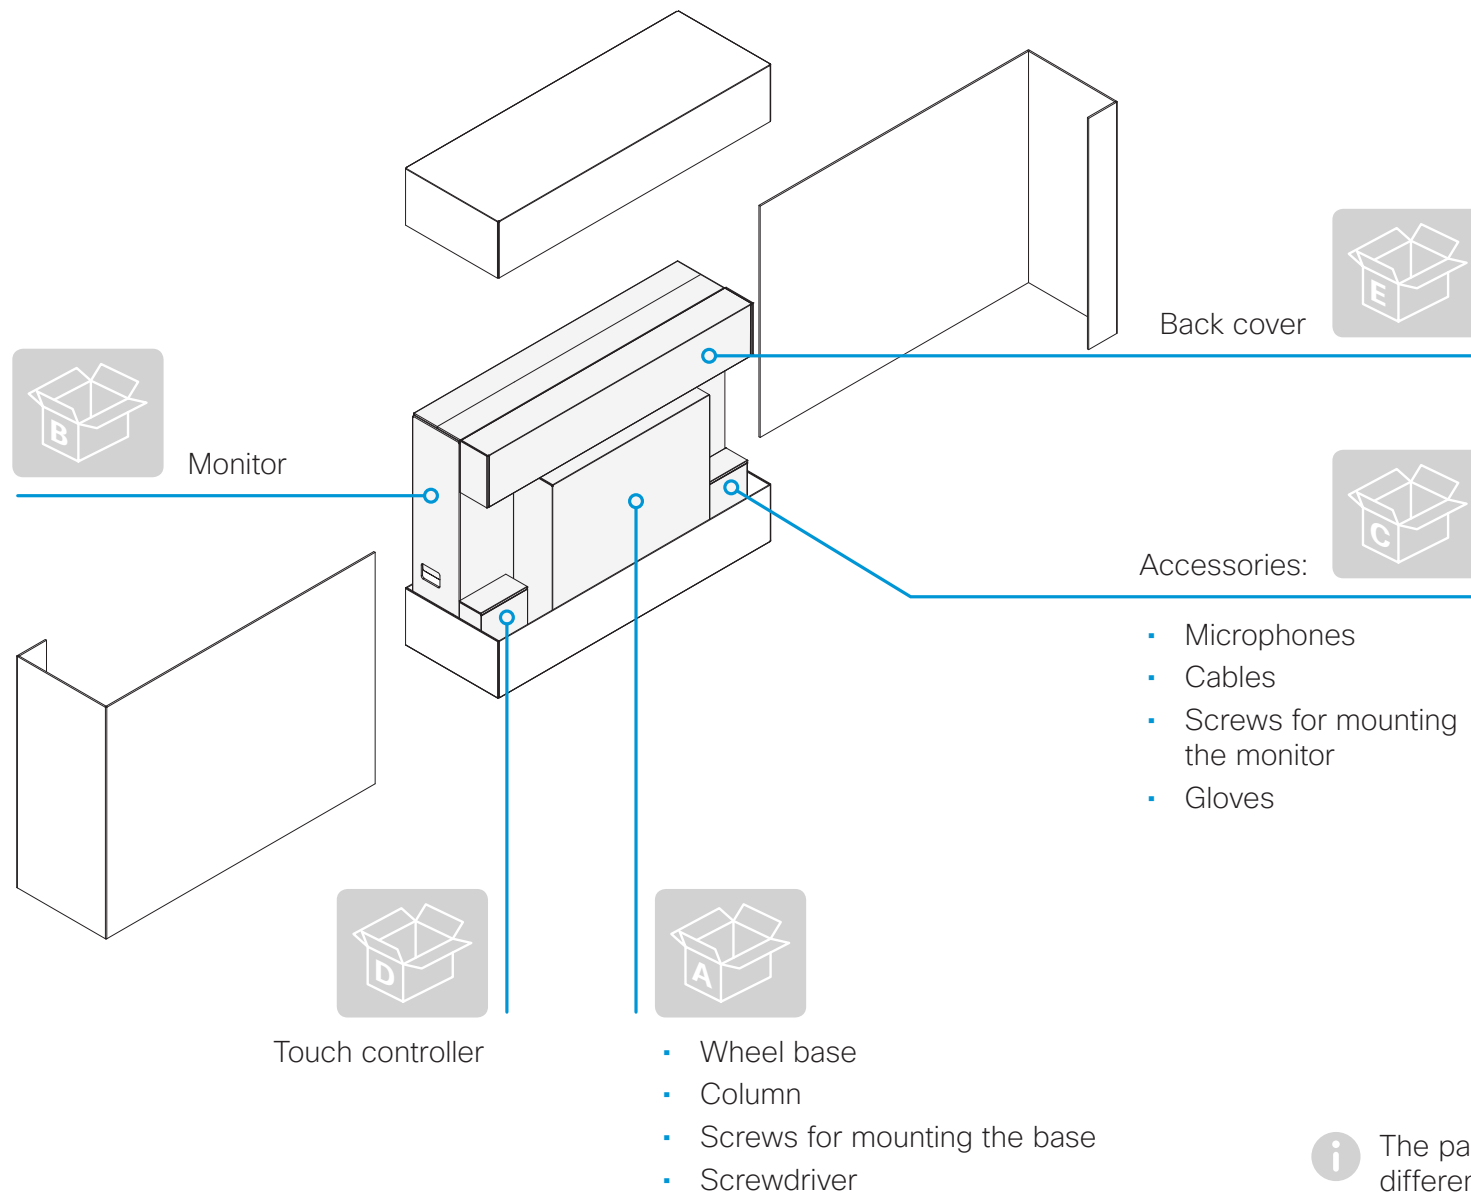

## 1 Mounting the wheel base


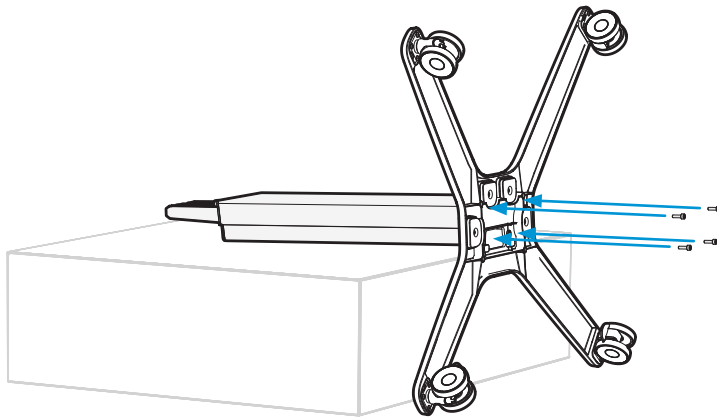 
 


**i** You may place the column on the empty wheel base box as illustrated. Then it is easier to enter the screws from below.

### Optional

   It is possible to replace the wheels with rubber pads. The rubber pads are kept underneath the wheel base, and must be moved to their correct position.

 M5x8 (Allen key, 3 mm)

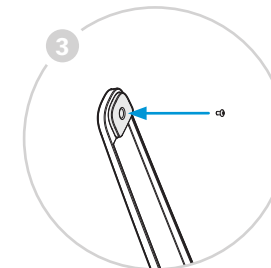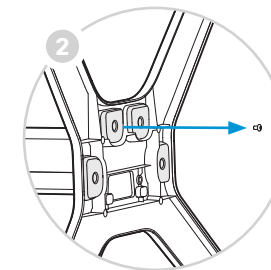
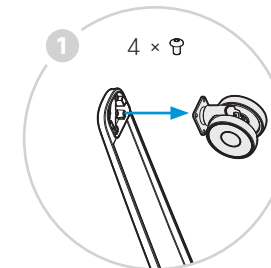



## 2 Mounting the monitor




Use gloves when handling the monitor.

   4 × M6x16

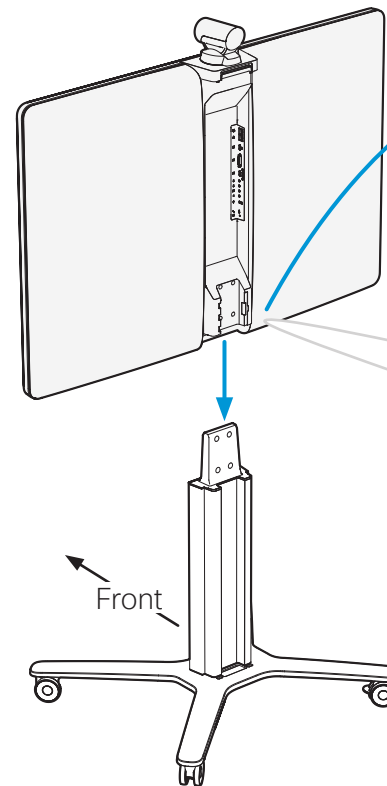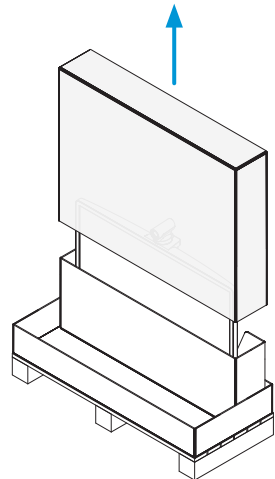


  Remove the cable channel lid for now. You need it in step 4.

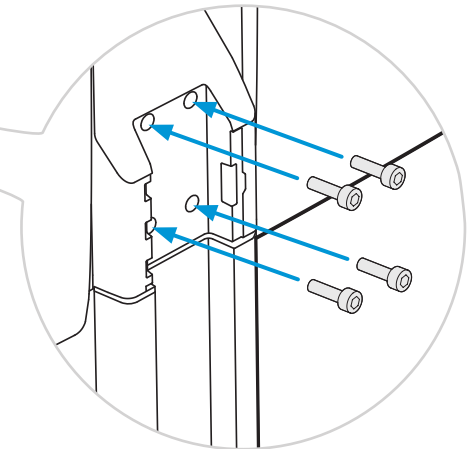

The monitor may be tilting slightly forward. If you gently pull it to a vertical position, the screws enter more easily.

## 3 Connecting the cables

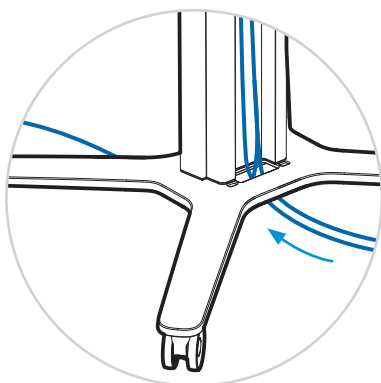 




Thread the cables up through the hole in the base.

Power switch →

Power (100-240 VAC, 50/60 Hz)



   
**Always use the provided power cable.**  
The wall socket outlet must be easily accessible after installation.

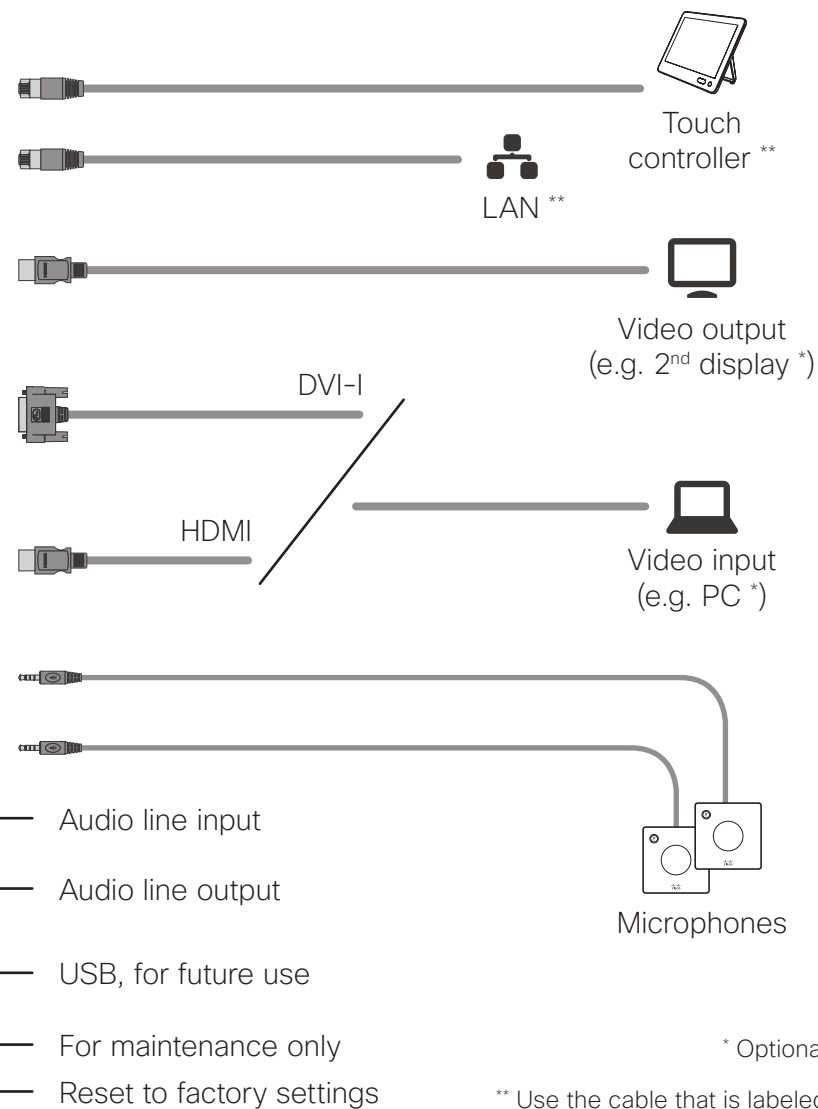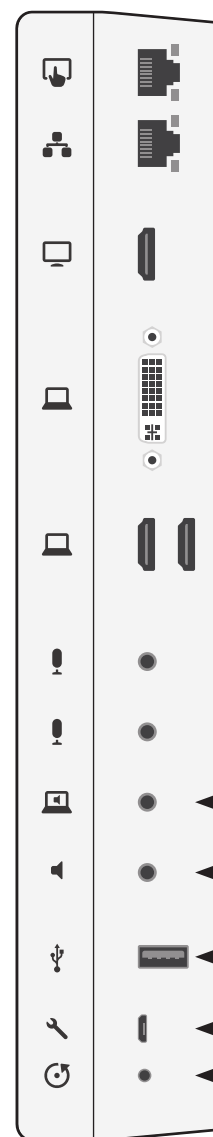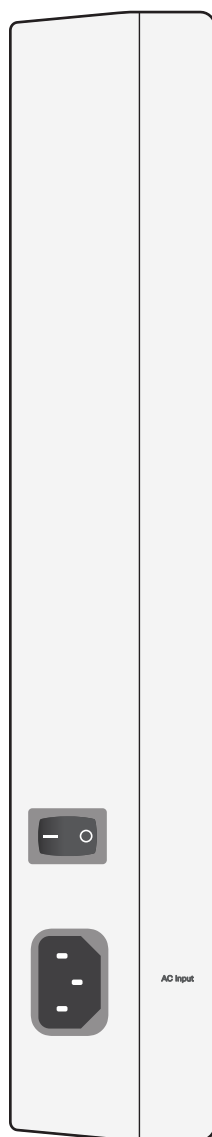

\* Optional

\*\* Use the cable that is labeled with for the Touch controller; use the cable that is labeled with for the LAN

## 4 Snapping on the cable channel lid

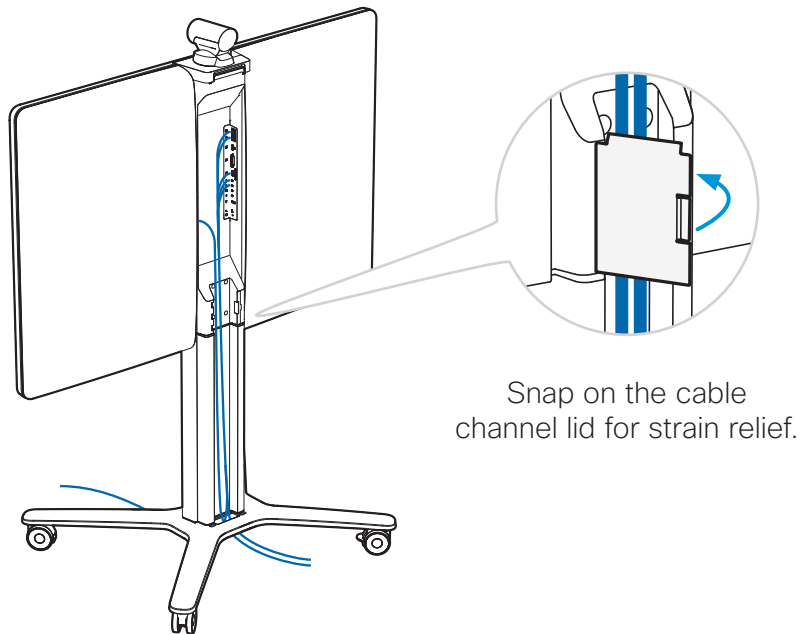 

Snap on the cable channel lid for strain relief.

Lead the cables out at the front or back as appropriate.

## 5 Starting up the system

- Connect to power and LAN/Ethernet.
- Switch on the system. The power switch is placed next to the power connector at the rear side of the system.



Wait while the unit starts up. Normally this takes a few minutes. It may include automatic software upgrade and restart of the Touch controller.

- Follow the instructions on the Touch controller.

 
Cisco Spark: To find more information on how to get started with Spark registered systems, visit <http://help.ciscospark.com> and look for Getting Started articles for room systems.

Other services: For further information on set-up and configuration, download the *Getting Started Guide* from the Cisco web site, <http://www.cisco.com/go/mx-docs>




Never move the camera manually when power is switched on; always use the camera control function on the Touch controller to change the camera position.

## 6 Mounting the back cover

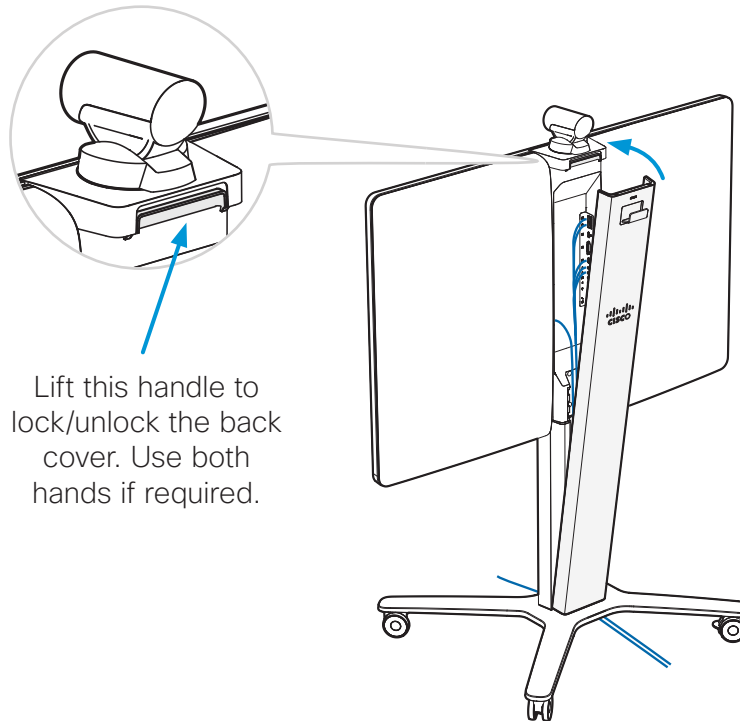

 Lift this handle to lock/unlock the back cover. Use both hands if required.

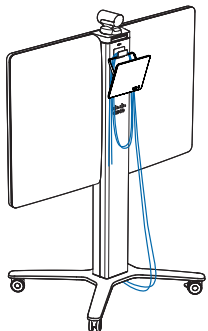

Wind up the cables on the hook on the back cover when rolling the unit.

### EMC Class A declaration

**WARNING:** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### 声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

On our web site you will find an overview of the worldwide Cisco contacts.

Go to: <http://www.cisco.com/go/offices>

Corporate Headquarters  
Cisco Systems, Inc.  
170 West Tasman Dr.  
San Jose, CA 95134 USA