

This installation guide covers MX200 G2 with a wall-mount.

Dimensions

Height: 745 mm / 29.3 in.
Width: 995 mm / 39.2 in.
Depth: 150 mm / 5.8 in.
Weight total: 26 kg / 57 lb
Weight monitor: 24 kg / 53 lb

Manpower



Two people working together are required to mount the system.

Room setup

Explore the Cisco Project Workplace website to find inspiration and guidelines when preparing your office or meeting room for video conferencing, http://www.cisco.com/go/projectworkplace



Documentation


Cisco Spark: Visit the Cisco Spark help site to find more information about Spark registered room systems, http://help.ciscospark.com



Other services: Visit the Cisco web site to find user guides and compliance and safety information for the video system, http://www.cisco.com/go/mx-docs





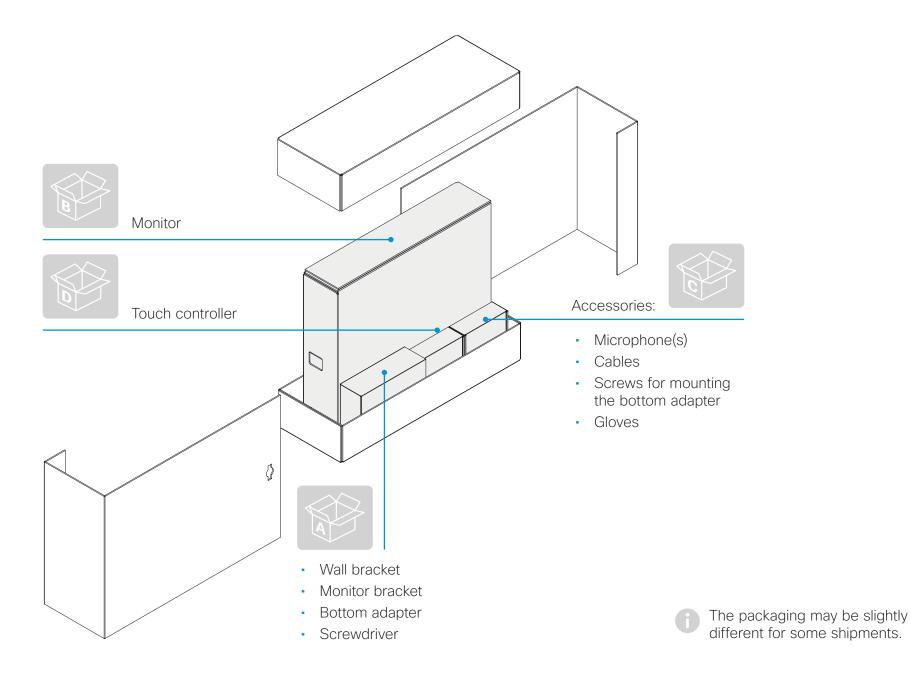



1 Mount the monitor bracket






Use gloves when handling the monitor.




Lay the monitor gently face down on a steady, soft surface.

Take care not to subject the camera for any stress.

Unscrew these four screws. You will re-use them when fastening the bracket.

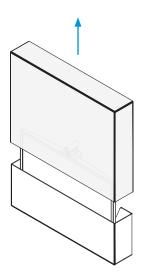

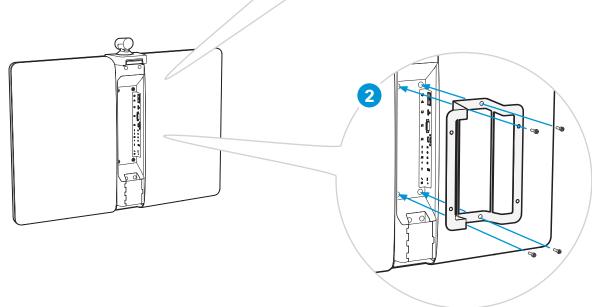



Fasten the bracket with the four screws that you just removed.



 Mount the bottom adapter






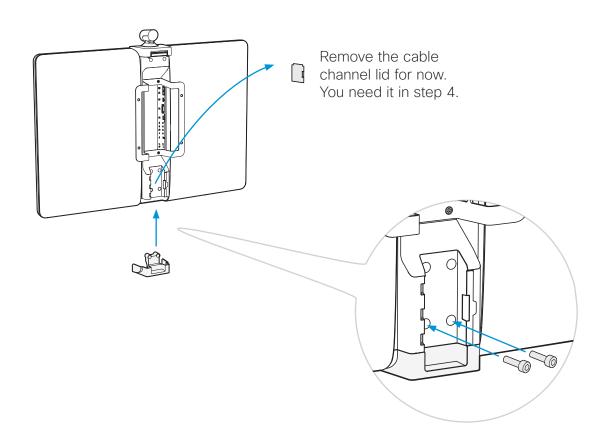




3 Connect the cables



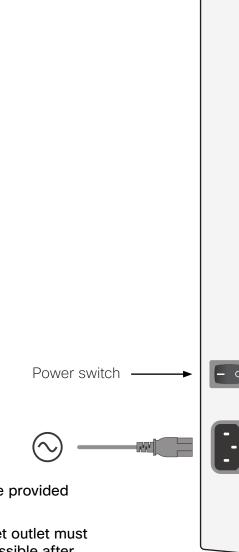

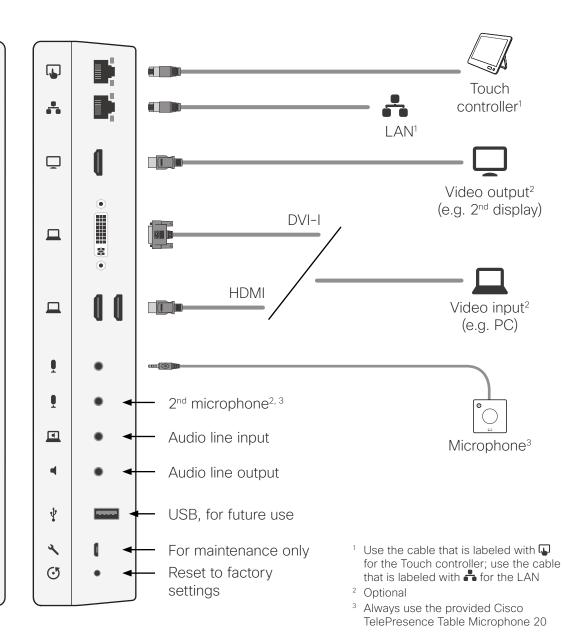



Power

(100-240 VAC, 50/60 Hz)


Always use the provided power cable.

The wall socket outlet must be easily accessible after installation.





Snap on the cable channel lid

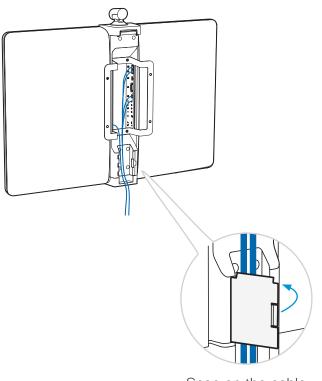

Snap on the cable channel lid for strain relief.



5

Mount the monitor to the wall





Use gloves when handling the monitor.

Due to the size and mass of this product, it is important that the wall-mounted system is safely installed according to these installation instructions.



safely support the product.

The wall-mounted system must be installed by qualified personnel, in accordance with state and


local building regulations.

The wall and mounting hardware must be able to




Fix the bracket to the wall with four screws. Use screws and anchors suiting your type of wall (not provided).

Verify that the bracket is level before securing it to the wall.

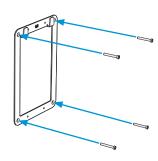

Recommended distance for regular meeting rooms:

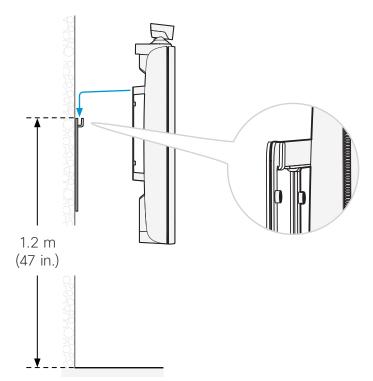




6

Start up the system

- Connect to power and LAN/Ethernet.
- Switch on the system.

The power switch is placed next to the power connector at the rear side of the system.

Wait while the unit starts up. Normally this takes a few minutes. It may include automatic software upgrade and restart of the Touch controller.

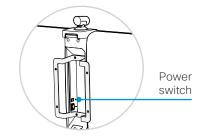

Follow the instructions on the Touch controller.

Cisco Spark: To find more information on how to get started with Spark registered systems, visit http://help.ciscospark.com and look for Getting Started articles for room systems.

Other services: For further information on set-up and configuration, download the *Getting Started Guide* from the Cisco web site, http://www.cisco.com/go/mx-docs



Never move the camera manually when power is switched on; always use the camera control function on the Touch controller to change the camera position.

EMC Class A declaration

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

声明

比为A级产品,在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户对其干扰采取切实可行的措施。

Cisco has more than 200 offices worldwide. Find an overview of the offices on the Cisco web site at http://www.cisco.com/go/offices

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)