


Cisco 2650XM Gateway-PBX Interoperability: Ericsson MD110 PBX Using Q.931 BRI Interfaces to an H.323 Gateway

Introduction

- This note describes the interoperability of a Ericsson MD110 PBX to a Cisco 2650XM router.
- The network topology diagram shows the set up for end-to-end interoperability between PBXs.

Network Topology

Basic Test Configuration

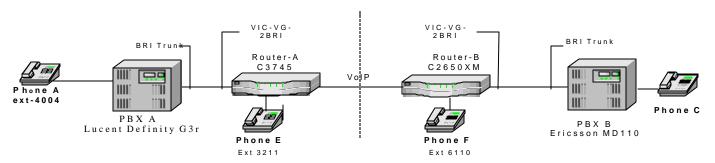

System Components

Hardware Requirements

· Cisco Hardware

Cisco 2650XM router with IP Communications Voice or Fax Network Module using the Voice Interface Card (VIC)-Voice Grade (VG)-dual Basic Rate Interface (BRI)

• PBX Hardware.

Ericsson MD110 - BC11 SPB / R4A

Software Requirements

- Cisco IOS Software Release 12.2(15)ZJ
- PBX Software Release 4A



Configuration

Configuring the Ericsson MD110 PBX BRI

CO Trunk

SYSTEM EQUIPMENT DATA

EQU	BOARDID	TYPE	DIR	ROU/TRU
001-0-42-00	58	SL60		40/001-01
001-0-42-01	58	SL60		40/001-02

Trunk Group

IDENTITY=D+S-EURO-TEST

VERSION=CXP1010001/3/BC11SP8/R4A

EXTERNAL DESTINATION ROUTE DATA

DEST	DRN ROU	CHO CUST	ADC	TRC	SRT	NUMACK	PRE

35 40 1225000000002501020011 0 3 0

ROUTE CATEGORY DATA

ROU SEL TRM SERV NODG DIST DISL TRAF SIG BCAP

40 211000000070001 5 0010000011 0 30 128 00151515 111110000031 001100

ROUTE DATA

ROU TYPE VARC VARI VARO FILTER

40 SL60 H'00000B14 H'3A820000 H'46415000 NO

ROUTE EQUIPMENT DATA

ROU		TRU	J	EQU		SQU	INDDA	Т
CNT	RL							
40		001	1	001-0-42	2-00		н'000	000000000
40		001	2	001-0-42	2-01		Н'000	000000000
ROU	TRU	TYPE	TRAFFIC S	TATE/PTR	LINE S	TATE/PTR	ADD INFO	
40	001-1	TL60	IDLE	#00D1	FREE	#00BD		
40	001-2	TL60	IDLE	#00D0	FREE	#00BC		



Configuring the Cisco 2651XM Router

```
Building configuration...
Current configuration : 2191 bytes
version 12.2
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
hostname C2651XM
boot system flash:c2600-js-mz-mcebu_sb.0.5.0
logging buffered 1000000 debugging
enable password cisco
ip subnet-zero
ip tcp synwait-time 13
no ip domain lookup
mpls ldp logging neighbor-changes
isdn switch-type basic-net3
voice-card 1
voice call carrier capacity active
!
no voice hpi capture buffer
no voice hpi capture destination
```



```
interface FastEthernet0/0
 ip address 100.1.1.2 255.255.255.0
no ip mroute-cache
duplex auto
 speed 100
interface FastEthernet0/1
 ip address 10.1.1.9 255.255.255.0
no ip mroute-cache
duplex auto
 speed auto
interface BRI1/0
no ip address
no ip route-cache
no ip mroute-cache
 isdn switch-type basic-net3
 isdn overlap-receiving
 isdn protocol-emlulate network
 isdn layer1-emulate network
 isdn incoming-voice voice
 isdn static-tei 0
 isdn skipsend-idverify
interface BRI1/1
no ip address
 shutdown
 isdn switch-type basic-net3
ip http server
ip classless
```



```
!
dialer-list 1 protocol ip permit
call rsvp-sync
voice-port 1/0/0
 compand-type a-law
voice-port 1/0/1
voice-port 1/1/0
voice-port 1/1/1
mgcp profile default
dial-peer cor custom
dial-peer voice 2 voip
 destination-pattern 2...
 session target ipv4:100.1.1.1
dial-peer voice 1 voip
 destination-pattern 3000
 session target ipv4:100.1.1.1
dial-peer voice 3 pots
 destination-pattern 1...
 direct-inward-dial
 port 1/0/0
 prefix 1
```



```
dial-peer voice 4 pots
destination-pattern 4000

!
!
line con 0
exec-timeout 0 0
line aux 0
exec-timeout 0 0
line vty 0 4
exec-timeout 0 0
password c
no login
line vty 5 15
no login
!
!
```

Important Information

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.





Corporate Headquarters

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA

www.cisco.com Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 526-4100

European Headquarters

Cisco Systems International BV Haarlerbergpark Haarlerbergweg 13-19 1101 CH Amsterdam The Netherlands

www-europe.cisco.com Tel: 31 0 20 357 1000

Fax: 31 0 20 357 1100

Americas Headquarters

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706

USA

www.cisco.com Tel: 408 526-7660 Fax: 408 527-0883

Asia Pacific Headquarters

Cisco Systems, Inc. Capital Tower 168 Robinson Road #22-01 to #29-01 Singapore 068912 www.cisco.com

Tel: +65 317 7777 Fax: +65 317 7799

Cisco Systems has more than 200 offices in the following countries and regions. Addresses, phone numbers, and fax numbers are listed on the Cisco Web site at www.cisco.com/go/offices.

Argentina • Australia • Australia • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE • Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico• The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia • Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe

Copyright 2004 Cisco Systems, Inc. All rights reserved. Cisco, Cisco Systems, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. All other trademarks mentioned in this document or Web site are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0301R)