cisco.

Appendix A: Post-Upgrade Checklist

Use the following checklist to verify operation of the system after you upgrade your software on a Cisco Vision Dynamic Signage Director server.

List Item	Checkoff
Complete any specific verification steps documented for your particular upgrade.	
2. Do the following in your browser:	
a. Clear the browser cache.	
b. Close all browser windows and wait for 10 seconds before restarting.	
Caution: Notify all Cisco Vision Dynamic Signage Director users about the mandatory requirement to clear their browser cache and to shutdown/restart the browser software before accessing the latest Cisco Vision Dynamic Signage Director software.	
Verify that the UI shows the Cisco Vision Dynamic Signage Director version and build number that you installed.	
4. If you are using phone control, verify that the phones work.	
5. If using IP phones for local TV control, verify you can successfully change channels.	
6. Verify that channel names and favorites are properly set.	
If using suite commerce integration, use the IP phone to verify you can successfully place an order.	
8. Verify that all devices are properly in the nonevent_group.	
Go to the System Status window in the UI and make sure that all relevant services are green.	
Note: If necessary, click the refresh button to re-poll all services for status. If needed, disable services that are not part of your installation.	
10. Verify that the devices have been rebooted and are running the latest system runtime version.	
Note: A manual reboot is required if a DMP firmware upgrade was not required for your release.	
11. Verify that all DMPs and TVs in the Device Management are green.	
12. Start an existing event script and validate that screens display the expected content.	

List Item	Checkoff
13. Stop the event script and validate that screens power off.	
14. Make a minor edit to the event script and make sure it saves.	
15. Verify that you can push a new video file in the Library -Content Management System (CMS) to the DMPs.	
16. If using dynamic menu boards, make a change to a menu item and verify that the change is reflected on the menu board.	
17. If using external content integration, be sure to re-enable your data sources and restart the External Content Integration application from the Data Integration > Manage tab.	
18. (As needed for sites that schedule the CMSRestartTask) Delete the CMSRestartTask from the Scheduled Tasks area of the System Configuration.Note: The CMS is automatically restarted after a backup runs.	
19. Perform a server backup for the upgrade configuration.	
20. After satisfying your site's testing and event requirements, fail back to the primary server and upgrade it to the same version of software that you validated on your secondary server.	
For more information, see "Configuring Failover Between Redundant Cisco Vision Dynamic Signage Director Servers" module in Cisco Vision Administration Guide: Dynamic Signage Director.	
21. After you perform failback, reconfigure your backup and restore environment using the Text-based Utility Interface (TUI).	