



## Preface

---

This preface includes the following sections:

- [Audience, on page i](#)
- [Document Conventions, on page i](#)
- [Related Documentation for Cisco Nexus 9000 Series Switches, on page ii](#)
- [Documentation Feedback, on page ii](#)
- [Communications, Services, and Additional Information, on page ii](#)

## Audience

This publication is for network administrators who install, configure, and maintain Cisco Nexus switches.

## Document Conventions

Command descriptions use the following conventions:

| Convention    | Description   |
|---------------|---|
| <b>bold</b>   | Bold text indicates the commands and keywords that you enter literally as shown.  |
| <i>Italic</i> | Italic text indicates arguments for which you supply the values.  |
| [x]           | Square brackets enclose an optional element (keyword or argument).  |
| [x   y]       | Square brackets enclosing keywords or arguments that are separated by a vertical bar indicate an optional choice.   |
| {x   y}       | Braces enclosing keywords or arguments that are separated by a vertical bar indicate a required choice.   |
| [x {y   z}]   | Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element. |

| Convention      | Description   |
|-----------------|---|
| <i>variable</i> | Indicates a variable for which you supply values, in context where italics cannot be used.                              |
| string          | A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks. |

Examples use the following conventions:

| Convention                  | Description   |
|-----------------------------|---|
| <code>screen font</code>    | Terminal sessions and information the switch displays are in screen font.                                 |
| <b>boldface screen font</b> | Information that you must enter is in boldface screen font.   |
| <i>italic screen font</i>   | Arguments for which you supply values are in italic screen font.  |
| <>                          | Nonprinting characters, such as passwords, are in angle brackets.   |
| [ ]                         | Default responses to system prompts are in square brackets.   |
| !, #                        | An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line. |

## Related Documentation for Cisco Nexus 9000 Series Switches

The entire Cisco Nexus 9000 Series switch documentation set is available at the following URL:

[http://www.cisco.com/en/US/products/ps13386/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps13386/tsd_products_support_series_home.html)

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to [nexus9k-docfeedback@cisco.com](mailto:nexus9k-docfeedback@cisco.com). We appreciate your feedback.

## Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

### **Cisco Bug Search Tool**

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.

