



X Show Commands

- [show](#), on page 2
- [show xml server logging configuration](#), on page 3
- [show xml server status](#), on page 4

show

show

Syntax Description

show	Show trigger config
------	---------------------

Command Mode

- /exec/elamns/se16

show xml server logging configuration

show xml server logging configuration

Syntax Description

show	Show running system information
xml	Show xmlagent logging configuration
server	xml agent server
logging	Show logging configuration and contents of logfile
configuration	Show facility logging configuration

Command Mode

- /exec

show xml server status

show xml server status

Syntax Description

show	to display xml agent information
xml	xml agent
server	xml agent server
status	display xml agent information

Command Mode

- /exec