



Monitoring and Maintaining Cisco Unified SRST

- [Monitoring and Maintaining Cisco Unified SRST, on page 1](#)

Monitoring and Maintaining Cisco Unified SRST

To monitor and maintain Cisco Unified Survivable Remote Site Telephony (SRST), use the following commands in privileged EXEC mode.

Command	Purpose
Router# show call-manager-fallback all	Displays the detailed configuration of all the Cisco Unified IP phones, voice ports, and dial peers of the Cisco Unified SRST Router.
Router# show call-manager-fallback dial-peer	Displays the output of the dial peers of the Cisco Unified SRST Router.
Router# show call-manager-fallback ephone-dn	Displays Cisco Unified IP Phone destination numbers when in Cisco Unified Communications Manager fallback mode.
Router# show call-manager-fallback voice-port	Displays output for the voice ports.
Router# show dial-peer voice summary	Displays a summary of all voice dial peers.
Router# show ephonephone	Displays Cisco Unified IP Phone status.
Router# show ephone offhook	Displays Cisco Unified IP Phone status for all phones that are off hook.
Router# show ephone registered	Displays Cisco Unified IP Phone status for all phones that are currently registered.
Router# show ephone remote	Displays Cisco Unified IP Phone status for all nonlocal phones (phones that have no Address Resolution Protocol [ARP] entry).
Router# show ephone ringing	Displays Cisco Unified IP Phone status for all phones that are ringing.

Command	Purpose
Router# show ephone summary	Displays a summary of all Cisco Unified IP Phones.
Router# show ephone telephone-number <i>phone-number</i>	Displays Unified IP Phone status for a specific phone number.
Router# show ephone unregistered	Displays Unified IP Phone status for all unregistered phones.
Router# show ephone-dn <i>tag</i>	Displays Unified IP Phone destination numbers.
Router# show ephone-dn summary	Displays a summary of all Cisco Unified IP Phone destination numbers.
Router# show ephone-dn loopback	Displays Cisco Unified IP Phone destination numbers in loopback mode.
Router# show running-config	Display the configuration.
Router# show sip-ua status registrar	Display SIP registrar clients.
Router# show voice port summary	Displays a summary of all voice ports.
Router# show voice register all	Displays all SIP SRST configurations, SIP phone registrations, and dial peer information.
Router# show voice register global	Displays voice register global config.
Router# show voice register pool all	Displays all config SIP phone voice register Pool detail information.
Router# show voice register pool <i>tag</i>	Displays specific SIP phone voice register Pool detail information.
Router# show voice register dial-peers	Displays SIP-SRST created dial peer.
Router# show voice register dn all	Displays all config voice register directory number detail information.
Router# show voice register dn <i>tag</i>	Displays specific voice register directory number detail information.