

Overview

• Introduction, on page 1

Introduction

Cisco HyperFlex currently supports two command line interfaces (CLI):

- hxcli
- stcli

The Cisco HyperFlex hxcli commands are replacing stcli commands. When possible, use the hxcli commands as they perform much faster than the same stcli commands.

Intended Audience

The Cisco HyperFlex CLI are intended for use by customers and partners. When performing advanced operations, TAC assistance is recommended.

Introduction