



## N:1 PVC Mapping to PWE with Nonunique VPIs



---

**Note** N:1 PVC Mapping to PWE with Nonunique VPIs is *not* supported on the Cisco ASR 900 RSP3 module

---

- [N:1 PVC Mapping to PWE with Nonunique VPIs, on page 1](#)

## N:1 PVC Mapping to PWE with Nonunique VPIs

The N:1 PVC Mapping to PseudoWire Emulation (PWE) with Nonunique virtual path identifiers (VPIs) feature maps one or more ATM permanent virtual circuits (PVCs) to a single pseudowire (PW). There are two modes of AAL0 encapsulation, N:1 and 1:1 mapping. In N:1 mapping, multiple unrelated virtual path identifier/virtual channel identifier (VPI/VCI) are carried over a single Multiprotocol Label Switching (MPLS) PW. This is an efficient mapping method because less resources are used from the MPLS network. In 1:1 mapping, a single VPI/VCI is carried over a single MPLS PW. Benefits of this feature include the following:

- Aggregate quality of service (QoS) can be applied to related PVCs.
- Bandwidth is conserved with the reduction in the number of pseudowires that are used.



---

**Note** This is not applicable for Cisco ASR 900 RSP3 Module.

---

## Restrictions for N:1 PVC Mapping to PWE with Nonunique VPIs

- N:1 permanent virtual circuits (PVC) mapping configuration is supported only on multipoint subinterfaces; it is not supported on main interfaces or point-to-point subinterfaces.
- N:1 PVC mapping mode is not supported on Access Circuit Redundancy subinterfaces.
- Preconfigured PVCs cannot exist on the multipoint subinterface on which you want to configure N:1 PVC mapping.
- An attachment circuit that has been bound to a pseudowire cannot be removed unless all Layer 2 virtual circuits (VCs) have been removed.
- Layer 3 PVCs cannot be configured on N:1 subinterfaces.

- Cell packing values configured under a VC class attached to the PVC, main interface, or subinterface will not be inherited by N:1 PVCs.
- Operation, Administration, and Maintenance (OAM) functionality is not supported on N:1 Layer 2 PVCs. OAM cells coming from the customer edge (CE) network will be treated as normal data traffic and will traverse through the pseudowire.
- Only ATM adaptation layer type 0 (AAL0) encapsulation is supported for N:1 PVCs.
- The service policy configuration can be configured only at the subinterface level for N:1 PVCs.
- ATM N:1 and PVP modes cannot be configured on different subinterfaces that belong to a physical interface.
- You cannot change the ATM interface mode from point-to-point to multipoint or from multipoint to point-to-point.
- If you change a layer 2 ATM interface to a layer 3 ATM interface, traffic will not flow.

## Information About N:1 PVC Mapping to PWE with Nonunique VPIs

### N:1 PVC Mapping to PWE with Nonunique VPIs Feature Description

To transport ATM cells over Multiprotocol Label Switching (MPLS), a VC is established between the provider edge (PE) routers on both ends of the MPLS backbone. With the N:1 permanent virtual circuit (PVC) Mapping to PseudoWire Emulation (PWE) with Nonunique VPIs feature, multiple PVCs irrespective of their Virtual Path Identifiers (VPIs), are transported over a single pseudowire configured on a subinterface. (“N:1” refers to the number of PVCs transported over one pseudowire). ATM cells are packed together in a single frame and sent over the single pseudowire. The ATM cell header information is packed together with the cell payload on a per-cell basis in the packets so that packets received at the egress end are unpacked and the ATM cells are mapped to the respective PVCs.

In N:1 PVC mapping mode, the device can pack cells only from a single PVC in an MPLS packet to transmit over a pseudowire; cells from multiple PVCs cannot be packed in a single MPLS packet and mapped to a single pseudowire for transmission. However, if a device receives an MPLS packet that is packed with cells from multiple PVCs, then those cells will be unpacked and sent to the respective PVCs.

## How to Configure N:1 PVC Mapping to PWE with Nonunique VPIs

### Configuring N:1 PVC Mapping to PWE with Nonunique VPIs

#### Procedure

|               | Command or Action                                      | Purpose                                                                 |
|---------------|--------------------------------------------------------|-------------------------------------------------------------------------|
| <b>Step 1</b> | <b>enable</b><br><br><b>Example:</b><br>Device> enable | Enables privileged EXEC mode.<br><br>• Enter your password if prompted. |
| <b>Step 2</b> | <b>configure terminal</b><br><br><b>Example:</b>       | Enters global configuration mode.                                       |

|                | Command or Action                                                                                                                | Purpose                                                                                                                                                                                                                                                                                |
|----------------|----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                | Device# configure terminal                                                                                                       |                                                                                                                                                                                                                                                                                        |
| <b>Step 3</b>  | <b>interface atm slot/subslot/port</b><br><b>Example:</b><br>Device(config)# interface atm 9/1/1                                 | Enables the ATM interface and enters interface configuration mode.                                                                                                                                                                                                                     |
| <b>Step 4</b>  | <b>atm mcpt-timers timer1 timer2 timer3</b><br><b>Example:</b><br>Device(config-if)# atm mcpt-timers 100<br>200 300              | Sets the Maximum Cell Packing Timeout (MCPT) values in microseconds. <ul style="list-style-type: none"> <li>The MCPT timer sets the time for which the device waits for the raw cells (AAL0 encapsulation) to be packed into a single packet for punting to the pseudowire.</li> </ul> |
| <b>Step 5</b>  | <b>exit</b><br><b>Example:</b><br>Device(config-if)# exit                                                                        | Exits interface configuration mode.                                                                                                                                                                                                                                                    |
| <b>Step 6</b>  | <b>configure terminal</b><br><b>Example:</b><br>Device# configure terminal                                                       | Enters global configuration mode.                                                                                                                                                                                                                                                      |
| <b>Step 7</b>  | <b>interface atm slot/subslot/port.subslot multipoint</b><br><b>Example:</b><br>Device(config)# interface atm 9/1/1.1 multipoint | Enters subinterface configuration mode and creates a multipoint subinterface on the given port on the specified ATM Shared Port Adapter (SPA).                                                                                                                                         |
| <b>Step 8</b>  | <b>no ip address</b><br><b>Example:</b><br>Device(config-subif)# no ip address                                                   | Removes the interface IP address.                                                                                                                                                                                                                                                      |
| <b>Step 9</b>  | <b>atm enable-ilmi-trap</b><br><b>Example:</b><br>Device(config-subif)# atm enable-ilmi-trap                                     | Generates an Integrated Local Management Interface (ILMI) atmVccChange trap when an ATM interface or subinterface is enabled or shut down.                                                                                                                                             |
| <b>Step 10</b> | <b>cell-packing maxcells mcpt-timer timer-number</b><br><b>Example:</b><br>Device(config-subif)# cell-packing 20 mcpt-timer 2    | Enables ATM over MPLS to pack multiple ATM cells into each MPLS packet within the MCPT timing.                                                                                                                                                                                         |
| <b>Step 11</b> | <b>xconnect peer-ipaddress vc-id encapsulation mpls</b><br><b>Example:</b>                                                       | (Optional) Enables the attachment circuit and specifies the IP address of the peer, a VC ID, and the data encapsulation method.                                                                                                                                                        |

|                | Command or Action                                                                                    | Purpose                                                                    |
|----------------|------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
|                | Device(config-subif)# xconnect 10.1.1.1<br>100 encapsulation mpls                                    |                                                                            |
| <b>Step 12</b> | <b>pvc vpi/vci l2transport</b><br><b>Example:</b><br>Device(config-subif)# pvc 10/100<br>l2transport | Assigns a VPI and virtual channel identifier (VCI).                        |
| <b>Step 13</b> | Repeat Step 12 for the number of PVCs that you want to configure.                                    | —                                                                          |
| <b>Step 14</b> | <b>end</b><br><b>Example:</b><br>Device(config-subif)# end                                           | Exits subinterface configuration mode and returns to privileged EXEC mode. |

## Configuring N:1 PVC Mapping to PWE with Nonunique VPIs using the commands associated with the L2VPN Protocol-Based CLIs feature

### Procedure

|               | Command or Action                                                                                                   | Purpose                                                                                                                                                                                                                                                                                  |
|---------------|---------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <b>enable</b><br><b>Example:</b><br>Device> enable                                                                  | Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>                                                                                                                                                                       |
| <b>Step 2</b> | <b>configure terminal</b><br><b>Example:</b><br>Device# configure terminal                                          | Enters global configuration mode.                                                                                                                                                                                                                                                        |
| <b>Step 3</b> | <b>interface atm slot/subslot/port</b><br><b>Example:</b><br>Device(config)# interface atm 9/1/1                    | Enables the ATM interface and enters interface configuration mode.                                                                                                                                                                                                                       |
| <b>Step 4</b> | <b>atm mcpt-timers timer1 timer2 timer3</b><br><b>Example:</b><br>Device(config-if)# atm mcpt-timers 100<br>200 300 | Sets the Maximum Cell Packing Timeout (MCPT) values in microseconds. <ul style="list-style-type: none"> <li>• The MCPT timer sets the time for which the device waits for the raw cells (AAL0 encapsulation) to be packed into a single packet for punting to the pseudowire.</li> </ul> |
| <b>Step 5</b> | <b>exit</b><br><b>Example:</b><br>Device(config-if)# exit                                                           | Exits interface configuration mode.                                                                                                                                                                                                                                                      |

|                | Command or Action                                                                                                                                    | Purpose                                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 6</b>  | <b>configure terminal</b><br><b>Example:</b><br>Device# configure terminal                                                                           | Enters global configuration mode.                                                                                                              |
| <b>Step 7</b>  | <b>interface atm <i>slot/subslot/port.subslot</i></b><br><b>multipoint</b><br><b>Example:</b><br>Device(config)# interface atm 9/1/1.1<br>multipoint | Enters subinterface configuration mode and creates a multipoint subinterface on the given port on the specified ATM Shared Port Adapter (SPA). |
| <b>Step 8</b>  | <b>no ip address</b><br><b>Example:</b><br>Device(config-subif)# no ip address                                                                       | Removes the interface IP address.                                                                                                              |
| <b>Step 9</b>  | <b>atm enable-ilmi-trap</b><br><b>Example:</b><br>Device(config-subif)# atm<br>enable-ilmi-trap                                                      | Generates an Integrated Local Management Interface (ILMI) atmVccChange trap when an ATM interface or subinterface is enabled or shut down.     |
| <b>Step 10</b> | <b>cell-packing <i>maxcells</i> mcpt-timer</b><br><b>timer-number</b><br><b>Example:</b><br>Device(config-subif)# cell-packing 20<br>mcpt-timer 2    | Enables ATM over MPLS to pack multiple ATM cells into each MPLS packet within the MCPT timing.                                                 |
| <b>Step 11</b> | <b>end</b><br><b>Example:</b><br>Router(config-subif)# end                                                                                           | Exits to privileged EXEC mode.                                                                                                                 |
| <b>Step 12</b> | <b>interface pseudowire <i>number</i></b><br><b>Example:</b><br>Router(config)# interface pseudowire<br>100                                          | Specifies the pseudowire interface and enters interface configuration mode.                                                                    |
| <b>Step 13</b> | <b>encapsulation mpls</b><br><b>Example:</b><br>Router(config-if)# encapsulation mpls                                                                | Specifies that Multiprotocol Label Switching (MPLS) is used as the data encapsulation method.                                                  |
| <b>Step 14</b> | <b>neighbor <i>peer-address vcid-value</i></b><br><b>Example:</b><br>Router(config-if)# neighbor 10.1.1.1<br>100                                     | Specifies the peer IP address and virtual circuit (VC) ID value of the Layer 2 VPN (L2VPN) pseudowire.                                         |

|                | Command or Action                                                                                                               | Purpose                                                                                     |
|----------------|---------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <b>Step 15</b> | <b>exit</b><br><b>Example:</b><br><br>Router(config-if)# exit                                                                   | Exits interface configuration mode.                                                         |
| <b>Step 16</b> | <b>l2vpn xconnect context context-name</b><br><b>Example:</b><br><br>Router(config)# l2vpn xconnect context con1                | Creates a Layer 2 VPN (L2VPN) cross connect context and enters xconnect configuration mode. |
| <b>Step 17</b> | <b>member pseudowire interface-number</b><br><b>Example:</b><br><br>Router(config-xconnect)# member pseudowire 100              | Specifies a member pseudowire to form a Layer 2 VPN (L2VPN) cross connect.                  |
| <b>Step 18</b> | <b>member gigabitethernet interface-number</b><br><b>Example:</b><br><br>Router(config-xconnect)# member GigabitEthernet0/0/0.1 | Specifies the location of the Gigabit Ethernet member interface.                            |
| <b>Step 19</b> | <b>end</b><br><b>Example:</b><br><br>Router(config-xconnect)# end                                                               | Exits to privileged EXEC mode.                                                              |
| <b>Step 20</b> | <b>pvc vpi/vci l2transport</b><br><b>Example:</b><br><br>Device(config-subif)# pvc 10/100 l2transport                           | Assigns a VPI and virtual channel identifier (VCI).                                         |
| <b>Step 21</b> | Repeat Step 12 for the number of PVCs that you want to configure.                                                               | —                                                                                           |
| <b>Step 22</b> | <b>end</b><br><b>Example:</b><br><br>Device(config-subif)# end                                                                  | Exits subinterface configuration mode and returns to privileged EXEC mode.                  |

## Configuration Examples for N:1 PVC Mapping to PWE with Nonunique VPIs

### Example: Configuring N:1 PVC Mapping to PWE with Nonunique VPIs

The following example shows how to configure the N:1 ATM permanent virtual circuit (PVC) mapping to pseudowires with non unique virtual path identifiers ( VPIs):

```

Device> enable
Device# configure terminal
Device(config)# interface atm 0/1/0
Device(config-if)# atm mcpt-timers 500 5000 50000
Device(config-if)# exit
Device# configure terminal
Device(config)# interface atm 0/1/0.1 multipoint
Device(config-subif)# no ip address
Device(config-subif)# atm enable-ilmi-trap
Device(config-subif)# cell packing 20 mcpt-timer 2
Device(config-subif)# xconnect 10.1.1.1 100 encapsulation mpls
Device(config-subif)# pvc 10/100 l2transport
Device(config-subif)# pvc 11/122 l2transport
Device(config-subif)# pvc 19/231 l2transport
Device(config-subif)# end

```

## Example: Configuring N:1 PVC Mapping to PWE with Nonunique VPIs using the commands associated with the L2VPN Protocol-Based CLIs feature

The following example shows how to configure the N:1 ATM permanent virtual circuit (PVC) mapping to pseudowires with non unique virtual path identifiers ( VPIs):

```

Router> enable
Router# configure terminal
Router(config)# interface atm 0/1/1
Router(config-if)# atm mcpt-timers 500 5000 50000
Router(config-if)# exit
Router(config)# configure terminal
Router(config)# interface atm 0/1/1.1 multipoint
Router(config-subif)# no ip address
Router(config-subif)# atm enable-ilmi-trap
Router(config-subif)# cell packing 20 mcpt-timer 2
Router(config-subif)# exit
Router(config)# interface pseudowire 100
Router(config-if)# encapsulation mpls
Router(config-if)# neighbor 10.1.1.1 100
Router(config-if)# pvc 10/100 l2transport
Router(config-if)# pvc 11/122 l2transport
Router(config-if)# pvc 19/231 l2transport
Router(config-if)# exit
Router(config)# l2vpn xconnect context A
Router(config-xconnect)# member pseudowire 100
Router(config-xconnect)# member atm 9/1/1
Router(config-xconnect)# end

```

## Verifying the N:1 PVC Mapping to PWE with Nonunique VPIs Configuration

To verify the N:1 PVC Mapping to PWE with Nonunique VPIs Configuration, use the **show mpls l2transport vc** command in user EXEC or privileged EXEC mode.

```
Router# show mpls l2transport vc
```

| Local intf | Local circuit       | Dest address | VC ID | Status |
|------------|---------------------|--------------|-------|--------|
| AT0/1/1.1  | ATM CELL ATM0/1/1.1 | 2.2.2.2      | 100   | UP     |

```

interface ATM0/0/0.1/1/1/1
 atm mcpt-timers 20 30 40

interface ATM0/0/0.1/1/1/1.1 multipoint
 no ip address
 no atm enable-ilmi-trap
 cell-packing 2 mcpt-timer 1
 xconnect 2.2.2.2 100 encapsulation mpls
 pvc 10/100 l2transport
 pvc 20/200 l2transport
 pvc 30/300 l2transport

```

## Additional References

### Related Documents

| Related Topic | Document Title                                               |
|---------------|--------------------------------------------------------------|
| ATM commands  | <a href="#">Asynchronous Transfer Mode Command Reference</a> |

### Technical Assistance

| Description                                                                                                                                                                                                                                                                                                                                                                           | Link                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password. | <a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a> |