



Configuring IP SLAs DLSw+ Operations

Last Updated: March 22, 2011

This module describes how to configure the IP Service Level Agreements (SLAs) Data Link Switching Plus (DLSw+) operation to measure and analyze the DLSw+ protocol stack and network response time between DLSw+ peers.

- [Finding Feature Information, page 1](#)
- [Prerequisites, page 1](#)
- [Information About IP SLAs DLSw+ Operations, page 2](#)
- [How to Configure IP SLAs DLSw+ Operations, page 2](#)
- [Configuration Examples for IP SLAs DLSw+ Operations, page 8](#)
- [Additional References, page 9](#)
- [Feature Information for Cisco IOS IP SLAs DLSw+ Operations, page 10](#)
- [, page 10](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

Prerequisites

A connected DLSw+ peer between the source and destination networking devices must be configured.

Information About IP SLAs DLSw+ Operations

- [DLSw+ Operation, page 2](#)

DLSw+ Operation

The Cisco IOS IP SLAs DLSw+ operation measures the DLSw+ protocol stack and network response time between DLSw+ peers. DLSw+ is the enhanced Cisco version of RFC 1795. DLSw+ tunnels non-routable Layer 2 traffic such as Systems Network Architecture (SNA) traffic over IP backbones via TCP. The networking devices performing the tunneling of non-routable traffic into TCP/IP are referred to as DLSw+ peers. DLSw+ peers normally communicate through TCP port 2065. The destination networking device does not have to be a Cisco router if it supports RFC 1795.

In the figure below, Router A is configured as the source IP SLAs device and a DLSw+ operation is configured with Router B as the remote DLSw+ peer. Router A and Router B are configured as connected DLSw+ peers. The peer (destination device) does not have to run a Cisco IOS IP SLA-capable image.

Figure 1: DLSw+ Operation



Network response time is computed by measuring the round-trip time (RTT) taken to connect to the remote DLSw+ peer using TCP. This operation does not use the IP SLAs Responder.

How to Configure IP SLAs DLSw+ Operations

- [Configuring IP SLAs DLSw+ Operations, page 2](#)
- [Scheduling IP SLAs Operations, page 6](#)

Configuring IP SLAs DLSw+ Operations



Note

There is no need to configure an IP SLAs responder on the destination device.

Perform one of the following tasks:

- [Configuring a Basic DLSw+ Operation on the Source Device, page 3](#)
- [Configuring an IP SLAs DLSw+ Operation with Optional Parameters on the Source Device, page 4](#)

Configuring a Basic DLSw+ Operation on the Source Device

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip sla *operation-number***
4. **dlsw peer-ipaddr *ip-address***
5. **frequency *seconds***
6. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	ip sla <i>operation-number</i> Example: Router(config)# ip sla 10	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
Step 4	dlsw peer-ipaddr <i>ip-address</i> Example: Router(config-ip-sla)# dlsw peer-ipaddr 172.21.27.11	Defines a DLSw+ operation and enters IP SLA DLSw+ configuration mode.
Step 5	frequency <i>seconds</i> Example: Router(config-ip-sla-dlsw)# frequency 30	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
Step 6	end Example: Router(config-ip-sla-dlsw)# end	Exits to privileged EXEC mode.

Configuring an IP SLAs DLSw+ Operation with Optional Parameters on the Source Device

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip sla *operation-number***
4. **dlsw peer-ipaddr *ip-address***
5. **history buckets-kept *size***
6. **history distributions-of-statistics-kept *size***
7. **history enhanced [*interval seconds*] [**buckets *number-of-buckets***]**
8. **history filter { **none** | **all** | **overThreshold** | **failures** }**
9. **frequency *seconds***
10. **history hours-of-statistics-kept *hours***
11. **history lives-kept *lives***
12. **owner *owner-id***
13. **request-data-size *bytes***
14. **history statistics-distribution-interval *milliseconds***
15. **tag *text***
16. **threshold *milliseconds***
17. **timeout *milliseconds***
18. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	ip sla <i>operation-number</i> Example: Router(config)# ip sla 10	Begins configuration for an IP SLAs operation and enters IP SLA configuration mode.
Step 4	dlsw peer-ipaddr <i>ip-address</i>	Defines a DLSw+ operation and enters IP SLA DLSw configuration mode.

	Command or Action	Purpose
	<p>Example:</p> <pre>Router(config-ip-sla)# dlsw peer-ipaddr 172.21.27.11</pre>	
Step 5	<p>history buckets-kept <i>size</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history buckets-kept 25</pre>	(Optional) Sets the number of history buckets that are kept during the lifetime of an IP SLAs operation.
Step 6	<p>history distributions-of-statistics-kept <i>size</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history distributions-of-statistics-kept 5</pre>	(Optional) Sets the number of statistics distributions kept per hop during an IP SLAs operation.
Step 7	<p>history enhanced [<i>interval seconds</i>] [<i>buckets number-of-buckets</i>]</p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history enhanced interval 900 buckets 100</pre>	(Optional) Enables enhanced history gathering for an IP SLAs operation.
Step 8	<p>history filter {<i>none</i> <i>all</i> <i>overThreshold</i> <i>failures</i>}</p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history filter failures</pre>	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.
Step 9	<p>frequency <i>seconds</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# frequency 30</pre>	(Optional) Sets the rate at which a specified IP SLAs operation repeats.
Step 10	<p>history hours-of-statistics-kept <i>hours</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# hours-of-statistics-kept 4</pre>	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs operation.
Step 11	<p>history lives-kept <i>lives</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history lives-kept 5</pre>	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.
Step 12	<p>owner <i>owner-id</i></p>	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP SLAs operation.

	Command or Action	Purpose
	<p>Example:</p> <pre>Router(config-ip-sla-dlsw)# owner admin</pre>	
Step 13	<p>request-data-size <i>bytes</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# request-data-size 64</pre>	(Optional) Sets the protocol data size in the payload of an IP SLAs operation's request packet.
Step 14	<p>history statistics-distribution-interval <i>milliseconds</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# history statistics-distribution-interval 10</pre>	(Optional) Sets the time interval for each statistics distribution kept for an IP SLAs operation.
Step 15	<p>tag <i>text</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# tag TelnetPollServer1</pre>	(Optional) Creates a user-specified identifier for an IP SLAs operation.
Step 16	<p>threshold <i>milliseconds</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# threshold 10000</pre>	(Optional) Sets the upper threshold value for calculating network monitoring statistics created by an IP SLAs operation.
Step 17	<p>timeout <i>milliseconds</i></p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# timeout 10000</pre>	(Optional) Sets the amount of time an IP SLAs operation waits for a response from its request packet.
Step 18	<p>end</p> <p>Example:</p> <pre>Router(config-ip-sla-dlsw)# exit</pre>	Exits to privileged EXEC mode.

Scheduling IP SLAs Operations



Note

- All IP SLAs operations to be scheduled must be already configured.
- The frequency of all operations scheduled in a multioperation group must be the same.
- List of one or more operation ID numbers to be added to a multioperation group is limited to a maximum of 125 characters, including commas (,).

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. Do one of the following:
 - **ip sla schedule** *operation-number* [**life** {**forever** | *seconds*}] [**start-time** {*hh : mm[: ss]* [*month day* | *day month*]} | **pending** | **now** | **after** *hh : mm : ss*}] [**ageout** *seconds*] [**recurring**]
 - **ip sla group schedule** *group-operation-number* *operation-id-numbers* **schedule-period** *schedule-period-range* [**ageout** *seconds*] [**frequency** *group-operation-frequency*] [**life**{**forever** | *seconds*}] [**start-time**{*hh:mm[:ss]* [*month day* | *day month*]} | **pending** | **now** | **after** *hh:mm:ss*}]
4. **exit**
5. **show ip sla group schedule**
6. **show ip sla configuration**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	Do one of the following: <ul style="list-style-type: none"> • ip sla schedule <i>operation-number</i> [life {forever <i>seconds</i>}] [start-time {<i>hh : mm[: ss]</i> [<i>month day</i> <i>day month</i>]} pending now after <i>hh : mm : ss</i>}] [ageout <i>seconds</i>] [recurring] • ip sla group schedule <i>group-operation-number</i> <i>operation-id-numbers</i> schedule-period <i>schedule-period-range</i> [ageout <i>seconds</i>] [frequency <i>group-operation-frequency</i>] [life{forever <i>seconds</i>}] [start-time{<i>hh:mm[:ss]</i> [<i>month day</i> <i>day month</i>]} pending now after <i>hh:mm:ss</i>}] Example: Router(config)# ip sla schedule 10 start-time now life forever Example: Router(config)# ip sla group schedule 1 3,4,6-9	For individual IP SLAs operations only: Configures the scheduling parameters for an individual IP SLAs operation. or For multioperation scheduler only: Specifies an IP SLAs operation group number and the range of operation numbers to be scheduled in global configuration mode.
Step 4	exit	Exits to privileged EXEC mode.

	Command or Action	Purpose
	Example: Router(config)# exit	
Step 5	show ip sla group schedule Example: Router# show ip sla group schedule	(Optional) Displays the IP SLAs group schedule details.
Step 6	show ip sla configuration Example: Router# show ip sla configuration	(Optional) Displays the IP SLAs configuration details.

- [Troubleshooting Tips, page 8](#)
- [What to Do Next, page 8](#)

Troubleshooting Tips

- If the IP SLAs operation is not running and generating statistics, add the **verify-data** command to the configuration of the operation (while configuring in IP SLA configuration mode) to enable data verification. When enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debugipsla trace** and **debug ip sla error** commands to help troubleshoot issues with an IP SLAs operation.

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps, or for starting another operation, to an IP SLAs operation, see the "Configuring Proactive Threshold Monitoring" section.

To view and interpret the results of an IP SLAs operation use the **show ip sla statistics** command. Checking the output for fields that correspond to criteria in your service level agreement will help you determine whether the service metrics are acceptable.

Configuration Examples for IP SLAs DLSw+ Operations

- [Example IP SLAs DLSw+ Operation Configuration, page 8](#)

Example IP SLAs DLSw+ Operation Configuration

The following example shows the configuration for a DLSw+ operation from Router A to Router B, a remote DLSw+ peer. Router B is configured as a DLSw+ peer and Router A is specified as the remote (connected) DLSw+ peer. Router A is then configured as a DLSw+ peer with Router B as the connected

DLSw+ peer, and the IP SLAs DLSw+ operation parameters are configured. The operation is scheduled to start immediately and run for 7200 seconds (2 hours).

Router B Configuration

```
configure terminal
dlsw local-peer peer-id 172.21.27.11
dlsw remote-peer 0 tcp 172.20.26.10
```

Router A Configuration

```
dlsw local-peer peer-id 172.20.26.10
dlsw remote-peer 0 tcp 172.21.27.11
ip sla 14
  dlsw peer-ipaddr 172.21.27.11
  frequency 50
  timeout 50000
  tag DLSw-Test
exit
ip sla schedule 14 life 7200 start-time now
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
Cisco IOS IP SLAs commands	<i>Cisco IOS IP SLAs Command Reference</i>
Cisco IOS IP SLAs: general information	Configuring IOS IP SLAs Overview chapter of the <i>Cisco IOS IP SLAs Configuration Guide</i> .

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	--

MIBs

MIBs	MIBs Link
CISCO-RTTMON-MIB	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFCs	Title
RFC 1795	Data Link Switching: Switch-to-Switch Protocol

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for Cisco IOS IP SLAs DLSw+ Operations

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

Table 1: Feature Information for Cisco IOS IP SLAs DLSw+ Operations

Feature Name	Releases	Feature Information
IP SLAs DLSw+ Operation	12.3(14)T 15.0(1)S	The Cisco IOS IP SLAs Data Link Switching Plus (DLSw+) operation allows you to schedule and measure the DLSw+ protocol stack and network response time between DLSw+ peers

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams,

and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.