



## RADIUS for Multiple UDP Ports

---

RADIUS security servers are identified on the basis of their hostname or IP address, hostname and specific UDP port numbers, or IP address and specific UDP port numbers. The combination of the IP address and UDP port number creates a unique identifier, allowing different ports to be individually defined as RADIUS hosts providing a specific authentication, authorization, and accounting (AAA) service. This unique identifier enables RADIUS requests to be sent to multiple UDP ports on a server at the same IP address. If two different host entries on the same RADIUS server are configured for the same service—for example, accounting—the second host entry configured acts as a failover backup to the first one. If the first host entry fails to provide accounting services, the network access server tries the second host entry configured on the same device for accounting services.

- [Finding Feature Information, page 1](#)
- [Prerequisites for RADIUS for Multiple UDP Ports, page 1](#)
- [Information About RADIUS for Multiple UDP Ports, page 2](#)
- [How to Configure RADIUS for Multiple UDP Ports, page 3](#)
- [Configuration Examples for RADIUS for Multiple UDP Ports, page 4](#)
- [Additional References, page 5](#)
- [Feature Information for RADIUS for Multiple UDP Ports, page 6](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Prerequisites for RADIUS for Multiple UDP Ports

To configure RADIUS on your Cisco device or access server, you must perform these tasks:

- Use the **aaa new-model** global configuration command to enable AAA. AAA must be configured if you plan to use RADIUS.
- Use the **aaa authentication** global configuration command to define method lists for RADIUS authentication.
- Use **line** and **interface** commands to enable the defined method lists to be used.

## Information About RADIUS for Multiple UDP Ports

### Device-to-RADIUS Server Communication

The RADIUS host is normally a multiuser system running RADIUS server software from Cisco (CiscoSecure ACS), Livingston, Merit, Microsoft, or another software provider. Configuring device to RADIUS server communication can have several components:

- Hostname or IP address
- Authentication destination port
- Accounting destination port
- Timeout period
- Retransmission value
- Key string

RADIUS security servers are identified on the basis of their hostname or IP address, hostname and specific UDP port numbers, or IP address and specific UDP port numbers. The combination of the IP address and UDP port number creates a unique identifier, allowing different ports to be individually defined as RADIUS hosts providing a specific AAA service. This unique identifier enables RADIUS requests to be sent to multiple UDP ports on a server at the same IP address. If two different host entries on the same RADIUS server are configured for the same service—for example, accounting—the second host entry configured acts as a failover backup to the first one. If the first host entry fails to provide accounting services, the network access server tries the second host entry configured on the same device for accounting services. (The RADIUS host entries are tried in the order they are configured.)

A RADIUS server and a Cisco device use a shared secret text string to encrypt passwords and exchange responses. To configure RADIUS to use the AAA security commands, you must specify the host running the RADIUS server daemon and a secret text (key) string that it shares with the device.

The timeout, retransmission, and encryption key values are configurable globally for all RADIUS servers, on a per-server basis or in some combination of global and per-server settings. To apply these settings globally to all RADIUS servers communicating with the device, use the three unique global commands: **radius-server timeout**, **radius-server retransmit**, and **radius-server key**. To apply these values on a specific RADIUS server, use the **radius-server host** command.

**Note**

You can configure both global and per-server timeout, retransmission, and key value commands simultaneously on the same Cisco network access server. If both global and per-server functions are configured on a device, the per-server timer, retransmission, and key value commands override global timer, retransmission, and key value commands.

# How to Configure RADIUS for Multiple UDP Ports

## Configuring Device-to-RADIUS Server Communication

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **radius server** *server-name*
4. **address ipv4** *ip-address*
5. **key** {0 *string* | 7 *string* | *string*}
6. **retransmit** *retries*
7. **timeout** *seconds*
8. **exit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>radius server</b> <i>server-name</i>  <b>Example:</b> Device(config)# radius server radl	Specifies the name for the RADIUS server.

	Command or Action	Purpose
<b>Step 4</b>	<b>address ipv4</b> <i>ip-address</i>  <b>Example:</b> Device(config-radius-server)# address ipv4 10.45.1.2	Assigns an IP address to the RADIUS server.
<b>Step 5</b>	<b>key</b> { <i>0 string</i>   <i>7 string</i>   <i>string</i> }  <b>Example:</b> Device(config-radius-server)# key myRaDIUSpassword	Specifies the shared secret text string used between the device and a RADIUS server.  <b>Note</b> In this step, the encryption key value is configured globally for all RADIUS servers.  <ul style="list-style-type: none"> <li>Use the <b>0 string</b> option to configure an unencrypted shared secret. Use the <b>7 string</b> option to configure an encrypted shared secret.</li> </ul>
<b>Step 6</b>	<b>retransmit</b> <i>retries</i>  <b>Example:</b> Device(config-radius-server)# retransmit 25	Specifies how many times the device transmits each RADIUS request to the server before giving up (the default is 3).  <b>Note</b> In this step, the retransmission value is configured globally for all RADIUS servers.
<b>Step 7</b>	<b>timeout</b> <i>seconds</i>  <b>Example:</b> Device(config-radius-server)# timeout 6	Specifies for how many seconds a device waits for a reply to a RADIUS request before retransmitting the request.  <b>Note</b> In this step, the timeout value is configured globally for all RADIUS servers.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Device(config)# exit	Returns to privileged EXEC mode.

## Configuration Examples for RADIUS for Multiple UDP Ports

### Example: Device-to-RADIUS Server Communication

The following example shows how to configure two RADIUS servers with specific timeout, retransmit, and key values. In this example, the **aaa new-model** command enables AAA services on the device, and specific AAA commands define the AAA services. The **retransmit** command changes the global retransmission value

to 4 for all RADIUS servers. The **host** command configures specific timeout, retransmission, and key values for the RADIUS server hosts with IP addresses 172.16.1.1 and 172.29.39.46.

```
! Enable AAA services on the device and define those services.
aaa new-model
aaa authentication login default group radius
aaa authentication login console-login none
aaa authentication ppp default group radius
aaa authorization network default group radius
aaa accounting exec default start-stop group radius
aaa accounting network default start-stop group radius
enable password tryit1
!
Device(config)# radius server rad1
Device(config-radius-server)# address ipv4 10.45.1.2
Device(config-radius-server)# key myRaDIUSpassword
Device(config-radius-server)# retransmit 25
Device(config-radius-server)# timeout 6
Device(config)# exit
```

## Example: RADIUS Server with Server-Specific Values

The following example shows how to configure server-specific timeout, retransmit, and key values for the RADIUS server with IP address 172.31.39.46:

```
radius-server host 172.31.39.46 timeout 6 retransmit 5 key rad123
```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco IOS commands	<a href="#">Cisco IOS Master Command List, All Releases</a>
Security commands	<ul style="list-style-type: none"> <li>• <a href="#">Cisco IOS Security Command Reference: Commands A to C</a></li> <li>• <a href="#">Cisco IOS Security Command Reference: Commands D to L</a></li> <li>• <a href="#">Cisco IOS Security Command Reference: Commands M to R</a></li> <li>• <a href="#">Cisco IOS Security Command Reference: Commands S to Z</a></li> </ul>
AAA	<i>Authentication, Authorization, and Accounting Configuration Guide</i> (part of the Securing User Services Configuration Library)

**Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	<a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a>

## Feature Information for RADIUS for Multiple UDP Ports

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [http://www.cisco.com/go/featurenavigator](#). An account on Cisco.com is not required.

**Table 1: Feature Information for RADIUS for Multiple UDP Ports**

Feature Name	Releases	Feature Information
RADIUS for Multiple UDP Ports	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE	<p>RADIUS security servers are identified on the basis of their hostname or IP address, hostname and specific UDP port numbers, or IP address and specific UDP port numbers. The combination of the IP address and UDP port number creates a unique identifier, allowing different ports to be individually defined as RADIUS hosts providing a specific AAA service. This unique identifier enables RADIUS requests to be sent to multiple UDP ports on a server at the same IP address.</p> <p>In Cisco IOS XE Release 3.2SE, this feature was supported on the following platforms:</p> <ul style="list-style-type: none"> <li>• Catalyst 3850 Series Switches</li> </ul> <p>In Cisco IOS XE Release 3.3SE, this feature was supported on the following platforms:</p> <ul style="list-style-type: none"> <li>• Catalyst 3650 Series Switches</li> </ul> <p>The following command was introduced or modified: <b>radius-server host.</b></p>

