



Expires Timer Reset on Receiving or Sending SIP 183 Message

Last Updated: December 20, 2011

This feature enables support for resetting the Expires timer when receiving or sending SIP 183 messages on Cisco Unified Communications Manager Express (Cisco Unified CME), a Cisco IOS voice gateway, or a Cisco Unified Border Element (Cisco UBE). When the terminating device lacks answer supervision or does not send the required SIP 200 OK message within the timer expiry, you can enable this feature to send periodic SIP 183 messages to reset the Expires timer and preserve the call until final response. This feature can be enabled globally or on a specific dial peer. Additionally, you can configure this feature based on the presence or absence of Session Description Protocol (SDP).

For details about enabling this feature, see the **reset timer expires** and **voice-class sip reset timer expires** commands in the Cisco IOS Voice Command Reference.

- [Finding Feature Information, page 1](#)
- [Prerequisites for Expires Timer Reset on Receiving or Sending SIP 183 Message, page 1](#)
- [How to Configure Expires Timer Reset on Receiving or Sending SIP 183 Message, page 2](#)
- [Feature Information for Configuring Support for Expires Timer Reset on Receiving or Sending SIP 183 Message, page 4](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for Expires Timer Reset on Receiving or Sending SIP 183 Message

Before configuring support for Expires timer reset for SIP 183 on Cisco IOS SIP time-division multiplexing (TDM) gateways, Cisco UBEs, or Cisco Unified CME, verify the SIP configuration within the



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

VoIP network for the appropriate originating and terminating gateways as described in the Cisco IOS SIP Configuration Guide.

Cisco Unified Border Element

- Cisco IOS Release 15.0(1)XA or a later release must be installed and running on your Cisco Unified Border Element.

Cisco Unified Border Element (Enterprise)

- Cisco IOS XE Release 3.1S or a later release must be installed and running on your Cisco ASR 1000 Series Router.

How to Configure Expires Timer Reset on Receiving or Sending SIP 183 Message

To configure the Support for Expires Timer Reset on Receiving or Sending SIP 183 Message feature, complete the tasks in this section. You can enable this feature globally, using the **reset timer expires** command in voice service SIP configuration mode, or on a specific dial-peer using the **voice-class sip reset timer expires** command in dial-peer voice configuration mode.

- [Configuring Reset of Expires Timer Globally, page 2](#)
- [Configuring Reset of Expires Timer at the Dial-Peer Level, page 3](#)

Configuring Reset of Expires Timer Globally

Perform this task to enable resetting of the Expires timer at the global level in SIP configuration (conf-serv-sip) mode.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **voice service voip**
4. **sip**
5. **reset timer expires 183**
6. **exit**

DETAILED STEPS

Command or Action	Purpose
Step 1 enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.

Command or Action	Purpose
<p>Step 2 <code>configure terminal</code></p> <p>Example:</p> <pre>Router# configure terminal</pre>	Enters global configuration mode.
<p>Step 3 <code>voice service voip</code></p> <p>Example:</p> <pre>Router(config)# voice service voip</pre>	Enters voice service VoIP configuration mode.
<p>Step 4 <code>sip</code></p> <p>Example:</p> <pre>Router(conf-voi-serv)# sip</pre>	Enters SIP configuration mode.
<p>Step 5 <code>reset timer expires 183</code></p> <p>Example:</p> <pre>Router(conf-serv-sip)# reset timer expires 183</pre>	Enables resetting of the Expires timer upon receipt of SIP 183 messages globally.
<p>Step 6 <code>exit</code></p> <p>Example:</p> <pre>Router(conf-serv-sip)# exit</pre>	Exits the current mode.

Configuring Reset of Expires Timer at the Dial-Peer Level

Perform this task to enable resetting of the Expires timer at the dial-peer level in dial peer voice configuration (config-dial-peer) mode.

SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `dial-peer voice tag voip`
4. `voice-class sip reset timer expires 183`
5. `exit`

DETAILED STEPS

Command or Action	Purpose
Step 1 enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2 configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.
Step 3 dial-peer voice tag voip Example: <pre>Router(config)# dial-peer voice 2 voip</pre>	Enters dial peer VoIP configuration mode.
Step 4 voice-class sip reset timer expires 183 Example: <pre>Router(config-dial-peer)# voice-class sip reset timer expires 183</pre>	Enables resetting of the Expires timer upon receipt of SIP 183 messages on a specific dial peer.
Step 5 exit Example: <pre>Router(config-dial-peer)# exit</pre>	Exits the current mode.

Feature Information for Configuring Support for Expires Timer Reset on Receiving or Sending SIP 183 Message

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Feature History Table entry for the Cisco Unified Border Element.

Table 1 Feature Information for Support for Expires Timer Reset on Receiving or Sending SIP 183 Message

Feature Name	Releases	Feature Information
Support for Expires Timer Reset on Receiving or Sending SIP 183 Message	15.0(1)XA 15.1(1)T	<p>This feature enables support for resetting the Expires timer upon receipt of SIP 183 messages on Cisco Unified Communications Manager Express (Cisco Unified CME), a Cisco IOS voice gateway, or a Cisco Unified Border Element (Cisco UBE).</p> <p>The following commands were introduced or modified: reset timer expires and voice-class sip reset timer expires.</p>

Feature History Table entry for the Cisco Unified Border Element (Enterprise) .

Table 2 Feature Information for Support for Expires Timer Reset on Receiving or Sending SIP 183 Message

Feature Name	Releases	Feature Information
Support for Expires Timer Reset on Receiving or Sending SIP 183 Message	Cisco IOS XE Release 3.1S	<p>This feature enables support for resetting the Expires timer upon receipt of SIP 183 messages on Cisco Unified Communications Manager Express (Cisco Unified CME), a Cisco IOS voice gateway, or a Cisco Unified Border Element (Cisco UBE).</p> <p>The following commands were introduced or modified: reset timer expires and voice-class sip reset timer expires.</p>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.