



## Layer 2 Local Switching

---

The Layer 2 Local Switching feature allows you to switch Layer 2 data in two ways:

- Between two interfaces on the same router
- Between two circuits on the same interface port, which is called same-port switching

The interface-to-interface switching combinations supported by this feature are:

- ATM to ATM
- ATM to Ethernet
- ATM to Frame Relay
- Ethernet to Ethernet VLAN
- Frame Relay to Frame Relay (and Multilink Frame Relay in Cisco IOS Release 12.0(28)S and later)
- High-Level Data Link Control (HDLC)

The following same-port switching features are supported:

- ATM Permanent Virtual Circuit (PVC) and Permanent Virtual Path (PVP)
- Ethernet VLAN
- Frame Relay
  
- [Finding Feature Information, page 2](#)
- [Prerequisites for Layer 2 Local Switching, page 2](#)
- [Restrictions for Layer 2 Local Switching, page 2](#)
- [Information About Layer 2 Local Switching, page 6](#)
- [How to Configure Layer 2 Local Switching, page 9](#)
- [Configuration Examples for Layer 2 Local Switching, page 37](#)
- [Additional References for Layer 2 Local Switching, page 41](#)
- [Feature Information for Layer 2 Local Switching, page 42](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Prerequisites for Layer 2 Local Switching

- You must enable Cisco Express Forwarding for the Cisco 7200 series router. You must use Cisco Express Forwarding or Distributed Cisco Express Forwarding for the Cisco 7500 series router. (Distributed Cisco Express Forwarding is enabled already by default on the Gigabit Switch Router [GSR]).
- For Frame Relay local switching, you must globally issue the **frame-relay switching** command.

## Restrictions for Layer 2 Local Switching

### Cisco 7200 and 7500 Series Router Restrictions

- In ATM single cell relay AAL0, the ATM virtual path identifier/virtual channel identifier (VPI/VCI) values must match between the ingress and egress ATM interfaces on the Cisco 7200 series and 7500 series routers. If Layer 2 local switching is desired between two ATM VPIs and VCIs whose values do not match and are on two different interfaces, choose ATM AAL5. However, if the ATM AAL5 is using Operation, Administration, and Maintenance (OAM) transparent mode, the VPI and VCI values must match.
- NSF/SSO: Layer 2 local switching is supported on Cisco 7500 series routers.

Layer 2 local switching is supported on the following interface processors in the Cisco 7200 series routers:

- C7200-I/O-2FE
- C7200-I/O-GE+E (Only the Gigabit Ethernet port of this port adapter is supported.)
- C7200-I/O-FE

Layer 2 local switching is supported on the following interface processors in the Cisco 7500 series routers:

- GEIP (Gigabit Ethernet interface processor)
- GEIP+ (enhanced Gigabit Ethernet interface processor)

Layer 2 local switching is supported on the following port adapters in the Cisco 7200 and 7500 series routers:

- PA-FE-TX (single-port Fast Ethernet 100BASE-TX)

- PA-FE-FX (single-port Fast Ethernet 100BASE-FX)
- PA-2FE-TX (dual-port Fast Ethernet 100BASE-TX)
- PA-2FE-FX (dual-port Fast Ethernet 100BASE-FX)
- PA-4E (4-port Ethernet adapter)
- PA-8E (8-port Ethernet adapter)
- PA-4T (4-port synchronous serial port adapter)
- PA-4T+ (enhanced 4-port synchronous serial port adapter)
- PA-8T (8-port synchronous serial port adapter)
- PA-12E/2FE (12-port Ethernet/2-port Fast Ethernet (FE) adapter) [Cisco 7200 only]
- PA-GE (Gigabit Ethernet port adapter) [Cisco 7200 only]
- PA-H (single-port High-Speed Serial Interface (HSSI) adapter)
- PA-2H (dual-port HSSI adapter)
- PA-MC-8E1 (8-port multichannel E1 G.703/G.704 120-ohm interfaces)
- PA-MC-2EI (2-port multichannel E1 G.703/G.704 120-ohm interfaces)
- PA-MC-8T1 (8-port multichannel T1 with integrated data service units (DSUs) and channel service units CSUs))
- PA-MC-4T1 (4-port multichannel T1 with integrated CSUs and DSUs)
- PA-MC-2T1 (2-port multichannel T1 with integrated CSUs and DSUs)
- PA-MC-8TE1+ (8-port multichannel T1/E1)
- PA-MC-T3 (1-port multichannel T3 interface)
- PA-MC-E3 (1-port multichannel E3 interface)
- PA-MC-2T3+ (2-port enhanced multichannel T3 port adapter)
- PA-MC-STM1 (1-port multichannel STM-1 port adapter) [Cisco 7500 only]
- PA-T3 (single-port T3 port adapter)
- PA-E3 (single-port E3 port adapter)
- PA-2E3 (2-port E3 port adapter)
- PA-2T3 (2-port T3 port adapter)
- PA-POS-OC-3SML (single-port Packet over SONET (POS), single-mode, long reach)
- PA-POS-OC-3SMI (single-port PoS, single-mode, intermediate reach)
- PA-POS-OC-3MM (single-port PoS, multimode)
- PA-A3-OC-3 (1-port ATM OC-3/STM1 port adapter, enhanced)
- PA-A3-OC-12 (1-port ATM OC-12/STM-4 port adapter, enhanced) [Cisco 7500 only]
- PA-A3-T3 (DS3 high-speed interface)
- PA-A3-E3 (E3 medium-speed interface)

- PA-A3-8T1IMA (ATM inverse multiplexer over ATM port adapter with 8 T1 ports)
- PA-A3-8E1IMA (ATM inverse multiplexer over ATM port adapter with 8 E1 ports)
- PA-A6 (Cisco ATM Port Adapter)

## Cisco 7600 and 6500 Series Router Restrictions

- Layer 2 local switching supports the following port adapters and interface processors on the Cisco 7600-SUP720/MSFC3 router:
  - All port adapters on the Enhanced FlexWAN module
  - All shared port adapters (SPAs) on the SIP-200 line cards
- On the Cisco 6500 series and 7600 series routers, only *like-to-like* local switching is supported (ATM to ATM and Frame Relay to Frame Relay).
- Same-port switching is not supported on the Cisco 6500 series and 7600 series routers.

## Cisco 10000 Series Router Restrictions

For information about Layer 2 local switching on the Cisco 10000 series routers, see the *Configuring Layer 2 Local Switching* document.

## Gigabit Switch Router Restrictions

- VPI/VCI rewrite is supported.
- All GSR line cards support Frame Relay-to-Frame Relay local switching.
- 8-port OC-3 ATM Engine 2 line cards support only like-to-like Layer 2 local switching.
- IP Service Engine (ISE) (Engine 3) line cards support like-to-like and any-to-any local switching. Non-ISE line cards support only like-to-like local switching.

Starting in Cisco IOS Release 12.0(31)S2, ISE customer edge-facing interfaces support the following types of like-to-like and any-to-any local switching:

- ATM to ATM
- ATM to Ethernet
- ATM to Frame Relay
- Ethernet to Ethernet VLAN
- Frame Relay to Frame Relay (including Multilink Frame Relay)
- Same-port switching for ATM (PVC and PVP)
- Same-port switching for Ethernet VLAN
- Same-port switching for Frame Relay

**Note**

Native Layer 2 Tunnel Protocol Version 3 (L2TPv3) tunnel sessions on customer edge-facing line cards can coexist with tunnel sessions that use a tunnel-server card.

- Starting in Cisco IOS Release 12.0(32)SY, customer edge-facing interfaces on Engine 5 SPAs and SPA Interface Processors (SIPs) support the following types of like-to-like local switching:
  - Ethernet to Ethernet VLAN
  - Frame Relay to Frame Relay (including Multilink Frame Relay)
  - Same-port switching for Ethernet VLAN
  - Same-port switching for Frame Relay
- For ATM-to-ATM local switching, the following ATM types are supported for the Layer 2 Local Switching feature:
  - ATM adaptation layer 5 (AAL5)
  - ATM single cell relay adaptation layer 0 (AAL0), VC mode
  - ATM single cell relay VP mode on the GSR
  - ATM single cell relay VC and VP modes on ISE line cards on the GSR
- Starting with Cisco IOS Release 12.0(30)S, you can use local switching and cell packing with ATM VP or VC mode on the GSR on IP Services Engine (ISE/Engine 3) line cards. For information about how to configure cell packing, refer to Any Transport over MPLS.

## Unsupported Hardware

The following hardware is not supported:

- Cisco 7200—non-VXR chassis
- Cisco 7500—Route Switch Processor (RSP)1 and 2
- Cisco 7500—Versatile Interface Processor (VIP) 2-40 and below
- GSR—4-port OC-3 ATM Engine-0 line card
- GSR—4-port OC-12 ATM Engine-2 line card
- GSR—1-port OC-12 ATM Engine-0 line card
- GSR—Ethernet Engine-1, Engine-2, and Engine-4 line cards

# Information About Layer 2 Local Switching

## Layer 2 Local Switching Overview

Local switching allows you to switch Layer 2 data between two interfaces of the same type (for example, ATM to ATM, or Frame Relay to Frame Relay) or between interfaces of different types (for example, Frame Relay to ATM) on the same router. The interfaces can be on the same line card or on two different cards. During these kinds of switching, the Layer 2 address is used, not any Layer 3 address.

Additionally, same-port local switching allows you to switch Layer 2 data between two circuits on the same interface.

## NSF SSO—Local Switching Overview

Nonstop forwarding (NSF) and stateful switchover (SSO) improve the availability of the network by providing redundant Route Processors (RPs) and checkpointing of data to ensure minimal packet loss when the primary RP goes down. NSF/SSO support is available for the following locally switched attachment circuits:

- Ethernet to Ethernet VLAN
- Frame Relay to Frame Relay

## Layer 2 Local Switching Applications


Incumbent local exchange carriers (ILECs) who use an interexchange carrier (IXC) to carry traffic between two local exchange carriers can use the Layer 2 Local Switching feature. Telecom regulations require the ILECs to pay the IXCs to carry that traffic. At times, the ILECs cannot terminate customer connections that are in different local access and transport areas (LATAs). In other cases, customer connections terminate in the same LATA, which may also be on the same router.

For example, company A has more than 50 LATAs across the country and uses three routers for each LATA. Company A uses companies B and C to carry traffic between local exchange carriers. Local switching of Layer 2 frames on the same router might be required.

Similarly, if a router is using, for example, a channelized interface, it might need to switch incoming and outgoing traffic across two logical interfaces that reside on a single physical port. The same-port local switching feature addresses that implementation.

The figure below shows a network that uses local switching for both Frame Relay to Frame Relay and ATM to Frame Relay local switching.

**Figure 1: Local Switching Example**

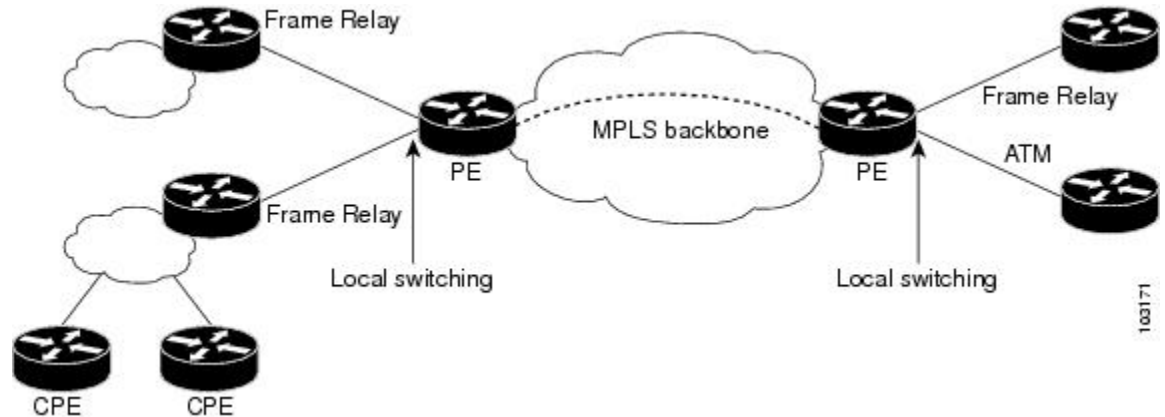

## Access Circuit Redundancy Local Switching

The Automatic Protection Switching (APS) mechanism provides a switchover time of less than 50 milliseconds. However, the switchover time is longer in a pseudowire configuration due to the time the pseudowire takes to enter the UP state on switchover. The switchover time of the pseudowire can be eliminated if there is a single pseudowire on the working and protect interfaces instead of separate pseudowire configurations. A single pseudowire also eliminates the need to have Label Distribution Protocols (LDP) negotiations on a switchover. The virtual interface or controller model provides a method to configure a single pseudowire between the provider edge (PE) routers.

Access Circuit Redundancy (ACR) ensures low data traffic downtime by reducing the switchover time. ACR works on the APS 1+1, nonrevertive model where each redundant line pair consists of a working line and a protect line. If a signal fail condition or a signal degrade condition is detected, the hardware switches from the working line to the protect line.

The working and protect interfaces can be on the following:

- Same SPA
- Different SPA but on the same line card
- SPAs on different line cards

When the working or protection interface is configured with ACR, a virtual interface is created and a connection is established between the virtual interfaces to facilitate the switching of data between the interfaces.

### ACR for ATM-to-ATM Local Switching


ACR for ATM-to-ATM local switching supports the ATM AAL5 and ATM AAL0 encapsulation types and switches Layer 2 data between L2 transport virtual circuits (VCs).

**Note**

The L2 transport VCs must be configured with the same encapsulation type.

The figure below shows the ACR for ATM-to-ATM local switching model.

**Figure 2: ATM-to-ATM ACR Local Switching Model**

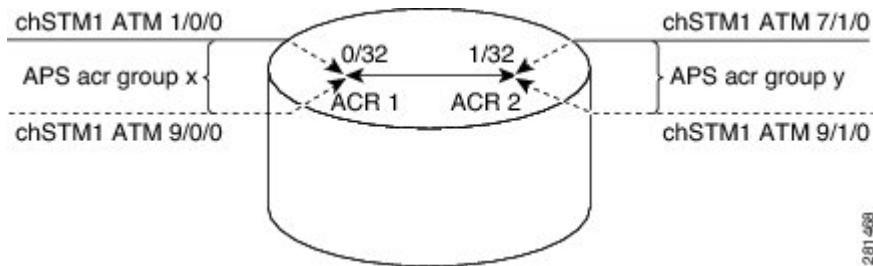

In the figure:

- ATM 1/0/0 and ATM 9/0/0 are configured as working and protection interfaces of ACR 1 group.
- ATM 7/1/0 and ATM 9/1/0 are configured as working and protection interfaces of ACR 2 group.
- A connection is established between the ACRs.
- The Add/Drop Multiplexer (ADM) sends data to both the interfaces, which are part of the ACR group ACR 1.
- The cells or packets received on the APS active interface VC (0/32) of ACR group 1 are switched to the ACR 2 interface VC (1/32) and the cells or packets from the APS inactive interface are dropped.
- The packets received on the ACR 2 VC (1/32) interface are replicated on both the physical interfaces, which are part of the ACR group ACR 2.

## ACR for CEM-to-CEM Local Switching


Circuit Emulation (CEM) transports Time Division Multiplexing (TDM) data over TDM pseudowires, allowing mobile operators to carry TDM traffic over an IP or Multiprotocol Label Switching (MPLS) network. ACR for CEM-to-CEM involves creating a virtual controller and associating the virtual controller with the physical controllers. The virtual controller is created when APS and ACR are configured on the physical controller. All commands executed on the virtual controller apply to the working and protect controller. The virtual controller simplifies the single point of configuration and provides the flexibility of not running a backup pseudowire for the protect controller in the event of a failure. This way there is no switchover between the pseudowires, which in turn reduces the recovery time when the physical link fails.

When the CEM group is configured on the virtual controller, a virtual CEM-ACR interface is created and associated with the CEM circuit. ACR creates CEM interfaces and CEM circuits on the physical interfaces that correspond to the physical controllers belonging to the same ACR group.



The figure below shows the ACR for CEM-to-CEM local switching model:

**Figure 3: CEM-to-CEM ACR Local Switching Model**

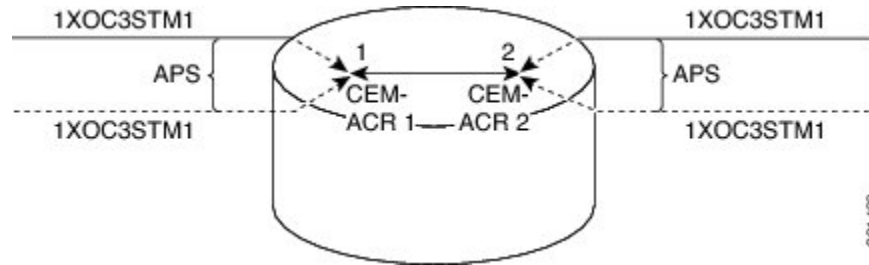

In the figure:

- Packets are received from the ADM. The packets from the APS inactive interface are dropped and the packets received on the APS active interface are switched.
- The packets received on the CEM circuit ID 1 of the APS active interface, which is part of ACR group 1, are switched to the CEM circuit ID 2 of the APS active interface, which is part of ACR group 2.
- The packets are duplicated and sent on both the APS active and inactive physical CEM interfaces that are part of ACR group 2.

## How to Configure Layer 2 Local Switching

For information about Layer 2 local switching on the Cisco 10000 series routers, see the *Configuring Layer 2 Local Switching* document.

### Configuring ATM-to-ATM PVC Local Switching and Same-Port Switching

You can configure local switching for both ATM AAL5 and ATM AAL0 encapsulation types.

Creating the ATM PVC is not required. If you do not create a PVC, one is created for you. For ATM-to-ATM local switching, the autoprovisioned PVC is given the default encapsulation type AAL0 cell relay.



#### Note

Starting with Cisco IOS Release 12.0(30)S, you can configure same-port switching following the steps in this section.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm** *slot/port*
4. **pvc** *vpi / vci* **l2transport**
5. **encapsulation** *layer-type*
6. **exit**
7. **exit**
8. **connect** *connection-name interface pvc interface pvc*

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface atm</b> <i>slot/port</i>  <b>Example:</b> Router(config)# interface atm1/0/0	Specifies an ATM line card, subslot (if available), and port and enters interface configuration mode.
<b>Step 4</b>	<b>pvc</b> <i>vpi / vci</i> <b>l2transport</b>  <b>Example:</b> Router(config-if)# pvc 1/100 l2transport	Assigns a VPI and VCI and enters ATM PVC l2transport configuration mode.  • The <b>l2transport</b> keyword indicates that the PVC is a switched PVC instead of a terminated PVC.
<b>Step 5</b>	<b>encapsulation</b> <i>layer-type</i>  <b>Example:</b> Router(cfg-if-atm-l2trans-pvc)# encapsulation aal5	Specifies the encapsulation type for the ATM PVC. Both AAL0 and AAL5 are supported.  • Repeat Steps 3 through 5 for another ATM PVC on the same router.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Router(cfg-if-atm-l2trans-pvc)# exit	Exits PVC l2transport configuration mode and returns to interface configuration mode.

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 8</b>	<b>connect</b> <i>connection-name interface pvc interface pvc</i>  <b>Example:</b> Router(config)# connect atm-con atm1/0/0 1/100 atm2/0/0 1/100	Creates a local connection between the two specified permanent virtual circuits.

## Configuring ATM-to-ATM PVP Local Switching

Perform this task to configure ATM-to-ATM PVP local switching.

Starting with Cisco IOS Release 12.0(30)S, you can configure same-port switching, as detailed in the [Configuring ATM PVP Same-Port Switching](#), on page 12.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm** *slot/port*
4. **atm pvp** *vpi l2transport*
5. **exit**
6. **exit**
7. **connect** *connection-name interface pvp interface pvp*

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>interface atm slot/port</b>  <b>Example:</b> Router(config)# interface atm1/0	Specifies an ATM line card, subslot (if available), and port and enters interface configuration mode.
<b>Step 4</b>	<b>atm pvp vpi l2transport</b>  <b>Example:</b> Router(config-if)# atm pvp 100 l2transport	Identifies the virtual path and enters PVP l2transport configuration mode. The <b>l2transport</b> keyword indicates that the PVP is a switched PVP instead of a terminated PVP.  <ul style="list-style-type: none"> <li>Repeat Steps 3 and 4 for another ATM permanent virtual path on the same router.</li> </ul>
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Router(config-if-atm-l2trans-pvp)# exit	Exits PVP l2transport configuration mode and returns to interface configuration mode.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 7</b>	<b>connect connection-name interface pvp interface pvp</b>  <b>Example:</b> Router(config)# connect atm-con atm1/0 100 atm2/0 200	Creates a local connection between the two specified permanent virtual paths.

## Configuring ATM PVP Same-Port Switching

Perform this task to configure ATM PVP switching on an ATM interface.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm slot / subslot / port**
4. **atm pvp vpi l2transport**
5. **exit**
6. **exit**
7. **connect connection-name interface pvp interface pvp**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface atm slot / subslot / port</b>  <b>Example:</b> Router(config)# interface atm1/0/0	Specifies an ATM line card, subslot (if available), and port, and enters interface configuration mode.
<b>Step 4</b>	<b>atm pvp vpi l2transport</b>  <b>Example:</b> Router(config-if)# atm pvp 100 l2transport	Specifies one VPI and enters PVP l2transport configuration mode. Repeat this step for the other ATM permanent virtual path on this same port. <ul style="list-style-type: none"> <li>• The <b>l2transport</b> keyword indicates that the indicated PVP is a switched PVP instead of a terminated PVP.</li> </ul>
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Router(config-if-atm-l2trans-pvp)# exit	Exits PVP l2transport configuration mode and returns to interface configuration mode.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 7</b>	<b>connect connection-name interface pvp interface pvp</b>  <b>Example:</b> Router(config)# connect atm-con atm1/0/0 100 atm1/0/0 200	In global configuration mode, creates the local connection between the two specified permanent virtual paths.

## Configuring ATM-to-Ethernet Port Mode Local Switching

For ATM to Ethernet port mode local switching, creating the ATM PVC is not required. If you do not create a PVC, one is created for you. For ATM-to-Ethernet local switching, the auto-provisioned PVC is given the default encapsulation type AAL5SNAP.

ATM-to-Ethernet local switching supports both the IP and Ethernet interworking types. When the Ethernet interworking type is used, the interworking device (router) expects a bridged packet. Therefore, configure the ATM CPE for either IRB or RBE.



**Note** Enabling ICMP Router Discovery Protocol on the Ethernet side is recommended.

ATM-to-Ethernet local switching supports the following encapsulation types:

- ATM-to-Ethernet with IP interworking: AAL5SNAP, AAL5MUX
- ATM-to-Ethernet with Ethernet interworking: AAL5SNAP

Perform this task to configure local switching between ATM and Ethernet port mode.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm** *slot/port*
4. **pvc** *vpi / vci* **l2transport**
5. **encapsulation** *layer-type*
6. **exit**
7. **exit**
8. **interface fastethernet** *slot / subslot / port*
9. **exit**
10. **connect** *connection-name interface pvc interface* [**interworkingip** | **ethernet**]

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>interface atm</b> <i>slot/port</i>  <b>Example:</b> Router(config)# interface atm1/0	Specifies an ATM line card, subslot (if available), and port and enters interface configuration mode.
<b>Step 4</b>	<b>pvc vpi / vci l2transport</b>  <b>Example:</b> Router(config-if)# pvc 1/200 l2transport	Assigns a VPI and VCI and enters PVC l2transport configuration mode.  • The <b>l2transport</b> keyword indicates that the PVC is a switched PVC instead of a terminated PVC.
<b>Step 5</b>	<b>encapsulation</b> <i>layer-type</i>  <b>Example:</b> Router(cfg-if-atm-l2trans-pvc)# encapsulation aal5snap	Specifies the encapsulation type for the PVC.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Router(config-if-atm-l2trans-pvc)# exit	Exits PVC l2transport configuration mode and returns to interface configuration mode.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 8</b>	<b>interface fastethernet</b> <i>slot / subslot / port</i>  <b>Example:</b> Router(config)# interface fastethernet6/0/0	Specifies a Fast Ethernet line card, subslot (if available), and port, and enters interface configuration mode.
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 10</b>	<b>connect</b> <i>connection-name interface pvc interface</i> <b>[interworkingip   ethernet]</b>  <b>Example:</b> Router(config)# connect atm-eth-con atm1/0 0/100 fastethernet6/0/0 interworking ip	Creates a local connection between the two interfaces and specifies the interworking type.  • Both the IP and Ethernet interworking types are supported.

## Configuring ATM-to-Ethernet VLAN Mode Local Switching

For ATM-to-Ethernet VLAN mode local switching, creating the ATM permanent virtual circuit (PVC) is not required. If you do not create a PVC, one is created for you. For ATM-to-Ethernet local switching, the autoprovisioned PVC is given the default encapsulation type as ATM adaptation layer 5 (AAL5) Subnetwork Access Protocol (SNAP).

ATM-to-Ethernet local switching supports both the IP and Ethernet interworking types. When the Ethernet interworking type is used, the interworking device (router) expects a bridged packet. Therefore, configure the ATM customer premises equipment (CPE) for either Integrated Routing and Bridging (IRB) or Routed Bridged Encapsulation (RBE).

ATM-to-Ethernet local switching supports the following encapsulation types:

- ATM-to-Ethernet with IP interworking: AAL5SNAP, AAL5 multiplexer (MUX)
- ATM-to-Ethernet with Ethernet interworking: AAL5SNAP




---

**Note** Enabling Internet Control Message Protocol (ICMP) Router Discovery Protocol (IRDP) on the Ethernet side is recommended.

---

The VLAN header is removed from frames that are received on an Ethernet subinterface.




---

**Note** On the provider edge (PE) router, ensure that the maximum transmission unit (MTU) value of ATM interfaces (default MTU is 4470 bytes) and Gigabit Ethernet interfaces (default MTU is 1500 bytes) is the same. On the customer edge (CE) router, ensure that the MTU value of ATM and Gigabit Ethernet interfaces is at least 14 bytes less than the MTU value of the respective interfaces on the PE router during ATM-to-Ethernet VLAN mode local switching.

---

Perform this task to configure local switching for ATM to Ethernet in VLAN mode.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm** *slot/subslot/port*
4. **pvc** *vpi/vci* **l2transport**
5. **encapsulation** *layer-type*
6. **exit**
7. **interface fastethernet** *slot/port.subinterface-number*
8. **encapsulation dot1q** *vlan-id*
9. **exit**
10. **connect** *connection-name interface pvc interface* [**interworking ip** | **ethernet**]



## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
Step 3	<b>interface atm slot/subslot/port</b>  <b>Example:</b> Device(config)# interface atm1/0/0	Specifies an ATM line card, subslot (if available), and port and enters interface configuration mode.
Step 4	<b>pvc vpi/vci l2transport</b>  <b>Example:</b> Device(config-if)# pvc 1/200 l2transport	Assigns a VPI and VCI and enters PVC l2transport configuration mode.  • The <b>l2transport</b> keyword indicates that the PVC is a switched PVC instead of a terminated PVC.
Step 5	<b>encapsulation layer-type</b>  <b>Example:</b> Device(cfg-if-atm-l2trans-pvc)# encapsulation aal5snap	Specifies the encapsulation type for the PVC.
Step 6	<b>exit</b>  <b>Example:</b> Device(cfg-if-atm-l2trans-pvc)# exit	Exits PVC l2transport configuration mode and returns to interface configuration mode.
Step 7	<b>interface fastethernet slot/port.subinterface-number</b>  <b>Example:</b> Device(config-if)# interface fastethernet6/0/0.1	Specifies a Fast Ethernet line card, subslot (if available), port and subinterface and enters subinterface configuration mode.
Step 8	<b>encapsulation dot1q vlan-id</b>  <b>Example:</b> Device(config-subif)# encapsulation dot1q 100	Enables the interface to accept 802.1Q VLAN packets.
Step 9	<b>exit</b>  <b>Example:</b> Device(config-subif)# exit	Exits subinterface configuration mode and returns to global configuration mode.

	Command or Action	Purpose
<b>Step 10</b>	<p><b>connect</b> <i>connection-name interface pvc interface</i> [<b>interworking ip</b>   <b>ethernet</b>]</p> <p><b>Example:</b> Device(config)# connect atm-eth-vlan-con atm1/0/0 0/100 fastethernet6/0/0.1 interworking ip</p>	<p>In global configuration mode, creates a local connection between the two interfaces and specifies the interworking type.</p> <ul style="list-style-type: none"> <li>• Both the IP and Ethernet interworking types are supported.</li> </ul>

## Configuring Ethernet VLAN Same-Port Switching

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface fastethernet** *slot/port.subinterface-number*
4. **encapsulation dot1q** *vlan-id*
5. **exit**
6. **interface fastethernet** *slot / port.subinterface-number*
7. **encapsulation dot1q** *vlan-id*
8. **exit**
9. **connect** *connection-name interface interface*

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<p><b>enable</b></p> <p><b>Example:</b> Router&gt; enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<p><b>configure terminal</b></p> <p><b>Example:</b> Router# configure terminal</p>	<p>Enters global configuration mode.</p>
<b>Step 3</b>	<p><b>interface fastethernet</b> <i>slot/port.subinterface-number</i></p> <p><b>Example:</b> Router(config)# interface fastethernet6/0.1</p>	<p>Specifies the first Fast Ethernet line card, subslot (if available), port, and subinterface and enters subinterface configuration mode.</p>

	Command or Action	Purpose
<b>Step 4</b>	<b>encapsulation dot1q</b> <i>vlan-id</i>  <b>Example:</b> Router(config-subif)# encapsulation dot1q 10	Enables that subinterface to accept 802.1Q VLAN packets and specifies the first VLAN.
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Router(config-subif)# exit	Exits subinterface configuration mode and returns to global configuration mode.
<b>Step 6</b>	<b>interface fastethernet</b> <i>slot / port.subinterface-number</i>  <b>Example:</b> Router(config)# interface fastethernet6/0.2	Specifies the second Fast Ethernet line card, subslot (if available), port, and subinterface and enters subinterface configuration mode.
<b>Step 7</b>	<b>encapsulation dot1q</b> <i>vlan-id</i>  <b>Example:</b> Router(config-subif)# encapsulation dot1q 20	Enables this subinterface to accept 802.1Q VLAN packets and specifies the second VLAN.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Router(config-subif)# exit	Exits subinterface configuration mode and returns to global configuration mode.
<b>Step 9</b>	<b>connect</b> <i>connection-name interface interface</i>  <b>Example:</b> Router(config)# connect conn fastethernet6/0.1 fastethernet6/0.2	Creates a local connection between the two subinterfaces (and hence their previously specified VLANs) on the same Fast Ethernet port.

## Configuring Ethernet Port Mode to Ethernet VLAN Local Switching

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface fastethernet** *slot/subslot/port*
4. **interface fastethernet** *slot/port/subinterface-number*
5. **encapsulation dot1q** *vlan-id*
6. **exit**
7. **connect** *connection-name interface interface* [**interworking ip** | **ethernet**]

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface fastethernet</b> <i>slot/subslot/port</i>  <b>Example:</b> Router(config)# interface fastethernet3/0/0	Specifies a Fast Ethernet line card, subslot (if available), and port and enters interface configuration mode. This is the interface on one side of the PE router that passes Ethernet packets to and from the customer edge (CE) router.
<b>Step 4</b>	<b>interface fastethernet</b> <i>slot/port/subinterface-number</i>  <b>Example:</b> Router(config)# interface fastethernet6/0/0.1	Specifies a Fast Ethernet line card, subslot (if available), port, and subinterface and enters subinterface configuration mode. This is the interface on the other side of the PE router than passes Ethernet VLAN packets to and from the CE router.
<b>Step 5</b>	<b>encapsulation dot1q</b> <i>vlan-id</i>  <b>Example:</b> Router(config-subif)# encapsulation dot1q 100	Enables the interface to accept 802.1Q VLAN packets.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> Router(config-subif)# exit	Exits subinterface configuration mode and returns to global configuration mode.
<b>Step 7</b>	<b>connect</b> <i>connection-name interface interface</i> <b>[interworking ip   ethernet]</b>  <b>Example:</b> Router(config)# connect eth-ethvlan-con fastethernet3/0/0 fastethernet6/0/0.1 interworking ip	Creates a local connection between the two interfaces and specifies the interworking type.  • Both the IP and Ethernet interworking types are supported.

## Configuring ATM-to-Frame Relay Local Switching

You use the **interworking ip** keywords for configuring ATM-to-Frame Relay local switching.

FRF.8 Frame Relay-to-ATM service interworking functionality is not supported. Frame Relay discard-eligible (DE) bits do not get mapped to ATM cell loss priority (CLP) bits, and forward explicit congestion notification (FECN) bits do not get mapped to ATM explicit forward congestion indication (EFCI) bits.

Creating the PVC is not required. If you do not create a PVC, one is created for you. For ATM-to-Ethernet local switching, the automatically provisioned PVC is given the default encapsulation type AAL5SNAP.

ATM-to-Frame Relay local switching supports the following encapsulation types:

- AAL5SNAP
- AAL5NLPID (GSR uses AAL5MUX instead, for IP interworking)

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm slot/port**
4. **pvc vpi/vci l2transport**
5. **encapsulation layer-type**
6. **exit**
7. **interface serial slot/subslot/port**
8. **encapsulation frame-relay [cisco | ietf]**
9. **frame-relay interface-dlci dlci switched**
10. **exit**
11. **connect connection-name interface pvc interface dlci [interworking ip | ethernet]**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface atm slot/port</b>  <b>Example:</b> Router(config)# interface atm1/0	Specifies an ATM line card, subslot (if available), and port and enters interface configuration mode.
<b>Step 4</b>	<b>pvc vpi/vci l2transport</b>  <b>Example:</b> Router(config-if)# pvc 1/200 l2transport	Assigns a VPI and VCI and enters PVC l2transport configuration mode.

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>The <b>I2transport</b> keyword indicates that the PVC is a switched PVC instead of a terminated PVC.</li> </ul>
<b>Step 5</b>	<b>encapsulation</b> <i>layer-type</i>  <b>Example:</b> <pre>Router(cfg-if-atm-l2trans-pvc)# encapsulation aal5snap</pre>	Specifies the encapsulation type for the PVC.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> <pre>Router(cfg-if-atm-l2trans-pvc)# exit</pre>	Exits PVC I2transport configuration mode and returns to interface configuration mode.
<b>Step 7</b>	<b>interface serial</b> <i>slot/subslot/port</i>  <b>Example:</b> <pre>Router(config-if)# interface serial6/0/0</pre>	Specifies a channelized line card, subslot (if available), and serial port.
<b>Step 8</b>	<b>encapsulation frame-relay</b> [ <i>cisco   ietf</i> ]  <b>Example:</b> <pre>Router(config-if)# encapsulation frame-relay ietf</pre>	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>The encapsulation type does not matter for local switching. It has relevance only for terminated circuits.</li> </ul>
<b>Step 9</b>	<b>frame-relay interface-dlci</b> <i>dlci</i> <b>switched</b>  <b>Example:</b> <pre>Router(config-if)# frame-relay interface-dlci 100 switched</pre>	(Optional) Configures a switched Frame Relay DLCI. <ul style="list-style-type: none"> <li>If you do not create a Frame Relay PVC in this step, one is automatically created by the <b>connect</b> command.</li> </ul>
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> <pre>Router(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.
<b>Step 11</b>	<b>connect</b> <i>connection-name interface pvc interface dlci</i> <b>[interworking ip   ethernet]</b>  <b>Example:</b> <pre>Router(config)# connect atm-fr-con atm1/0 0/100 serial6/0/0 100 interworking ip</pre>	Creates a local connection between the two interfaces.

## Configuring Frame Relay-to-Frame Relay Local Switching

For information on Frame Relay-to-Frame Relay Local Switching, see the Distributed Frame Relay Switching feature module.

With Cisco IOS Release 12.0(30)S, you can switch between virtual circuits on the same port, as detailed in the [Configuring Frame Relay Same-Port Switching](#), on page 24.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip cef distributed**
4. **frame-relay switching**
5. **interface *type number***
6. **encapsulation frame-relay [cisco | ietf]**
7. **frame-relay interface-dlci *dhci* switched**
8. **exit**
9. **exit**
10. **connect *connection-name interface dlci interface dlci***

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ip cef distributed</b>  <b>Example:</b> Router(config)# ip cef distributed	Enables Cisco Express Forwarding operation.  • For the Cisco 7500 series router, use the <b>ip cef distributed</b> command. (On the GSR, this command is already enabled by default).  • For the Cisco 7200 series router, use the <b>ip cef</b> command.
Step 4	<b>frame-relay switching</b>  <b>Example:</b> Router(config)# frame-relay switching	Enables PVC switching on a Frame Relay DCE device or a Network-to-Network Interface (NNI).
Step 5	<b>interface <i>type number</i></b>  <b>Example:</b> Router(config)# interface serial 0	Specifies a Frame Relay interface and enters interface configuration mode.
Step 6	<b>encapsulation frame-relay [cisco   ietf]</b>	Enables Frame Relay encapsulation.

	Command or Action	Purpose
	<b>Example:</b> <pre>Router(config-if)# encapsulation frame-relay</pre>	<ul style="list-style-type: none"> <li>The default is <b>cisco</b> encapsulation.</li> <li>You do not need to specify an encapsulation type.</li> </ul>
<b>Step 7</b>	<b>frame-relay interface-dlci <i>dlci</i> switched</b>  <b>Example:</b> <pre>Router(config-if)# frame-relay interface-dlci 100 switched</pre>	(Optional) Creates a switched PVC and enters Frame Relay DLCI configuration mode. <ul style="list-style-type: none"> <li>Repeat Steps 5 through 7 for each switched PVC.</li> <li>If you do not create a Frame Relay PVC in this step, it will automatically be created by the <b>connect</b> command.</li> </ul>
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> <pre>Router(config-fr-dlci)# exit</pre>	Exits Frame Relay DLCI configuration mode and returns to interface configuration mode.
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> <pre>Router(config-if)# exit</pre>	Exits interface configuration mode and returns to global configuration mode.
<b>Step 10</b>	<b>connect <i>connection-name interface dlci interface dlci</i></b>  <b>Example:</b> <pre>Router(config)# connect connection1 serial0 100 serial1 101</pre>	Defines a connection between Frame Relay PVCs.

## Configuring Frame Relay Same-Port Switching

Perform this task to configure Frame Relay switching on the same interface.



## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip cef [distributed]**
4. **frame-relay switching**
5. **interface *type number***
6. **encapsulation frame-relay [cisco | ietf]**
7. **frame-relay intf-type [dce| dte| nni]**
8. **frame-relay interface-dlci *dlci* switched**
9. **exit**
10. **exit**
11. **connect *connection-name interface dlci interface dlci***

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ip cef [distributed]</b>  <b>Example:</b> Router(config)# ip cef	Enables Cisco Express Forwarding operation.  • For the Cisco 7500 series router, use the <b>ip cef distributed</b> command. (On the GSR, this command is already enabled by default).  • For the Cisco 7200 series router, use the <b>ip cef</b> command.
Step 4	<b>frame-relay switching</b>  <b>Example:</b> Router(config)# frame-relay switching	Enables PVC switching on a Frame Relay DCE device or a NNI.
Step 5	<b>interface <i>type number</i></b>  <b>Example:</b> Router(config)# interface serial 0	Specifies a Frame Relay interface and enters interface configuration mode.
Step 6	<b>encapsulation frame-relay [cisco   ietf]</b>	Enables Frame Relay encapsulation.

	Command or Action	Purpose
	<b>Example:</b> Router(config-if)# encapsulation frame-relay	<ul style="list-style-type: none"> <li>The default is <b>cisco</b> encapsulation.</li> <li>You do not need to specify an encapsulation type.</li> </ul>
<b>Step 7</b>	<b>frame-relay intf-type [dce dte nni]</b>  <b>Example:</b> Router(config-if)# frame-relay intf-type nni	(Optional) Enables support for a particular type of connection: <ul style="list-style-type: none"> <li>DCE</li> <li>DTE (default)</li> <li>NNI</li> </ul>
<b>Step 8</b>	<b>frame-relay interface-dlci dlci switched</b>  <b>Example:</b> Router(config-if)# frame-relay interface-dlci 100 switched	(Optional) Creates a switched PVC and enters Frame Relay DLCI configuration mode. <ul style="list-style-type: none"> <li>If you do not create a Frame Relay PVC in this step, it will automatically be created by the <b>connect</b> command.</li> </ul>
<b>Step 9</b>	<b>exit</b>  <b>Example:</b> Router(config-fr-dlci)# exit	Exits Frame Relay DLCI configuration mode and returns to interface configuration mode.
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 11</b>	<b>connect connection-name interface dlci interface dlci</b>  <b>Example:</b> Router(config)# connect connection1 serial1/0 100 serial1/0 200	Defines a connection between the two data links.

## Configuring HDLC Local Switching

Perform this task to configure local switching for HDLC. The PE routers are configured with HDLC encapsulation. The CE routers are configured with any HDLC-based encapsulation, including HDLC, PPP, and Frame Relay.

### Before You Begin

- Ensure that the interfaces you configure for HDLC encapsulation can handle ping packets that are smaller, the same size as, or larger than the CE interface MTU.
- Enable Cisco Express Forwarding.

**Note**

Do not configure other settings on the interfaces configured for HDLC encapsulation. If you assign an IP address on the interface, the **connect** command is rejected and the following error message displays:  
 Incompatible with IP address command on interface - command rejected.

If you configure other settings on the interface that is enabled for HDLC encapsulation, the local switching feature may not work.

- Interworking is not supported.
- Same-port local switching for HDLC is not supported.
- Dialer and ISDN interfaces are not supported. Only serial, HSSI, and POS interfaces can be configured for HDLC local switching.

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **ip cef**
4. **interface** *type number*
5. **exit**
6. **connect** *connection-name interface interface*

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>ip cef</b>  <b>Example:</b> Router(config)# ip cef	Enables Cisco Express Forwarding operation.
<b>Step 4</b>	<b>interface</b> <i>type number</i>  <b>Example:</b> Router(config)# interface serial 2/0	Specifies an interface and enters interface configuration mode.

	Command or Action	Purpose
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 6</b>	<b>connect</b> <i>connection-name interface interface</i>  <b>Example:</b> Router(config)# connect connection1 serial1/0 serial1/0	Defines a connection between the two interfaces.

## Configuring ACR for ATM-to-ATM Local Switching



### Note

The **connect** command provides an infrastructure to create the required L2 transport VCs with the default AAL0 encapsulation type and does not require that the VCs must exist.

Perform this task to configure ACR for ATM-to-ATM local switching.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface atm** *slot/subslot/port*
4. **aps group** [**acr**] *group-number*
5. **aps working** *circuit-number*
6. **aps protect** *circuit-number ip-address*
7. **exit**
8. **interface acr** *acr-group-number*
9. **pvc** [*name*] *vpi/vci l2transport*
10. **exit**
11. **exit**
12. **connect** *connection-name type number pvc type number pvc*

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>	Enables privileged EXEC mode.

	Command or Action	Purpose
	<b>Example:</b> Router> enable	<ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface atm slot/subslot/port</b>  <b>Example:</b> Router(config)# interface atm8/0/0	Specifies an ATM line card, a subslot (if available), and a port and enters interface configuration mode.
<b>Step 4</b>	<b>aps group [acr] group-number</b>  <b>Example:</b> Router(config-if)# aps group acr 1	Configures an ACR working and protect interface. <ul style="list-style-type: none"> <li><i>group-number</i>—Number of the group.</li> </ul>
<b>Step 5</b>	<b>aps working circuit-number</b>  <b>Example:</b> Router(config-if)# aps working 1	Enables an ATM OC-3 interface as the working interface. <ul style="list-style-type: none"> <li><i>circuit-number</i>—Number of the circuit that will be enabled as the working interface.</li> </ul> Repeat Steps 3 to 5 for the protect interface.
<b>Step 6</b>	<b>aps protect circuit-number ip-address</b>  <b>Example:</b> Router(config-if)# aps protect 1 10.0.0.1	Enables an ATM OC-3 interface as the protect interface. <ul style="list-style-type: none"> <li><i>circuit-number</i>—Number of the circuit that will be enabled as the protect interface.</li> <li><i>ip-address</i>—IP address of the router that has the working ATM OC-3 interface.</li> </ul>
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 8</b>	<b>interface acr acr-group-number</b>  <b>Example:</b> Router(config)# interface acr 1	Specifies an ACR interface and enters interface configuration mode. <ul style="list-style-type: none"> <li><i>acr-group-number</i>—The group number assigned to the working and protect interface.</li> </ul>
<b>Step 9</b>	<b>pvc [name] vpi/vci l2transport</b>  <b>Example:</b> Router(config-if)# pvc 0/32 l2transport	Creates an ATM PVC and enters ATM virtual circuit configuration mode.

	Command or Action	Purpose
<b>Step 10</b>	<b>exit</b>  <b>Example:</b> Router(config-if-atm-vc)# exit	Exits ATM virtual circuit configuration mode and returns to interface configuration mode.  Repeat Steps 8 and 9 for the other ACR group.
<b>Step 11</b>	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 12</b>	<b>connect</b> <i>connection-name type number pvc type number pvc</i>  <b>Example:</b> Router(config)# connect connection1 acr 1 0/32 acr 2 1/32	Defines the connection between the ATM-ACR interfaces. <ul style="list-style-type: none"> <li>• <i>connection-name</i>—Local switching connection name.</li> <li>• <i>type</i>—Interface or circuit type used to create a local switching connection.</li> <li>• <i>number</i>—Integer that identifies the number of the interface or circuit.</li> </ul>

## Configuring CEM-to-CEM ACR Local Switching

Perform this task to configure ACR for CEM-to-CEM local switching.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **controller sonet** *slot/subslot/port*
4. **aps group** [**acr**] *group-number*
5. **aps working** *circuit-number*
6. **aps protect** *circuit-number ip-address*
7. **exit**
8. **controller sonet-acr** *acr-group-number*
9. **framing sonet**
10. **sts-1** *number*
11. **mode vt-15**
12. **vtg** *number t1 number cem-group number timeslots number*
13. **exit**
14. **exit**
15. **interface cem-acr** *acr-group-number*
16. **exit**
17. **cem** *slot/port/channel*
18. **xconnect** *virtual-connect-id*
19. **exit**
20. **exit**
21. **connect** *connection-name type number circuit-id type number circuit-id*

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>controller sonet</b> <i>slot/subslot/port</i>  <b>Example:</b> Router(config)# controller sonet 8/0/0	Specifies a virtual controller and enters SONET controller configuration mode.
<b>Step 4</b>	<b>aps group</b> [ <b>acr</b> ] <i>group-number</i>	Configures an ACR working and protect interface.

	Command or Action	Purpose
	<b>Example:</b> Router(config-controller)# aps group acr 1	<ul style="list-style-type: none"> <li>• <i>group-number</i>—Number of the group.</li> </ul>
<b>Step 5</b>	<b>aps working</b> <i>circuit-number</i>  <b>Example:</b> Router(config-controller)# aps working 1	Enables a SONET interface as the working interface. <ul style="list-style-type: none"> <li>• <i>circuit-number</i>—Number of the circuit that will be enabled as the working interface.</li> </ul> Repeat Steps 3 to 5 for the protect interface.
<b>Step 6</b>	<b>aps protect</b> <i>circuit-number ip-address</i>  <b>Example:</b> Router(config-controller)# aps protect 1 10.0.0.1	Enables a SONET interface as the protect interface. <ul style="list-style-type: none"> <li>• <i>circuit-number</i>—Number of the circuit that will be enabled as the protect interface.</li> <li>• <i>ip-address</i>—IP address of the router that has the working SONET interface.</li> </ul>
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> Router(config-controller)# exit	Exits SONET controller configuration mode and returns to global configuration mode.
<b>Step 8</b>	<b>controller sonet-acr</b> <i>acr-group-number</i>  <b>Example:</b> Router(config)# controller SONET-acr 1	Specifies the SONET ACR controller and enters SONET controller configuration mode. <ul style="list-style-type: none"> <li>• <i>acr-group-number</i>—The group number assigned to the working and protect interface.</li> </ul>
<b>Step 9</b>	<b>framing sonet</b>  <b>Example:</b> Router(config-controller)# framing sonet	Configures the controller framing for SONET framing.
<b>Step 10</b>	<b>sts-1</b> <i>number</i>  <b>Example:</b> Router(config-controller)# sts-1 2	Specifies the STS identifier and enters STS configuration mode.
<b>Step 11</b>	<b>mode vt-15</b>  <b>Example:</b> Router(config-ctrlr-sts1)# mode vt-15	Specifies VT-15 as the STS-1 mode of operation.



	Command or Action	Purpose
Step 12	<b>vtg</b> <i>number t1 number cem-group number timeslots number</i>  <b>Example:</b> Router(config-ctrlr-sts1)# vtg 2 t1 4 cem-group 2 timeslots 1-5,14	Creates a virtual tributary group carrying a single T1 Circuit Emulation Service over Packet Switched Networks (CESoPSN) group.
Step 13	<b>exit</b>  <b>Example:</b> Router(config-ctrlr-sts1)# exit	Exits STS configuration mode and returns to SONET controller configuration mode.
Step 14	<b>exit</b>  <b>Example:</b> Router(config-controller)# exit	Exits SONET controller configuration mode and returns to global configuration mode.
Step 15	<b>interface</b> <i>cem-acr acr-group-number</i>  <b>Example:</b> Router(config)# interface cem-acr 1	Specifies the CEM-ACR interface and enters interface configuration mode.
Step 16	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
Step 17	<b>cem</b> <i>slot/port/channel</i>  <b>Example:</b> Router(config)# cem 1/2/0	Configures CEM and enters circuit emulation (CEM) configuration mode.
Step 18	<b>xconnect</b> <i>virtual-connect-id</i>  <b>Example:</b> Router(config-cem)# xconnect 0	Builds the CEM connection and enters CEM xconnect configuration mode. <ul style="list-style-type: none"> <li>• <i>virtual-connect-id</i>—Virtual connect ID (VCID).</li> </ul>
Step 19	<b>exit</b>  <b>Example:</b> Router(config-cem-xconnect)# exit	Exits CEM xconnect configuration mode and returns to CEM configuration mode.
Step 20	<b>exit</b>  <b>Example:</b> Router(config-cem)# exit	Exits CEM configuration mode and returns to global configuration mode.  Repeat Steps 15 to 19 for the other CEM group.
Step 21	<b>connect</b> <i>connection-name type number circuit-id type number circuit-id</i>	Defines a connection between the two CEM-ACR circuits. <ul style="list-style-type: none"> <li>• <i>connection-name</i>—Local switching connection name.</li> </ul>

	Command or Action	Purpose
	<b>Example:</b> Router(config)# connect connect1 cem-acr 1 2 cem-acr 2 3	<ul style="list-style-type: none"> <li>• <i>type</i>—Interface or circuit type used to create a local switching connection.</li> <li>• <i>number</i>—Integer that identifies the number of the interface or circuit.</li> <li>• <i>circuit-id</i>—CEM group ID.</li> </ul>

## Verifying Layer 2 Local Switching

### Verifying Layer 2 Local Switching Configuration

To verify configuration of the Layer 2 Local Switching feature, use the following commands on the provider edge (PE) router:

#### SUMMARY STEPS

1. **show connection** [*all* | *element* | *id id* | *name name* | *port port*]
2. **show atm pvc**
3. **show frame-relay pvc** [*pvc*]

#### DETAILED STEPS

##### Step 1 **show connection** [*all* | *element* | *id id* | *name name* | *port port*]

The **show connection** command displays the local connection between an ATM interface and a Fast Ethernet interface:

##### Example:

```
Router# show connection name atm-eth-con
ID Name                Segment 1                Segment 2                State
=====
1  atm-eth-con          ATM0/0/0 AAL5 0/100      FastEthernet6/0/0      UP
```

This example displays the local connection between an ATM interface and a serial interface:

##### Example:

```
Router# show connection name atm-fr-con
ID Name                Segment 1                Segment 2                State
=====
1  atm-fr-con           ATM0/0/0 AAL5 0/100      Serial1/0/0 16         UP
```

This example displays a same-port connection on a serial interface.

**Example:**

```
Router# show connection name same-port
ID  Name                Segment 1                Segment 2                State
-----
1   same-port          Serial1/1/1  101          Serial1/1/1  102          UP
```

**Step 2****show atm pvc**

The **show atm pvc** command shows that interface ATM3/0 is UP:

**Example:**

```
Router# show atm pvc
VCD/
Interface Name      VPI  VCI  Type  Encaps      SC  Peak  Avg/Min  Burst  Sts
3/0        10    1    32   PVC   FRATMSRV   UBR 155000  Kbps  Cells  UP
```

**Step 3****show frame-relay pvc [pvc]**

The **show frame-relay pvc** command shows a switched Frame Relay PVC:

**Example:**

```
Router# show frame-relay pvc 16
PVC Statistics for interface POS5/0 (Frame Relay NNI)
DLCI = 16, DLCI USAGE = SWITCHED, PVC STATUS = UP, INTERFACE = POS5/0
LOCAL PVC STATUS = UP, NNI PVC STATUS = ACTIVE
input pkts 0 output pkts 0 in bytes 0
out bytes 0 dropped pkts 100 in FECN pkts 0
in BECN pkts 0 out FECN pkts 0 out BECN pkts 0
in DE pkts 0 out DE pkts 0
out bcast pkts 0 out bcast bytes 0
switched pkts 0
Detailed packet drop counters:
no out intf 0 out intf down 100 no out PVC 0
in PVC down 0 out PVC down 0 pkt too big 0
pvc create time 00:25:32, last time pvc status changed 00:06:31
```

## Verifying the NSF SSO Local Switching Configuration

Layer 2 local switching provides NSF/SSO support for Local Switching of the following attachment circuits on the same router:

- Ethernet (port mode) to Ethernet VLAN
- Frame Relay to Frame Relay

For information about configuring NSF/SSO on the RPs, see the Stateful Switchover feature module. To verify that the NSF/SSO: Layer 2 Local Switching is working correctly, follow the steps in this section.

## SUMMARY STEPS

1. Issue the **ping** command or initiate traffic between the two CE routers.
2. Force the switchover from the active RP to the standby RP by using the **redundancy force-switchover** command. This manual procedure allows for a "graceful" or controlled shutdown of the active RP and switchover to the standby RP. This graceful shutdown allows critical cleanup to occur.
3. Issue the **show connect all** command to ensure that the Layer 2 local switching connection on the dual RP is operating.
4. Issue the **ping** command from the CE router to verify that the contiguous packet outage was minimal during the switchover.

## DETAILED STEPS

- 
- Step 1** Issue the **ping** command or initiate traffic between the two CE routers.
- Step 2** Force the switchover from the active RP to the standby RP by using the **redundancy force-switchover** command. This manual procedure allows for a "graceful" or controlled shutdown of the active RP and switchover to the standby RP. This graceful shutdown allows critical cleanup to occur.
- Step 3** Issue the **show connect all** command to ensure that the Layer 2 local switching connection on the dual RP is operating.

### Example:

```
Router# show connect all
ID      Name           Segment 1      Segment 2      State
2       Eth-Vlan1      Fa1/1/1       Fa6/0/0/0.1    UP
```

- Step 4** Issue the **ping** command from the CE router to verify that the contiguous packet outage was minimal during the switchover.
- 

## Troubleshooting Tips

You can troubleshoot Layer 2 local switching using the following commands on the PE router:

- **debug atm l2transport**
- **debug conn**
- **debug frame-relay pseudowire**
- **show atm pvc**
- **show connection**
- **show frame-relay pvc**

# Configuration Examples for Layer 2 Local Switching

## Example: Configuring ATM-to-ATM Local Switching

The following example shows local switching on ATM interfaces configured for AAL5:

```
interface atm1/0/0
  pvc 0/100 l2transport
  encapsulation aal5
interface atm2/0/0
  pvc 0/100 l2transport
  encapsulation aal5
connect aal5-conn atm1/0/0 0/100 atm2/0/0 0/100
```

## Example: Configuring ATM PVC Same-Port Switching

The following example shows same-port switching between two PVCs on one ATM interface:

```
interface atm1/0/0
  pvc 0/100 l2transport
  encapsulation aal5
  pvc 0/200 l2transport
  encapsulation aal5
connect conn atm1/0/0 0/100 atm1/0/0 0/200
```

## Example: Configuring ATM PVP Same-Port Switching

The following example shows same-port switching between two PVPs on one ATM interface:

```
interface atm1/0/0
  atm pvp 100 l2transport
  atm pvp 200 l2transport
connect conn atm1/0/0 100 atm1/0/0 200
```

## Example: ATM-to-Ethernet Local Switching

ATM-to-Ethernet local switching terminates an ATM frame to an Ethernet/VLAN frame over the same PE router. Two interworking models are used: Ethernet mode and IP mode.

### Example: ATM-to-Ethernet VLAN Mode Local Switching

The following example shows an Ethernet interface configured for Ethernet VLAN, and an ATM PVC interface configured for AAL5 encapsulation. The **connect** command allows local switching between these two interfaces and specifies the interworking type as Ethernet mode.

**Note**

On the provider edge (PE) router, ensure that the maximum transmission unit (MTU) value of ATM (default MTU is 4470 bytes) and GigabitEthernet (default MTU is 1500 bytes) interfaces is the same. On the customer edge (CE) router, ensure that the MTU value of ATM and GigabitEthernet interfaces is at least 14 bytes less than the MTU value of the respective interfaces on the PE router during ATM-to-Ethernet VLAN mode local switching.

```
interface fastethernet6/0/0.1
 encapsulation dot1q 10
interface atm2/0/0
 pvc 0/400 l2transport
 encapsulation aal5
 connect atm-ethvlan-con atm2/0/0 0/400 fastethernet6/0/0.1 interworking ethernet
```

**Example: ATM-to-Ethernet Port Mode Local Switching**

The following example shows an Ethernet interface configured for Ethernet and an ATM interface configured for AAL5SNAP encapsulation. The **connect** command allows local switching between these two interfaces and specifies the interworking type as IP mode.

```
interface atm0/0/0
 pvc 0/100 l2transport
 encapsulation aal5snap
interface fastethernet6/0/0
 connect atm-eth-con atm0/0/0 0/100 fastethernet6/0/0 interworking ip
```

**Example: Ethernet VLAN Same-Port Switching**

The following example shows same-port switching between two VLANs on one Ethernet interface:

```
interface fastethernet0/0.1
 encapsulation dot1q 1
interface fastethernet0/0.2
 encapsulation dot1q 2
 connect conn FastEthernet0/0.1 FastEthernet0/0.2
```

**Example: ATM-to-Frame Relay Local Switching**

The following example shows a serial interface configured for Frame Relay and an ATM interface configured for AAL5SNAP encapsulation. The **connect** command allows local switching between these two interfaces.

```
interface serial1/0
 encapsulation frame-relay
interface atm1/0
 pvc 7/100 l2transport
 encapsulation aal5snap
 connect atm-fr-conn atm1/0 7/100 serial1/0 100 interworking ip
```

**Example: Frame Relay-to-Frame Relay Local Switching**

The following example shows serial interfaces configured for Frame Relay. The **connect** command allows local switching between these two interfaces.

```
frame-relay switching
 ip cef distributed
 interface serial3/0/0
```

```

encapsulation frame-relay
frame-relay interface-dlci 100 switched
frame-relay intf-type dce
interface serial3/1/0
encapsulation frame-relay ietf
frame-relay interface-dlci 200 switched
frame-relay intf-type dce
connect fr-con serial3/0/0 100 serial3/1/0 200

```

## Example: Frame Relay DLCI Same-Port Switching

The following example shows same-port switching between two data links on one Frame Relay interface:

```

interface serial1/0
encapsulation frame-relay
frame-relay intf-type nni
connect conn serial1/0 100 serial1/0 200

```

## Example: HDLC Local Switching

The following example shows local switching of two serial interfaces for HDLC:

```


interface serial1/0
no ip address
interface serial2/0
no ip address
connect conn1 serial1/0 serial1/0

```

## Example: NSF SSO Ethernet Port Mode to Ethernet VLAN Local Switching

The following configuration uses the network topology shown in the figure below.

**Figure 4: NSF/SSO: Layer 2 Local Switching: Ethernet to Ethernet VLAN**

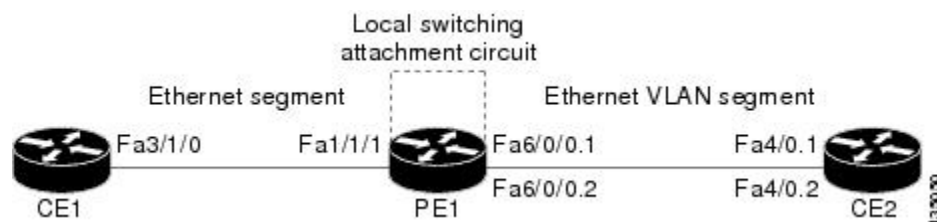

The following example shows the configuration of the CE interfaces to connect to the PE1 router:

CE1	CE2
<pre>ip routing ! interface fa3/1/0 description: connection to PE fa1/1/1 no shutdown ip address 10.1.1.1 255.255.255.0</pre>	<pre>ip routing ! interface fa4/0 no shutdown ! interface fa4/0.1 description: connection to PE1 fa6/0/0.1 encapsulation dot1Q 10 ip address 10.1.1.2 255.255.255.0 ! interface fa4/0.2 description - connection to PE1 fa6/0/0.2 encapsulation dot1Q 20 ip address 172.16.1.2 255.255.255.0</pre>

The following example shows the configuration of the PE1 router with NSF/SSO and the PE interfaces to the CE routers:

PE1
<pre>redundancy no keepalive-enable mode sso ! hw-module slot 2 image disk0:rsp-pv-mz.shaft.111004 hw-module slot 3 image disk0:rsp-pv-mz.shaft.111004 ! ip routing ip cef distributed ! interface fa1/1/1 description - connection to CE1 fa3/1/0 no shutdown no ip address ! interface fa4/0/0 description - connection to CE3 fa6/0 no shutdown no ip address ! interface fa6/0/0 no shutdown no ip address ! interface fa6/0/0.1 description - connection to CE2 fa4/0.1 encapsulation dot1Q 10 no ip address ! interface fa6/0/0.2 description - connection to CE2 fa4/0.2 encapsulation dot1Q 20 no ip address</pre>



The following example shows the configuration of ICMP Router Discovery Protocol (IRDP) on the CE router for Interworking IP for ARP mediation:

CE1	CE2
<pre>interface FastEthernet3/1/0 ip irdp ip irdp maxadvertinterval 0</pre>	<pre>interface FastEthernet4/0.1 ip irdp ip irdp maxadvertinterval 0</pre>

The following example shows the configuration of OSPF on the CE routers:

CE1	CE2
<pre>interface loopback 1 ip address 10.11.11.11 255.255.255.255 ! router ospf 10 network 10.11.11.11 0.0.0.0 area 0 network 192.168.1.1 0.0.0.0 area 0</pre>	<pre>interface loopback 1 ip address 12.12.12.12 255.255.255.255 ! router ospf 10 network 10.12.12.12 0.0.0.0 area 0 network 192.168.1.2 0.0.0.0 area 0</pre>

The following example shows the configuration of local switching on the PE1 router for interworking Ethernet:

```
connect eth-vlan1 fa1/1/1 fa6/0/0.1 interworking ethernet
connect eth-vlan2 fa4/0/0 fa6/0/0.2 interworking ethernet
```

The following example shows the configuration of local switching on the PE1 router for interworking IP:

```
connect eth-vlan1 fa1/1/1 fa6/0/0.1 interworking ip
connect eth-vlan2 fa4/0/0 fa6/0/0.2 interworking ip
```

## Additional References for Layer 2 Local Switching

### Related Documents

Related Topic	Document Title
MPLS	<i>MPLS Product Literature</i>
Layer 2 local switching configuration tasks	<a href="#">Configuring Layer 2 Local Switching</a>
Frame Relay-ATM interworking configuration tasks	Configuring Frame Relay-ATM Interworking
Frame Relay-to-Frame Relay local switching configuration tasks	Distributed Frame Relay Switching
CEoP and Channelized ATM SPAs on Cisco 7600 series router configuration tasks	<a href="#">Configuring the CEoP and Channelized ATM SPAs</a>

**Standards and RFCs**

Standard/RFC	Title
draft-ietf-l2tpext-l2tp-base-03.txt	<i>Layer Two Tunneling Protocol (Version 3) 'L2TPv3'</i>
draft-martini-l2circuit-encap-mpls-04.txt	<i>Encapsulation Methods for Transport of Layer 2 Frames Over IP and MPLS Networks</i>
draft-martini-l2circuit-trans-mpls-09.txt	<i>Transport of Layer 2 Frames Over MPLS</i>
draft-ietf-ppvpn-l2vpn-00.txt	<i>An Architecture for L2VPNs</i>

**Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	<a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a>

## Feature Information for Layer 2 Local Switching

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 1: Feature Information for Layer 2 Local Switching**

Feature Name	Releases	Feature Information
Layer 2 Local Switching	12.0(27)S 12.0(30)S 12.0(31)S2 12.0(32)SY 12.2(25)S 12.2(28)SB 12.2(33)SB 12.2(33)SRB 12.2(33)SXH 12.4(11)T 15.0(1)S	

Feature Name	Releases	Feature Information
		<p>The Layer 2 Local Switching feature allows you to switch Layer 2 data between two interfaces on the same router, and in some cases to switch Layer 2 data between two circuits on the same interface port.</p> <ul style="list-style-type: none"> <li>• The feature was introduced in Cisco IOS Release 12.0(27)S on the Cisco 7200 and 7500 series routers.</li> <li>• In Cisco IOS Release 12.0(30)S, support for same-port switching was added. Support for Layer 2 interface-to-interface local switching was added on the GSR.</li> <li>• In Cisco IOS Release 12.0(31)S2, support was added for customer edge-facing IP Service Engine (ISE) interfaces on the GSR.</li> <li>• In Cisco IOS Release 12.0(32)SY, support was added for customer edge-facing interfaces on Engine 5 shared port adapters (SPAs) and SPA Interface Processors (SIPs) on the GSR.</li> <li>• The feature was integrated into Cisco IOS Release 12.2(25)S for the Cisco 7500 series router.</li> <li>• In Cisco IOS Release 12.2(28)SB, this feature was updated to include NSF/SSO support on the Cisco 7500 series routers for the following local switching types on nonstop forwarding/stateful switchover (NSF/SSO): <ul style="list-style-type: none"> <li>• NSF/SSO—Ethernet-to-Ethernet</li> </ul> </li> </ul>

Feature Name	Releases	Feature Information
		<p>VLAN local switching support</p> <ul style="list-style-type: none"> <li>• NSF/SSO—Frame Relay-to-Frame Relay local switching support</li> <li>• In Cisco IOS Release 12.2(28)SB, support was added for Local Switching on the Cisco 10000 series router.</li> <li>• In Cisco IOS Release 12.2(33)SB, support was added for HDLC Local Switching on the Cisco 7200 series router and the Cisco 10000 series router.</li> <li>• In Cisco IOS Release 12.2(33)SXH, support was added for like-to-like Local Switching (ATM to ATM, and FR to FR only) on Cisco 6500 series switches and Cisco 7600 series routers. Same-port switching is not supported on those routers.</li> <li>• In Cisco IOS Release 12.4(11)T, support was added for the following local switching types for the Cisco 7200 series router:             <ul style="list-style-type: none"> <li>• Ethernet to Ethernet VLAN</li> <li>• Same-port switching for Ethernet VLAN</li> <li>• Frame Relay to Frame Relay</li> <li>• Same-port switching for Frame Relay</li> </ul> </li> </ul> <p>The following commands were introduced or modified: <b>connect</b> (L2VPN local switching), <b>encapsulation</b> (Layer 2 local switching), <b>show connection</b>.</p>

Feature Name	Releases	Feature Information
Access Circuit Redundancy for ATM Local Switching	15.1(1)S	<p>Access Circuit Redundancy (ACR) ensures low data traffic downtime by reducing the switchover time. ACR works on the APS 1+1, nonrevertive model where each redundant line pair consists of a working line and a protect line. If a signal fail condition or a signal degrade condition is detected, the hardware switches from the working line to the protect line.</p> <p>In Cisco IOS Release 15.1(1)S, this feature was introduced.</p> <p>The following commands were introduced or modified: <b>aps group</b>, <b>connect</b> (L2VPN local switching).</p>
ACR Support for CEM	15.1(1)S	<p>This feature provides Access Circuit Redundancy (ACR) support for CEM.</p> <p>In Cisco IOS Release 15.1(1)S, this feature was introduced.</p> <p>The following commands were introduced or modified: <b>aps group</b>, <b>connect</b> (L2VPN local switching).</p>