



Configuring Kerberos

First Published: June 18, 2006
Last Updated: July 31, 2009

This chapter describes the Kerberos security system.

Finding Feature Information

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the “[Feature Information for Configuring Kerberos](#)” section on page 15.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <http://tools.cisco.com/ITDIT/CFN/jsp/index.jsp>. An account on Cisco.com is not required.

Contents

This chapter includes the following topics and tasks:

- [Information About Kerberos](#), page 1
- [How to Configure Kerberos](#), page 5
- [Kerberos Configuration Examples](#), page 12
- [Additional References](#), page 13
- [Feature Information for Configuring Kerberos](#), page 15

Information About Kerberos

Kerberos is a secret-key network authentication protocol, developed at the Massachusetts Institute of Technology (MIT), that uses the Data Encryption Standard (DES) cryptographic algorithm for encryption and authentication. Kerberos was designed to authenticate requests for network resources.



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Kerberos, like other secret-key systems, is based on the concept of a trusted third party that performs secure verification of users and services. In the Kerberos protocol, this trusted third party is called the key distribution center (KDC).

The primary use of Kerberos is to verify that users and the network services they use are really who and what they claim to be. To accomplish this, a trusted Kerberos server issues tickets to users. These tickets, which have a limited lifespan, are stored in a user’s credential cache and can be used in place of the standard username-and-password authentication mechanism.

The Kerberos credential scheme embodies a concept called “single logon.” This process requires authenticating a user once, and then allows secure authentication (without encrypting another password) wherever that user’s credential is accepted.

Cisco IOS XE software includes Kerberos 5 support, which allows organizations already deploying Kerberos 5 to use the same Kerberos authentication database on their routers that they are already using on their other network hosts (such as UNIX servers and PCs).

The following network services are supported by the Kerberos authentication capabilities in Cisco IOS XE software:

- Telnet
- rlogin
- rsh
- rcp



Note

Cisco Systems’ implementation of Kerberos client support is based on code developed by CyberSafe, which was derived from the MIT code. As a result, the Cisco Kerberos implementation has successfully undergone full compatibility testing with the CyberSafe Challenger commercial Kerberos server and MIT’s server code, which is freely distributed.

Table 1 lists common Kerberos-related terms and their definitions.

Table 1 **Kerberos Terminology**

Term	Definition
authentication	A process by which a user or service identifies itself to another service. For example, a client can authenticate to a router or a router can authenticate to another router.
authorization	A means by which the router determines what privileges you have in a network or on the router and what actions you can perform.
credential	A general term that refers to authentication tickets, such as ticket granting tickets (TGTs) and service credentials. Kerberos credentials verify the identity of a user or service. If a network service decides to trust the Kerberos server that issued a ticket, it can be used in place of retyping in a username and password. Credentials have a default lifespan of eight hours.

Table 1 **Kerberos Terminology (continued)**

Term	Definition
instance	An authorization level label for Kerberos principals. Most Kerberos principals are of the form user@REALM (for example, smith@EXAMPLE.COM). A Kerberos principal with a Kerberos instance has the form user/instance@REALM (for example, smith/admin@EXAMPLE.COM). The Kerberos instance can be used to specify the authorization level for the user if authentication is successful. It is up to the server of each network service to implement and enforce the authorization mappings of Kerberos instances. Note that the Kerberos realm name must be in uppercase characters.
Kerberized	Applications and services that have been modified to support the Kerberos credential infrastructure.
Kerberos realm	A domain consisting of users, hosts, and network services that are registered to a Kerberos server. The Kerberos server is trusted to verify the identity of a user or network service to another user or network service. Kerberos realms must always be in uppercase characters.
Kerberos server	A daemon running on a network host. Users and network services register their identity with the Kerberos server. Network services query the Kerberos server to authenticate to other network services.
key distribution center (KDC)	A Kerberos server and database program running on a network host.
principal	Also known as a Kerberos identity, this is who you are or what a service is according to the Kerberos server.
service credential	A credential for a network service. When issued from the KDC, this credential is encrypted with the password shared by the network service and the KDC, and with the user's TGT.
SRVTAB	A password that a network service shares with the KDC. The network service authenticates an encrypted service credential by using the SRVTAB (also known as a KEYTAB) to decrypt it.
ticket granting ticket (TGT)	A credential that the key distribution center (KDC) issues to authenticated users. When users receive a TGT, they can authenticate to network services within the Kerberos realm represented by the KDC.

Kerberos Client Support Operation

This section describes how the Kerberos security system works with a Cisco router functioning as the security server. Although (for convenience or technical reasons) you can customize Kerberos in a number of ways, remote users attempting to access network services must pass through three layers of security before they can access network services.

This section includes the following sections:

- [Authenticating to the Boundary Router, page 4](#)
- [Obtaining a TGT from a KDC, page 4](#)
- [Authenticating to Network Services, page 5](#)

Authenticating to the Boundary Router

This section describes the first layer of security that remote users must pass through when they attempt to access a network. The first step in the Kerberos authentication process is for users to authenticate themselves to the boundary router. The following process describes how users authenticate to a boundary router:

1. The remote user opens a PPP connection to the corporate site router.
2. The router prompts the user for a username and password.
3. The router requests a TGT from the KDC for this particular user.
4. The KDC sends an encrypted TGT to the router that includes (among other things) the user's identity.
5. The router attempts to decrypt the TGT using the password the user entered. If the decryption is successful, the remote user is authenticated to the router.

A remote user who successfully initiates a PPP session and authenticates to the boundary router is inside the firewall but still must authenticate to the KDC directly before being allowed to access network services. This is because the TGT issued by the KDC is stored on the router and is not useful for additional authentication unless the user physically logs on to the router.

Obtaining a TGT from a KDC

This section describes how remote users who are authenticated to the boundary router authenticate themselves to a KDC.

When a remote user authenticates to a boundary router, that user technically becomes part of the network; that is, the network is extended to include the remote user and the user's machine or network. To gain access to network services, however, the remote user must obtain a TGT from the KDC. The following process describes how remote users authenticate to the KDC:

1. The remote user, at a workstation on a remote site, launches the KINIT program (part of the client software provided with the Kerberos protocol).
2. The KINIT program finds the user's identity and requests a TGT from the KDC.
3. The KDC creates a TGT, which contains the identity of the user, the identity of the KDC, and the expiration time of the TGT.
4. Using the user's password as a key, the KDC encrypts the TGT and sends the TGT to the workstation.
5. When the KINIT program receives the encrypted TGT, it prompts the user for a password (this is the password that is defined for the user in the KDC).
6. If the KINIT program can decrypt the TGT with the password the user enters, the user is authenticated to the KDC, and the KINIT program stores the TGT in the user's credential cache.

At this point, the user has a TGT and can communicate securely with the KDC. In turn, the TGT allows the user to authenticate to other network services.

Authenticating to Network Services

The following process describes how a remote user with a TGT authenticates to network services within a given Kerberos realm. Assume the user is on a remote workstation (Host A) and wants to log in to Host B.

1. The user on Host A initiates a Kerberized application (such as Telnet) to Host B.
2. The Kerberized application builds a service credential request and sends it to the KDC. The service credential request includes (among other things) the user's identity and the identity of the desired network service. The TGT is used to encrypt the service credential request.
3. The KDC tries to decrypt the service credential request with the TGT it issued to the user on Host A. If the KDC can decrypt the packet, it is assured that the authenticated user on Host A sent the request.
4. The KDC notes the network service identity in the service credential request.
5. The KDC builds a service credential for the appropriate network service on Host B on behalf of the user on Host A. The service credential contains the client's identity and the desired network service's identity.
6. The KDC then encrypts the service credential twice. It first encrypts the credential with the SRVTAB that it shares with the network service identified in the credential. It then encrypts the resulting packet with the TGT of the user (who, in this case, is on Host A).
7. The KDC sends the twice-encrypted credential to Host A.
8. Host A attempts to decrypt the service credential with the user's TGT. If Host A can decrypt the service credential, it is assured the credential came from the real KDC.
9. Host A sends the service credential to the desired network service. Note that the credential is still encrypted with the SRVTAB shared by the KDC and the network service.
10. The network service attempts to decrypt the service credential using its SRVTAB.
11. If the network service can decrypt the credential, it is assured the credential was in fact issued from the KDC. Note that the network service trusts anything it can decrypt from the KDC, even if it receives it indirectly from a user. This is because the user first authenticated with the KDC.

At this point, the user is authenticated to the network service on Host B. This process is repeated each time a user wants to access a network service in the Kerberos realm.

How to Configure Kerberos

For hosts and the KDC in your Kerberos realm to communicate and mutually authenticate, you must identify them to each other. To do this, you add entries for the hosts to the Kerberos database on the KDC and add SRVTAB files generated by the KDC to all hosts in the Kerberos realm. You also make entries for users in the KDC database.

This section describes how to set up a Kerberos-authenticated server-client system and contains the following topics:

- [Configuring the KDC Using Kerberos Commands, page 6](#)
- [Configuring the Router to Use the Kerberos Protocol, page 8](#)

This section assumes that you have installed the Kerberos administrative programs on a UNIX host, known as the KDC, initialized the database, and selected a Kerberos realm name and password. For instructions about completing these tasks, refer to documentation that came with your Kerberos software.



Note Write down the host name or IP address of the KDC, the port number you want the KDC to monitor for queries, and the name of the Kerberos realm it will serve. You need this information to configure the router.

Configuring the KDC Using Kerberos Commands

After you set up a host to function as the KDC in your Kerberos realm, you must make entries to the KDC database for all principals in the realm. Principals can be network services on Cisco routers and hosts or they can be users.

To use Kerberos commands to add services to the KDC database (and to modify existing database information), complete the tasks in the following sections:

- [Adding Users to the KDC Database, page 6](#)
- [Creating SRVTABS on the KDC, page 7](#)
- [Extracting SRVTABS, page 7](#)



Note All Kerberos command examples are based on Kerberos 5 Beta 5 of the original MIT implementation. Later versions use a slightly different interface.

Adding Users to the KDC Database

To add users to the KDC and create privileged instances of those users, use the **su** command to become root on the host running the KDC and use the `kdb5_edit` program to use the following commands in privileged EXEC mode:

	Command	Purpose
Step 1	Router# ank <i>username@REALM</i>	Use the ank (add new key) command to add a user to the KDC. This command prompts for a password, which the user must enter to authenticate to the router.
Step 2	Router# ank <i>username/instance@REALM</i>	Use the ank command to add a privileged instance of a user.

For example, to add user *loki* of Kerberos realm CISCO.COM, enter the following Kerberos command:
`ank loki@CISCO.COM`



Note The Kerberos realm name must be in uppercase characters.

You might want to create privileged instances to allow network administrators to connect to the router at the enable level, for example, so that they need not enter a clear text password (and compromise security) to enter enable mode.

To add an instance of *loki* with additional privileges (in this case, *enable*, although it could be anything) enter the following Kerberos command:

```
ank loki/enable@CISCO.COM
```

In each of these examples, you are prompted to enter a password, which you must give to user *loki* to use at login.

The “[Enabling Kerberos Instance Mapping](#)” section on page 11 describes how to map Kerberos instances to various Cisco IOS XE privilege levels.

Creating SRVTABs on the KDC

All routers that you want to authenticate to use the Kerberos protocol must have an SRVTAB. This section and the “[Extracting SRVTABs](#)” section on page 7 describe how to create and extract SRVTABs for a router called *router1*. The “[Copying SRVTAB Files](#)” section on page 9 describes how to copy SRVTAB files to the router.

To make SRVTAB entries on the KDC, use the following command in privileged EXEC mode:

Command	Purpose
Router# ark SERVICE/HOSTNAME@REALM	Use the ark (add random key) command to add a network service supported by a host or router to the KDC.

For example, to add a Kerberized authentication service for a Cisco router called *router1* to the Kerberos realm CISCO.COM, enter the following Kerberos command:

```
ark host/router1.cisco.com@CISCO.COM
```

Make entries for all network services on all Kerberized hosts that use this KDC for authentication.

Extracting SRVTABs

SRVTABs contain (among other things) the passwords or randomly generated keys for the service principals you entered into the KDC database. Service principal keys must be shared with the host running that service. To do this, you must save the SRVTAB entries to a file, then copy the file to the router and all hosts in the Kerberos realm. Saving SRVTAB entries to a file is called *extracting* SRVTABs. To extract SRVTABs, use the following command in privileged EXEC mode:

Command	Purpose
Router# xst router-name host	Use the <code>kdb5_edit</code> command xst to write an SRVTAB entry to a file.

For example, to write the `host/router1.cisco.com@CISCO.COM` SRVTAB to a file, enter the following Kerberos command:

```
xst router1.cisco.com@CISCO.COM host
```

Use the **quit** command to exit the `kdb5_edit` program.

Configuring the Router to Use the Kerberos Protocol

To configure a Cisco router to function as a network security server and authenticate users using the Kerberos protocol, complete the tasks in the following sections:

- [Defining a Kerberos Realm, page 8](#)
- [Copying SRVTAB Files, page 9](#)
- [Specifying Kerberos Authentication, page 9](#)
- [Enabling Credentials Forwarding, page 10](#)
- [Opening a Telnet Session to the Router, page 10](#)
- [Establishing an Encrypted Kerberized Telnet Session, page 10](#)
- [Enabling Mandatory Kerberos Authentication, page 11](#)
- [Enabling Kerberos Instance Mapping, page 11](#)
- [Monitoring and Maintaining Kerberos, page 12](#)

Defining a Kerberos Realm

For a router to authenticate a user defined in the Kerberos database, it must know the host name or IP address of the host running the KDC, the name of the Kerberos realm and, optionally, be able to map the host name or Domain Name System (DNS) domain to the Kerberos realm.

To configure the router to authenticate to a specified KDC in a specified Kerberos realm, use the following commands in global configuration mode. Note that DNS domain names must begin with a leading dot (.):

	Command	Purpose
Step 1	Router(config)# kerberos local-realm <i>kerberos-realm</i>	Defines the default realm for the router.
Step 2	Router(config)# kerberos server <i>kerberos-realm</i> { <i>hostname</i> <i>ip-address</i> } [<i>port-number</i>]	Specifies to the router which KDC to use in a given Kerberos realm and, optionally, the port number that the KDC is monitoring. (The default is 88.)
Step 3	Router(config)# kerberos realm { <i>dns-domain</i> <i>host</i> } <i>kerberos-realm</i>	(Optional) Maps a host name or DNS domain to a Kerberos realm.



Note

Because the machine running the KDC and all Kerberized hosts must interact within a 5-minute window or authentication fails, all Kerberized machines, and especially the KDC, should be running the Network Time Protocol (NTP).

The **kerberos local-realm**, **kerberos realm**, and **kerberos server** commands are equivalent to the UNIX *krb.conf* file. [Table 2](#) identifies mappings from the Cisco IOS XE configuration commands to a Kerberos 5 configuration file (*krb5.conf*).

Table 2 **Kerberos 5 Configuration File and Commands**

krb5.conf File	Cisco IOS XE Configuration Command
[libdefaults] default_realm = DOMAIN.COM	(in configuration mode) kerberos local-realm DOMAIN.COM
[domain_realm] .domain.com = DOMAIN.COM domain.com = DOMAIN.COM	(in configuration mode) kerberos realm.domain.com DOMAIN.COM kerberos realm domain.com DOMAIN.COM
[realms] kdc = DOMAIN.PIL.COM:750 admin_server = DOMAIN.PIL.COM default_domain = DOMAIN.COM	(in configuration mode) kerberos server DOMAIN.COM 172.65.44.2 (172.65.44.2 is the example IP address for DOMAIN.PIL.COM)

For an example of defining a Kerberos realm, see the [“Defining a Kerberos Realm”](#) section on page 8.

Copying SRVTAB Files

To make it possible for remote users to authenticate to the router using Kerberos credentials, the router must share a secret key with the KDC. To do this, you must give the router a copy of the SRVTAB you extracted on the KDC.

The most secure method to copy SRVTAB files to the hosts in your Kerberos realm is to copy them onto physical media and go to each host in turn and manually copy the files onto the system. To copy SRVTAB files to the router, which does not have a physical media drive, you must transfer them via the network using TFTP.

To remotely copy SRVTAB files to the router from the KDC, use the following command in global configuration mode:

Command	Purpose
Router(config)# kerberos srvtab remote {hostname ip-address} {filename}	Retrieves an SRVTAB file from the KDC.

When you copy the SRVTAB file from the router to the KDC, the **kerberos srvtab remote** command parses the information in this file and stores it in the router’s running configuration in the **kerberos srvtab entry** format. To ensure that the SRVTAB is available (does not need to be acquired from the KDC) when you reboot the router, use the **write memory** configuration command to write your running configuration (which contains the parsed SRVTAB file) to NVRAM.

For an example of copying SRVTAB files, see the [“SRVTAB File Copying Example”](#) section on page 13.

Specifying Kerberos Authentication

You have now configured Kerberos on your router. This makes it possible for the router to authenticate using Kerberos. The next step is to tell it to do so. Because Kerberos authentication is facilitated through AAA, you need to enter the **aaa authentication** command, specifying Kerberos as the authentication method. For more information, refer to the chapter “Configuring Authentication”.

Enabling Credentials Forwarding

With Kerberos configured thus far, a user authenticated to a Kerberized router has a TGT and can use it to authenticate to a host on the network. However, if the user tries to list credentials after authenticating to a host, the output will show no Kerberos credentials present.

You can optionally configure the router to forward users' TGTs with them as they authenticate from the router to Kerberized remote hosts on the network when using Kerberized Telnet, rcp, rsh, and rlogin (with the appropriate flags).

To force all clients to forward users' credentials as they connect to other hosts in the Kerberos realm, use the following command in global configuration mode:

Command	Purpose
Router(config)# kerberos credentials forward	Forces all clients to forward user credentials upon successful Kerberos authentication.

With credentials forwarding enabled, users' TGTs are automatically forwarded to the next host they authenticate to. In this way, users can connect to multiple hosts in the Kerberos realm without running the KINIT program each time to get a new TGT.

Opening a Telnet Session to the Router

To use Kerberos to authenticate users opening a Telnet session to the router from within the network, use the following command in global configuration mode:

Command	Purpose
Router(config)# aaa authentication login { default <i>list-name</i> } krb5_telnet	Sets login authentication to use the Kerberos 5 Telnet authentication protocol when using Telnet to connect to the router.

Although Telnet sessions to the router are authenticated, users must still enter a clear text password if they want to enter enable mode. The **kerberos instance map** command, discussed in a later section, allows them to authenticate to the router at a predefined privilege level.

Establishing an Encrypted Kerberized Telnet Session

Another way for users to open a secure Telnet session is to use Encrypted Kerberized Telnet. With Encrypted Kerberized Telnet, users are authenticated by their Kerberos credentials before a Telnet session is established. The Telnet session is encrypted using 56-bit Data Encryption Standard (DES) encryption with 64-bit Cipher Feedback (CFB). Because data sent or received is encrypted, not clear text, the integrity of the dialed router or access server can be more easily controlled.



Note

This feature is available only if you have the 56-bit encryption image. 56-bit DES encryption is subject to U.S. Government export control regulations.

To establish an encrypted Kerberized Telnet session from a router to a remote host, use either of the following commands in EXEC command mode:

Command	Purpose
Router(config)# connect <i>host</i> [<i>port</i>] / encrypt kerberos	Establishes an encrypted Telnet session.
or Router(config)# telnet <i>host</i> [<i>port</i>] / encrypt kerberos	

When a user opens a Telnet session from a Cisco router to a remote host, the router and remote host negotiate to authenticate the user using Kerberos credentials. If this authentication is successful, the router and remote host then negotiate whether or not to use encryption. If this negotiation is successful, both inbound and outbound traffic is encrypted using 56-bit DES encryption with 64-bit CFB.

When a user dials in from a remote host to a Cisco router configured for Kerberos authentication, the host and router will attempt to negotiate whether or not to use encryption for the Telnet session. If this negotiation is successful, the router will encrypt all outbound data during the Telnet session.

If encryption is not successfully negotiated, the session will be terminated and the user will receive a message stating that the encrypted Telnet session was not successfully established.

For information about enabling bidirectional encryption from a remote host, refer to the documentation specific to the remote host device.

For an example of using encrypted Kerberized Telnet to open a secure Telnet session, see the [Encrypted Telnet Session Example, page 13](#).

Enabling Mandatory Kerberos Authentication

As an added layer of security, you can optionally configure the router so that, after remote users authenticate to it, these users can authenticate to other services on the network only with Kerberized Telnet, rlogin, rsh, and rcp. If you do not make Kerberos authentication mandatory and Kerberos authentication fails, the application attempts to authenticate users using the default method of authentication for that network service; for example, Telnet and rlogin prompt for a password, and rsh attempts to authenticate using the local rhost file.

To make Kerberos authentication mandatory, use the following command in global configuration mode:

Command	Purpose
Router(config)# kerberos clients mandatory	Sets Telnet, rlogin, rsh, and rcp to fail if they cannot negotiate the Kerberos protocol with the remote server.

Enabling Kerberos Instance Mapping

As mentioned in the “[Creating SRVTABs on the KDC](#)” section on page 7, you can create administrative instances of users in the KDC database. The **kerberos instance map** command allows you to map those instances to Cisco IOS XE privilege levels so that users can open secure Telnet sessions to the router at a predefined privilege level, obviating the need to enter a clear text password to enter enable mode.

To map a Kerberos instance to a Cisco IOS XE privilege level, use the following command in global configuration mode:

Command	Purpose
Router(config)# kerberos instance map <i>instance privilege-level</i>	Maps a Kerberos instance to a Cisco IOS XE privilege level.

If there is a Kerberos instance for user *loki* in the KDC database (for example, *loki/admin*), user *loki* can now open a Telnet session to the router as *loki/admin* and authenticate automatically at privilege level 15, assuming instance “admin” is mapped to privilege level 15. (See the [“Opening a Telnet Session to the Router”](#) section on page 10.)

Cisco IOS XE commands can be set to various privilege levels using the **privilege level** command.

After you map a Kerberos instance to a Cisco IOS XE privilege level, you must configure the router to check for Kerberos instances each time a user logs in. To run authorization to determine if a user is allowed to run an EXEC shell based on a mapped Kerberos instance, use the **aaa authorization** command with the **krb5-instance** keyword. For more information, refer to the chapter “Configuring Authorization.”

Monitoring and Maintaining Kerberos

To display or remove a current user’s credentials, use the following commands in EXEC mode:

	Command	Purpose
Step 1	Router# show kerberos creds	Lists the credentials in a current user’s credentials cache.
Step 2	Router# clear kerberos creds	Destroys all credentials in a current user’s credentials cache, including those forwarded.

Kerberos Configuration Examples

The following sections provide Kerberos configuration examples:

- [Kerberos Realm Definition Examples, page 12](#)
- [SRVTAB File Copying Example, page 13](#)
- [Encrypted Telnet Session Example, page 13](#)

Kerberos Realm Definition Examples

To define CISCO.COM as the default Kerberos realm, use the following command:

```
kerberos local-realm CISCO.COM
```

To tell the router that the CISCO.COM KDC is running on host 10.2.3.4 at port number 170, use the following Kerberos command:

```
kerberos server CISCO.COM 10.2.3.4 170
```

To map the DNS domain *cisco.com* to the Kerberos realm CISCO.COM, use the following command:

```
kerberos realm.cisco.com CISCO.COM
```

SRVTAB File Copying Example

To copy over the SRVTAB file on a host named host123.cisco.com for a router named router1.cisco.com, the command would look like this:

```
kerberos srvtab remote host123.cisco.com router1.cisco.com-new-srvtab
Valid Starting          Expires                Service Principal
13-May-1996 14:59:44   13-May-1996 23:00:45   krbtgt/CISCO.COM@CISCO.COM
chet-2500# show privilege
Current privilege level is 15
chet-2500# q
Connection closed by foreign host.
chet-ss20% telnet chet-2500
Trying 172.16.0.0 ...
Connected to chet-2500.cisco.com.
Escape character is '^]'.
```

User Access Verification

```
Username: chet/restricted
Password:
```

```
chet-2500# show kerberos creds
Default Principal: chet/restricted@CISCO.COM
Valid Starting          Expires                Service Principal
13-May-1996 15:00:32   13-May-1996 23:01:33   krbtgt/CISCO.COM@CISCO.COM
```

```
chet-2500# show privilege
Current privilege level is 3
chet-2500# q
Connection closed by foreign host.
chet-ss20%
```

Encrypted Telnet Session Example

The following example shows how to establish an encrypted Telnet session from a router to a remote host named “host1”:

```
Router> telnet host1 /encrypt kerberos
```

Additional References

The following sections provide references related to the Configuring Kerberos feature.

Related Documents

Related Topic	Document Title
Security commands	Cisco IOS Security Command Reference

Standards

Standard	Title
Encryption	Data Encryption Standard (DES)

MIBs

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	—

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	http://www.cisco.com/techsupport

Feature Information for Configuring Kerberos

[Table 3](#) lists the features in this module and provides links to specific configuration information

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



Note

[Table 3](#) lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 3 Feature Information for Configuring Kerberos

Feature Name	Releases	Feature Information
Encrypted Kerberized Telnet	Cisco IOS XE Release 2.1	<p>With Encrypted Kerberized Telnet, users are authenticated by their Kerberos credentials before a Telnet session is established. The Telnet session is encrypted using 56-bit Data Encryption Standard (DES) encryption with 64-bit Cipher Feedback (CFB). Because data sent or received is encrypted, not clear text, the integrity of the dialed router or access server can be more easily controlled.</p> <p>In Cisco IOS XE Release 2.1, this feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> • Establishing an Encrypted Kerberized Telnet Session, page 10 • Encrypted Telnet Session Example, page 13 <p>The following commands were introduced or modified: connect, and telnet.</p>
Kerberos V Client Support	Cisco IOS XE Release 2.1	<p>Kerberos 5 support allows organizations already deploying Kerberos 5 to use the same Kerberos authentication database on their routers that they are already using on their other network hosts (such as UNIX servers and PCs).</p> <p>In Cisco IOS XE Release 2.1, this feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> • Information About Kerberos, page 1 • Configuring the KDC Using Kerberos Commands, page 6 • Defining a Kerberos Realm, page 8 • Opening a Telnet Session to the Router, page 10 • Kerberos Configuration Examples, page 12

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Pulse, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, and Flip Gift Card are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Fast Step, Follow Me Browsing, FormShare, GainMaker, GigaDrive, HomeLink, iLYNX, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0908R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2006–2009 Cisco Systems, Inc. All rights reserved.

