



CHAPTER 2

System Commands

This chapter describes the command-line interface (CLI) commands that you can use to manage and monitor the Cisco Broadband Access Center (Cisco BAC) Device Provisioning Engine (DPE).

If you run these commands on an unlicensed DPE, a message similar to this one appears:

```
This DPE is not licensed. Your request cannot be serviced. Please check with your system administrator for a DPE license.
```

The commands described in this chapter are:

Command	Description	CLI Mode	
		Login	Privileged
aaa authentication	Configures user authentication, authorization, and accounting services.		✓
disable	Exits the privileged mode.		✓
enable	Accesses the privileged mode.	✓	
enable password	Changes the local password, using which you access the privileged mode.		✓
exit	Closes a Telnet connection to the DPE.	✓	✓
help	Displays a usage screen that assists you in using the commands on the CLI.	✓	✓
password	Changes the local system password, using which you access the DPE.		✓
show clock	Displays the current system time and date.	✓	✓
show commands	Displays all available commands on the CLI.	✓	✓
show cpu	Identifies CPU usage for the DPE server.	✓	✓
show cpu	Identifies the disk that the DPE is currently using.	✓	✓
show hostname	Displays the hostname of the DPE.	✓	✓
show ip	Displays the current general IP settings configured on the DPE.	✓	✓
show ip route	Displays the IP routing table of the DPE.	✓	✓

Command	Description	CLI Mode	
		Login	Privileged
<code>show memory</code>	Displays the current memory and swap space that are available on the DPE server.	✓	✓
<code>show running-config</code>	Displays the current configuration on the DPE.	✓	✓
<code>show tftp files</code>	Displays the files that are stored in the DPE cache.		✓
<code>show version</code>	Displays the current version of DPE software.	✓	✓
<code>tacacs-server host</code>	Adds the TACACS+ server host address to the list of hosts.		✓
<code>no tacacs-server host</code>	Removes the TACACS+ server host address from the list of hosts.		✓
<code>tacacs-server retries</code>	The maximum number of times the TACACS+ client tries to connect with the TACACS+ server.		✓
<code>tacacs-server timeout</code>	Sets the maximum length of time that the TACACS+ client waits for a response from the TACACS+ server.		✓
<code>radius-server host</code>	Adds the RADIUS server host address to the list of hosts.		✓
<code>no radius-server host</code>	Removes the RADIUS server host address from the list of hosts.		✓
<code>radius-server retries</code>	The maximum number of times the RADIUS client tries to connect with the RADIUS server.		✓
<code>radius-server timeout</code>	Sets the maximum length of time that the RADIUS client waits for a response from the RADIUS server.		✓
<code>uptime</code>	Shows the time during which the system is operational.	✓	✓

aaa authentication

Use the **aaa authentication** command to configure the CLI for user authentication, authorization, and accounting services using the local login or remote TACACS+ or RADIUS servers. This setting applies to all Telnet and console CLI interfaces.

TACACS+ is a TCP-based protocol that supports centralized access control for several network devices and user authentication for the DPE CLI. Using TACACS+, a DPE supports multiple users (and their individual usernames) and the login and enable passwords configured at the TACACS+ server.

RADIUS is a UDP-based protocol used for enabling centralized authentication, authorization, and accounting for network access. It authenticates the users accessing the network services via the RADIUS server using the RADIUS standard protocol.

Syntax Description `aaa authentication {local | tacacs | radius}`

- **local**—In this mode, user authentication is enabled via a local login.
- **tacacs**—In this mode, the CLI server sequentially attempts a TACACS+ exchange with each server in the TACACS+ server list. The attempts continue for a specified number of retries. If the CLI reaches the end of the server list without a successful protocol exchange, authentication is automatically enabled in the local mode. In this manner, you can gain access to the CLI even if the TACACS+ service is unavailable.
- **radius**—In this mode, user authentication is performed via RADIUS server. The RADIUS server authentication details are similar to TACACS+ server. Cisco AV-pair needs to be configured in the radius server to support DPE CLI RADIUS authentication. Cisco IOS/PIX 6.x is the RADIUS server that supports Cisco AV-pair in the Access Control Server (ACS) server. The Cisco AV-pair attribute values are:

shell:priv-lvl=15—allowed for both login and enable mode

shell:priv-lvl=1—allowed only for login mode



Note When you configure TACACS+ or RADIUS authentication, you are prompted to enter the username and password configured at the TACACS+ or RADIUS server respectively. However, local authentication prompts only for the password.

Defaults

AAA authentication is enabled by default in the local mode.

Examples

This result occurs when you enable user authentication in the local mode.

```
bac_dpe# aaa authentication local
% OK
```

This result occurs when you enable user authentication in the TACACS+ mode.

```
bac_dpe# aaa authentication tacacs
% OK
```

This result occurs when you enable user authentication in the radius mode.

```
bac_dpe# aaa authentication radius
% OK
```

This result occurs when you have configured user authentication in the TACACS+ or RADIUS mode and try to access the privileged mode on the DPE (using the **enable** command). If the CLI server is unable to establish a successful protocol exchange with the servers in the TACACS+ or RADIUS list, it reverts to local user authentication and prompts you for the local configured password.

disable

Use the **disable** command to exit the privileged mode on the DPE. Once you exit the privileged mode, you can view only those commands that relate to system configuration.

Syntax Description No keywords or arguments.

Defaults No default behavior or values.

Examples

```
bac_dpe# disable
bac_dpe>
```

enable

Use the **enable** command to access the DPE in the privileged mode. You need not access the privileged mode to view the system configuration; however, only in this mode can you change the system configuration, state, and data.

Once you enter the **enable** command, you are prompted to enter the local, configured, privileged mode password. For information on setting this password, see [enable password, page 2-5](#).

Syntax Description No keywords or arguments.

Defaults The default password to access the privileged mode is **changeme**.

Examples

```

bac_dpe> enable
Password: <password2>
bac_dpe#

```

This result occurs when the CLI server prompts for the local configured password in TACACS+.

```

bac_dpe> enable

TACACS+: all hosts unreachable or no hosts configured
Reverting to local authentication mode
Password: <changeme>

```

This result occurs when the CLI server prompts for the local configured password in RADIUS.

```

bac_dpe> enable

RADIUS: all hosts unreachable or no hosts configured
Reverting to local authentication mode
Password: <changeme>

```



Note If you enter an incorrect password, the following error message appears:

```
Sorry, invalid password.
```

enable password

Use the **enable password** command to change the local password that allows you to access the DPE in the privileged mode. You can change the privileged mode password only in the privileged mode.

Once the password is changed, all users who, from that point forward, attempt to access the privileged mode must use the new password.

**Note**

This command does not change the login password; it only changes the local privileged mode password. Do not use the **enable password** command when you enable user authentication in the TACACS+ or RADIUS mode. TACACS+ or RADIUS authentication prompts for the username and password configured at the TACACS+ or RADIUS server. For more information, see [aaa authentication, page 2-2](#).

Syntax Description

When entering the **enable password** command, you can specify the password on the command line or when prompted.

enable password *password*

password—Specifies the local configured password currently in effect or, optionally, provides a new password. If you omit this parameter, you are prompted for the password.

Defaults

The default password to access the privileged mode is **changeme**.

Examples

This result occurs when you enter the password without being prompted, and the password is changed successfully.

```
bac_dpe# enable password password1
Password changed successfully.
```

This result occurs when you are prompted to enter the password, and the password is changed successfully.

```
bac_dpe# enable password
New enable password: <password2>
Retype new enable password: <password2>
Password changed successfully.
```

This result occurs when you enter an incorrect password.

```
bac_dpe# enable password
New enable password: <password2>
Retype new enable password: <paswsord2>
Sorry, passwords do not match.
```

exit

Use the **exit** command to close a Telnet connection to the DPE and return to the login prompt. After running this command, a message indicates that the Telnet connection has been closed.

Syntax Description

No keywords or arguments.

Defaults

No default behavior or values.

Examples

This result occurs when you have accessed the CLI by specifying the hostname of the DPE.

```
bac_dpe# exit
% Connection closed.
Connection to 10.10.2.10 closed by foreign host.
```

This result occurs when you have accessed the CLI without specifying the hostname.

```
bac_dpe# exit
% Connection closed.
Connection to 0 closed by foreign host.
```

This result occurs when the Telnet connection closes because the CLI has been idle and the timeout period expired.

```
bac_dpe#
% Connection timed out.
Connection to 0 closed by foreign host.
```

help

Use the **help** command to display a help screen that can assist you in using the DPE CLI. If you need help on a particular command, or to list all available commands, enter *command ?* or *?*, respectively.

Once you enter the command, a screen prompt appears to explain how you can use the help function.

Command Types

Two types of help are available:

1. Full help is available when you are ready to enter a command argument, such as **show ?**, and describes each possible argument.
2. Partial help is available when you enter an abbreviated argument and want to know what arguments match the input; for example, **show c?**.

Syntax Description

No keywords or arguments.

Defaults

No default behavior or values.

Examples

This result occurs when you use the **help** command.

```
bac_dpe# help
```

```
Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.
```

- 1) Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
- 2) Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. "show c?").

This result occurs when you invoke the full help function for a command; for example, **show ?**.



Note The **help** command output differs depending on the mode—login or privileged—in which you run the command.

```

bac_dpe# show ?
bundles          Shows the archived bundles.
clock            Shows the current system time.
commands        Shows the full command hierarchy.
cpu             Shows the current CPU usage.
device-config   Shows a device configuration
disk            Shows the current disk usage.
dpe             Shows the status of the DPE process if started.
hostname        Shows the system hostname.
ip              Shows IP configuration details.
log             Shows recent log entries.
memory          Shows the current memory usage.
running-config Shows the appliance configuration.
tftp            Shows TFTP details.
version         Shows DPE version.

```

This result occurs when you invoke the partial help function for arguments of a command; for example, **show clock**.

```

bac_dpe# show c?
clock  commands  cpu
bac_dpe# show clock
Thu Oct 25 01:20:14 EDT 2007

```

password

Use the **password** command to change the local system password, which you use to access the DPE and which is different from the one used to access the privileged mode on the DPE. The system password is changed automatically for future logins and for FTP access.



Note The changes that you introduce through this command take effect for new users, but users who are currently logged in are not disconnected.

If you enable TACACS+ or RADIUS user authentication and the DPE is unable to communicate with a TACACS+ or RADIUS server, the system prompts for the local system password.

Syntax Description

password *password*
password—Identifies the new DPE password.

Defaults

The default password for accessing the DPE is **changeme**.

Examples

This result occurs when you change the password without being prompted (using an approach easier for scripting).

```
bac_dpe# password password2
Password changed successfully.
```

This result occurs when you are prompted for the password, and the password is changed successfully.

```
bac_dpe# password
New password: <password1>
Retype new password: <password1>
Password changed successfully.
```

This result occurs when you enter an incorrect password.

```
bac_dpe# password
New password: <password1>
Retype new password: <paswsord1>
Sorry, passwords do not match.
```

show

Use the **show** command to view system settings and status. [Table 2-1](#) lists the keywords that you can use with this command.



Note To view the output for **show cpu**, **show disk**, **show ip**, **show ip route**, and **show memory** on Solaris and Linux, see *man mpstat*.

Table 2-1 List of show Commands

Command	Description	
show clock	Displays the current system time and date.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
	Example This result occurs when you run the show clock command: <pre>bac_dpe# show clock Thu Oct 25 01:20:14 EDT 2007</pre>	

Table 2-1 List of show Commands (continued)

Command	Description				
show commands	Displays all commands on the DPE depending on the mode (login or privileged) in which you access the CLI.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td>No keywords or arguments.</td> <td>No default behavior or values.</td> </tr> </tbody> </table>	Syntax Description	Defaults	No keywords or arguments.	No default behavior or values.
	Syntax Description	Defaults			
No keywords or arguments.	No default behavior or values.				
<p>Examples</p> <p>This result occurs in the login mode.</p> <pre> bac_dpe> show commands > enable > exit > help > show bundles > show clock > show commands > show cpu > show disk > show dpe > show dpe config > show hostname > show ip > show ip route > show log > show memory > show running-config > show version > uptime </pre> <p>Note The output presented in these examples is trimmed.</p> <p>This result occurs in the privileged mode.</p> <pre> bac_dpe# show commands > aaa authentication local > aaa authentication radius > aaa authentication tacacs > clear bundles > clear cache > clear logs > debug dpe cache > debug dpe connection > debug dpe dpe-server > debug dpe event-manager > debug dpe exceptions > debug dpe framework > debug dpe messaging > debug on > debug service packetcable 1 netsnmp > debug service packetcable 1 registration > debug service packetcable 1 registration-detail > debug service packetcable 1 snmp > debug service tftp 1 <ipv4 ipv6> > disable > [more] </pre> <p>To view the commands that flow beyond your screen, place the cursor at the [more] prompt and press Spacebar.</p>					

Table 2-1 List of show Commands (continued)

Command	Description	
show cpu	Identifies CPU usage for the device on which the DPE is running. Once you enter the command, CPU activities and statistics appear.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
show disk	Identifies the disk that the DPE is currently using. Once you enter the command, disk drive statistics appear.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
show hostname	Displays the hostname configured for the DPE.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
	Example bac_dpe# show hostname hostname = bac_dpe.example.com	
show ip	Displays the current general IP settings configured on the DPE. The DPE uses these settings when it reboots. For specific interface settings, use the show interface commands.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
show ip route	Displays the IP routing table of the DPE, including any custom routes. The default gateway is indicated by the G flag in the flags column.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.
show memory	Displays the current memory and swap space that are available on the device running the DPE.	
	Syntax Description No keywords or arguments.	Defaults No default behavior or values.

Table 2-1 List of show Commands (continued)

Command	Description	
show running-config	Displays the current configuration on the DPE.	
	Syntax Description	Defaults
	No keywords or arguments.	No default behavior or values.
	Example	
	<pre> bac_dpe# show running-config aaa authentication local dpe port 49186 dpe provisioning-group primary default dpe rdu-server bacdev2-t5220-1-d8 49187 dpe shared-secret <value is set> log level 5-notification no debug all no debug dpe cache no debug dpe connection no debug dpe device-config-compression no debug dpe device-config-compression-details no debug dpe device-config-decompression no debug dpe device-config-decompression-details no debug dpe dpe-server no debug dpe event-manager no debug dpe exceptions no debug dpe framework no debug dpe messaging no debug service packetcable 1 netsnmp no debug service packetcable 1 registration no debug service packetcable 1 registration-detail no debug service packetcable 1 snmp no dpe docsis emic-shared-secret no dpe docsis shared-secret no dpe provisioning-group secondary no service packetcable 1 snmp key-material radius-server retries 3 radius-server timeout 3 service tftp 1 ipv4 verify-ip service tftp 1 ipv6 verify-ip snmp-server community baccread ro snmp-server community baccwrite rw snmp-server contact <unknown> snmp-server location <unknown> snmp-server udp-port 8001 tacacs-server retries 2 tacacs-server timeout 5 </pre>	

Table 2-1 List of show Commands (continued)

Command	Description				
show tftp files	Displays the files that are stored in the DPE cache. You cannot use this command to display the files that are stored in the local directory.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td>No keywords or arguments.</td> <td>The default is 500.</td> </tr> </tbody> </table>	Syntax Description	Defaults	No keywords or arguments.	The default is 500.
	Syntax Description	Defaults			
No keywords or arguments.	The default is 500.				
<p>Example</p> <p>This result occurs when you run the show tftp files command:</p> <pre>bac_dpe# show tftp files</pre> <p>The list of TFTP files currently in DPE cache</p> <pre>filename size bronze.cm 310 gold.cm 310 silver.cm 310 unprov.cm 310 unprov_11.cm 320 unprov_30.cm 264 unprov_30v4.cm 152 unprov_30v6.cm 196 unprov_packet_cable.bin 333 unprov_wan_man.cfg 72</pre> <p>DPE caching 10 external files. Listing the first 10 files, 0 files omitted</p>					
show version	Displays the current version of DPE software.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td>No keywords or arguments.</td> <td>No default behavior or values.</td> </tr> </tbody> </table>	Syntax Description	Defaults	No keywords or arguments.	No default behavior or values.
	Syntax Description	Defaults			
No keywords or arguments.	No default behavior or values.				
<p>Example</p> <p>This result occurs when you run the show version command:</p> <pre>bac_dpe# show version</pre> <p>Version: BAC 4.2 (SOL_BAC4_0_0_00000000_0000)</p>					

tacacs-server

Use the **tacacs-server** command to configure user authentication settings in TACACS+. [Table 2-2](#) lists the keywords that you can use with this command.

Table 2-2 List of tacacs-server Commands

Command	Description				
tacacs-server host	<p>Adds the TACACS+ server host address to the list of hosts. When you enable TACACS+ authentication, the client attempts to authenticate the user with each server in the list sequentially until a successful authentication exchange is executed, or the list is exhausted. If the list is exhausted, the client automatically falls into the local authentication mode (using the local system password).</p> <p>To remove a TACACS+ server from the list of TACACS+ servers in the CLI, use the no form of this command. See no tacacs-server host, page 2-16.</p>				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> <p>tacacs-server host <i>host</i> [<i>key encryption-key</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the TACACS+ server. <i>encryption-key</i>—Identifies the encryption key (optional). </td> <td> <p>No default behavior or values.</p> </td> </tr> </tbody> </table>	Syntax Description	Defaults	<p>tacacs-server host <i>host</i> [<i>key encryption-key</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the TACACS+ server. <i>encryption-key</i>—Identifies the encryption key (optional). 	<p>No default behavior or values.</p>
Syntax Description	Defaults				
<p>tacacs-server host <i>host</i> [<i>key encryption-key</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the TACACS+ server. <i>encryption-key</i>—Identifies the encryption key (optional). 	<p>No default behavior or values.</p>				
	<p>Examples</p> <p>This result occurs when you add a TACACS+ server using its IP address (10.0.1.1) without encryption.</p> <pre>bac_dpe# tacacs-server host 10.0.1.1 % OK</pre> <p>This result occurs when you add a TACACS+ server using its IP address (10.0.1.1) and an encryption key (hg667YHHj).</p> <pre>bac_dpe# tacacs-server host 10.0.1.1 key hg667YHHj % OK</pre> <p>This result occurs when you add a TACACS+ server using its hostname (tacacs1.cisco.com) without encryption.</p> <pre>bac_dpe# tacacs-server host tacacs1.example.com % OK</pre> <p>This result occurs when you add a TACACS+ server using its hostname (tacacs1.cisco.com) and an encryption key (hg667YHHj).</p> <pre>bac_dpe# tacacs-server host tacacs1.example.com key hg667YHHj % OK</pre>				

Table 2-2 List of tacacs-server Commands (continued)

Command	Description				
no tacacs-server host	Removes the TACACS+ server host address from the list of hosts. To add a TACACS+ server, see tacacs-server host , page 2-15.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> no tacacs-server host <i>host</i> <i>host</i>—Specifies either the IP address or the hostname of the TACACS+ server. </td> <td>No default behavior or values.</td> </tr> </tbody> </table>	Syntax Description	Defaults	no tacacs-server host <i>host</i> <i>host</i> —Specifies either the IP address or the hostname of the TACACS+ server.	No default behavior or values.
	Syntax Description	Defaults			
no tacacs-server host <i>host</i> <i>host</i> —Specifies either the IP address or the hostname of the TACACS+ server.	No default behavior or values.				
<p>Examples</p> <p>This result occurs when you remove a TACACS+ server using its IP address.</p> <pre>bac_dpe# no tacacs-server host 10.0.1.1 % OK</pre> <p>This result occurs when you remove a TACACS+ server using its hostname.</p> <pre>bac_dpe# no tacacs-server host tacacs1.example.com % OK</pre>					
tacacs-server retries	Sets the maximum number of times the TACACS+ protocol exchange is tried before the TACACS+ client considers a specific TACACS+ server unreachable. When this limit is reached, the TACACS+ client moves to the next server in its TACACS+ server list or, if the TACACS+ list has been exhausted, falls back into local authentication mode.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> tacacs-server retries <i>value</i> <i>value</i>—Specifies a dimensionless number from 1 to 100. This value applies to all TACACS+ servers. </td> <td>The default is 3.</td> </tr> </tbody> </table>	Syntax Description	Defaults	tacacs-server retries <i>value</i> <i>value</i> —Specifies a dimensionless number from 1 to 100. This value applies to all TACACS+ servers.	The default is 3.
	Syntax Description	Defaults			
tacacs-server retries <i>value</i> <i>value</i> —Specifies a dimensionless number from 1 to 100. This value applies to all TACACS+ servers.	The default is 3.				
<p>Example</p> <p>This result occurs when you configure retry value for TACACS+ server:</p> <pre>bac_dpe# tacacs-server retries 10 % OK</pre>					
tacacs-server timeout	Sets the maximum length of time that the TACACS+ client waits for a response from the TACACS+ server before it considers the protocol exchange to have failed.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> tacacs-server timeout <i>value</i> <i>value</i>—Specifies the maximum length of time that the TACACS+ client waits for a TACACS+ server response. This value must be from 1 to 300 seconds, and applies to all TACACS+ servers. </td> <td>The default is 5 seconds.</td> </tr> </tbody> </table>	Syntax Description	Defaults	tacacs-server timeout <i>value</i> <i>value</i> —Specifies the maximum length of time that the TACACS+ client waits for a TACACS+ server response. This value must be from 1 to 300 seconds, and applies to all TACACS+ servers.	The default is 5 seconds.
	Syntax Description	Defaults			
tacacs-server timeout <i>value</i> <i>value</i> —Specifies the maximum length of time that the TACACS+ client waits for a TACACS+ server response. This value must be from 1 to 300 seconds, and applies to all TACACS+ servers.	The default is 5 seconds.				
<p>Example</p> <p>This result occurs when you configure timeout value for TACACS+ server:</p> <pre>bac_dpe# tacacs-server timeout 10 % OK</pre>					

radius-server

Use the **radius-server** command to configure user authentication settings in RADIUS. [Table 2-3](#) lists the keywords that you can use with this command.

Table 2-3 List of radius-server Commands

Command	Description				
radius-server host	<p>Adds the RADIUS server host address to the list of hosts. When you enable RADIUS authentication, the client attempts to authenticate the user with each server in the list sequentially until a successful authentication exchange is executed, or the list is exhausted. If the list is exhausted, the client automatically falls into the local authentication mode (using the local system password).</p> <p>The order of the commands that appears in show run is the order in which they are contacted.</p> <p>To remove a RADIUS server from the list of RADIUS servers in the CLI, use the no form of this command. See no radius-server host, page 2-18.</p> <table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> <p>radius-server host <i>host</i> [key <i>encryption-key</i>] [port <i>port-number</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the RADIUS server. <i>encryption-key</i>—Identifies the encryption key (optional). <i>port-number</i>—Identifies the port number (optional). </td> <td>No default behavior or values.</td> </tr> </tbody> </table> <p>Examples</p> <p>This result occurs when you add a RADIUS server using its IP address with key and port number.</p> <pre>bac_dpe# radius-server host 10.10.10.10 key secret port 1812 % OK</pre>	Syntax Description	Defaults	<p>radius-server host <i>host</i> [key <i>encryption-key</i>] [port <i>port-number</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the RADIUS server. <i>encryption-key</i>—Identifies the encryption key (optional). <i>port-number</i>—Identifies the port number (optional). 	No default behavior or values.
Syntax Description	Defaults				
<p>radius-server host <i>host</i> [key <i>encryption-key</i>] [port <i>port-number</i>]</p> <ul style="list-style-type: none"> <i>host</i>—Specifies the IP address or the hostname of the RADIUS server. <i>encryption-key</i>—Identifies the encryption key (optional). <i>port-number</i>—Identifies the port number (optional). 	No default behavior or values.				

Table 2-3 List of radius-server Commands (continued)

Command	Description				
no radius-server host	Removes the RADIUS server host address from the list of hosts. For details about adding a RADIUS server, see radius-server host , page 2-17.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> no radius-server host <i>host</i> <i>host</i>—Specifies either the IP address or the hostname of the RADIUS server. </td> <td>No default behavior or values.</td> </tr> </tbody> </table>	Syntax Description	Defaults	no radius-server host <i>host</i> <i>host</i> —Specifies either the IP address or the hostname of the RADIUS server.	No default behavior or values.
	Syntax Description	Defaults			
no radius-server host <i>host</i> <i>host</i> —Specifies either the IP address or the hostname of the RADIUS server.	No default behavior or values.				
Examples This result occurs when you remove a RADIUS server using its IP address: <pre>bac_dpe# no radius-server host 10.10.10.10 % OK</pre>					
radius-server retries	Sets the maximum number of times the RADIUS protocol exchange is tried before the RADIUS client considers a specific RADIUS server unreachable. When this limit is reached, the RADIUS client moves to the next server in its RADIUS server list or if the RADIUS list has been exhausted, falls back into local authentication mode				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> radius-server retries <i>value</i> <i>value</i>—Specifies a dimensionless number from 1 to 10. This value applies to all RADIUS servers. </td> <td>The default is 3.</td> </tr> </tbody> </table>	Syntax Description	Defaults	radius-server retries <i>value</i> <i>value</i> —Specifies a dimensionless number from 1 to 10. This value applies to all RADIUS servers.	The default is 3.
	Syntax Description	Defaults			
radius-server retries <i>value</i> <i>value</i> —Specifies a dimensionless number from 1 to 10. This value applies to all RADIUS servers.	The default is 3.				
Example This result occurs when you configure retry value for RADIUS server: <pre>bac_dpe# radius-server retries 10 % OK</pre>					
radius-server timeout	Sets the maximum length of time that the RADIUS client waits for a response from the RADIUS server before it considers the protocol exchange to have failed.				
	<table border="1"> <thead> <tr> <th>Syntax Description</th> <th>Defaults</th> </tr> </thead> <tbody> <tr> <td> radius-server timeout <i>value</i> <i>value</i>—Specifies maximum length of time that the RADIUS client waits for a RADIUS server response. This value must be from 1 to 30 seconds, and applies to all RADIUS servers. </td> <td>The default is 3 seconds.</td> </tr> </tbody> </table>	Syntax Description	Defaults	radius-server timeout <i>value</i> <i>value</i> —Specifies maximum length of time that the RADIUS client waits for a RADIUS server response. This value must be from 1 to 30 seconds, and applies to all RADIUS servers.	The default is 3 seconds.
	Syntax Description	Defaults			
radius-server timeout <i>value</i> <i>value</i> —Specifies maximum length of time that the RADIUS client waits for a RADIUS server response. This value must be from 1 to 30 seconds, and applies to all RADIUS servers.	The default is 3 seconds.				
Example This result occurs when you configure timeout value for RADIUS server: <pre>bac_dpe# radius-server timeout 5 % OK</pre>					

uptime

Use the **uptime** command to identify how long the system has been operational. This information is useful for determining how frequently the device is rebooted. It is also helpful when checking the reliability of the DPE when it is in a stable condition.

Syntax Description No keywords or arguments.

Defaults No default behavior or values.

Examples

```
bac_dpe# uptime
1:47am up 496 day(s), 8:49, 1 user, load average: 0.14, 0.07, 0.06
```

