



Contents

CHAPTER 1

About the Cisco Prime NAM 2404 Appliance	1-1
Summary of Appliance Features	1-2
Cisco Prime NAM 2404 Feature	1-2

CHAPTER 2

Requirements and Restrictions	2-2
Installation Process Summary	2-2
Unpack and Inspect the Appliance	2-4
Cisco Prime NAM 2404 Appliance Packing List	2-5
Install the Appliance in a Rack	2-5
Install the Transceiver Modules	2-6
Connect the Power	2-7
Connect the Appliance Cables	2-8
Connect the Management Port	2-8
Connect the Monitoring Ports	2-9
Direct Connections	2-9
Optical Tap Connections	2-9
Connect a Console Terminal	2-11
Connect a Monitor to the Appliance	2-12
Power Up the Appliance	2-12

CHAPTER 3

Logging In For the First Time	3-1
Changing the Root Password	3-2
Examples	3-3
Changing the NAM Root Password: Example	3-3
Verifying the NAM Root Password: Example	3-3
Resetting the NAM Root Password to the Default Value	3-3
Establishing Network Connectivity	3-3
Checking Your Configuration	3-5
Enabling the NAM Web Server	3-6
Verifying System Status	3-8
Configuring a Monitored Device	3-10
Configuring a Monitored Device Interface	3-10

[Creating a SPAN Session](#) 3-10
[Opening and Closing a Telnet or SSH Session to the NAM](#) 3-11
 [Examples](#) 3-12
[Setting up the CIMC](#) 3-13
 [Setting up Serial Console Connection](#) 3-14
 [Setting up Serial Console Access through External RJ-45 Port](#) 3-14
[Shutting Down and Starting Up the Appliance](#) 3-14

CHAPTER 4

[Configuring the iSCSI Array](#) 4-1
[Locating the NAM IQN](#) 4-1
[Connecting the Storage Array](#) 4-2

CHAPTER 5

[General Maintenance Guidelines](#) 5-1
[Reading the LEDs](#) 5-1
 [Cisco Prime NAM 2404 LEDs](#) 5-2
 [Reading the Cisco Prime NAM 2404 Front-Panel LEDs](#) 5-2
 [Reading the Cisco Prime NAM 2404 Rear-Panel LEDs](#) 5-5
 [Input/Output Ports and Connectors](#) 5-7
 [Reading the NIC LEDs](#) 5-8
 [Reading the AC Power Supply LED](#) 5-9
[Replacing Appliance Components](#) 5-9
 [Installing or Removing a UCS PCIe NIC Card](#) 5-9
 [Replacing Transceiver Modules](#) 5-9
 [Removing and Replacing a Hard Disk Drive](#) 5-10
 [Installing or Replacing a Power Supply](#) 5-10
[Removing or Replacing the Cisco Prime NAM 2404 Appliance](#) 5-10

CHAPTER 6

[Backing Up Your Configuration](#) 6-1
[Restoring Your Configuration](#) 6-2
[Upgrading Your Software](#) 6-2
[Recovery Installation](#) 6-3

APPENDIX A

[Troubleshooting](#) A-1
 [Troubleshooting Guidelines](#) A-1
 [Troubleshooting Appliance Problems](#) A-2
 [Serial Number Locations](#) A-4

APPENDIX B**Safety Guidelines B-1**

- General Precautions B-1
- Safety with Equipment B-2
- Safety with Electricity B-3
- Preventing Electrostatic Discharge Damage B-4
- Lifting Guidelines B-5

APPENDIX C**Technical Specifications C-1**

- C-1
- Cisco Prime NAM 2404 Technical Specifications C-1
- SFP Port Cable Specifications C-1

APPENDIX D**Sample Site Log and Preinstallation Task Checklist D-1**

- Sample Site Log D-1
- Sample Preinstallation Task Checklist D-3

APPENDIX E**Helper Utility E-1**

- Helper Utility Menu Summary E-2
- Option n - Configure Network E-2
- Option 1 - Download Application Image and Write to HDD E-3
- Option 2 - Download Application Image and Reformat HDD E-4
- Option 3 - Install Application Image from CD E-4
- Option 4 - Display Software Versions E-4
- Option 5 - Reset Application Image CLI Passwords to Default E-5
- Option 6- Send Ping E-5
- Option 7 - Configure Capture RAID Settings E-5
- Option 8 - Install Application Image From Flash and Reformat HDD E-6
- Option f - Check For and Fix Filesystem Errors on Local Disk E-6
- Option s - Show Upgrade Log E-6
- Option r - Exit and Reset Services Engine E-6
- Option h - Exit and Shutdown Services Engine E-6

