



Preface vii

Audience vii

Product Documentation vii

Related Documentation vii

Obtaining Documentation and Submitting a Service Request vii

CHAPTER 1

Introduction to DPE CLI 1-1

DPE Licensing 1-1

Accessing the DPE CLI 1-2

DPE CLI Privileges 1-3

Accessing the DPE CLI from a Local Host 1-3

Accessing the DPE CLI from a Remote Host 1-4

Authentication Support 1-5

Local Authentication 1-5

RADIUS Authentication 1-5

TACACS+ Authentication 1-6

CHAPTER 2

System Commands 2-1

aaa authentication 2-3

disable 2-4

enable 2-5

exit 2-5

help 2-6

password 2-7

show 2-8

tacacs-server 2-13

radius-server 2-15

uptime 2-17

CHAPTER 3

DPE Configuration Commands 3-1

clear cache 3-3

dpe docsis shared-secret 3-4

no dpe docsis shared-secret 3-5

dpe docsis emic-shared-secret 3-5

no dpe docsis emic-shared-secret 3-6

dpe port 3-6

dpe provisioning-group primary 3-7

no dpe provisioning-group primary 3-8

dpe provisioning-group secondary 3-8

no dpe provisioning-group secondary 3-9

dpe rdu-server 3-10

dpe reload 3-12

dpe shared-secret 3-13

dpe start | stop 3-13

dpe truststore-password 3-14

interface ip provisioning 3-14

no interface ip provisioning 3-15

interface ip provisioning fqdn 3-16

no interface ip provisioning fqdn 3-17

interface ip pg-communication 3-17

no interface ip pg-communication 3-18

service tftp 3-19

service tod 3-23

show device-attribute 3-24

dump device-attributes 3-25

show dump-device-attributes-status 3-25

show device-config 3-26

show dpe 3-27

show dpe config 3-28

CHAPTER 4

PacketCable Voice Technology Commands 4-1

debug service packetcable 4-2

service packetcable enable 4-5

no service packetcable enable 4-5

service packetcable registration encryption enable 4-6

no service packetcable registration encryption 4-6

service packetcable registration kdc-service-key 4-7

service packetcable registration policy-privacy 4-7

service packetcable snmp key-material 4-8

- no service packetcable snmp key-material 4-9
- service packetcable snmp timeout 4-9
- service packetcable show snmp log 4-9

CHAPTER 5**SNMP Agent Commands 5-1**

- snmp-server community 5-2
- no snmp-server community 5-3
- snmp-server contact 5-3
- no snmp-server contact 5-4
- snmp-server host 5-4
- no snmp-server host 5-5
- snmp-server inform 5-5
- no snmp-server inform 5-6
- snmp-server location 5-6
- no snmp-server location 5-7
- snmp-server reload 5-7
- snmp-server start | stop 5-8
- snmp-server udp-port 5-8
- no snmp-server udp-port 5-9

CHAPTER 6**Log System Management Commands 6-1**

- clear logs 6-2
- debug dpe 6-3
- debug on 6-7
- debug service tftp ipv4 | ipv6 6-7
- no debug service tftp ipv4 | ipv6 6-8
- no debug all 6-9
- log level 6-9
- show log 6-10

CHAPTER 7**Support and Troubleshooting Commands 7-1**

- clear bundles 7-1
- show bundles 7-2
- support bundle cache 7-2

CHAPTER 8

Event System Management Commands 8-1

dpe event 8-2

dpe event config 8-3

dpe event file 8-3

dpe event request 8-4

dpe event tftp 8-5

dpe event log 8-6

GLOSSARY

INDEX