



Preface vii

Audience	vii
Product Documentation	vii
Related Documentation	vii
Obtaining Documentation and Submitting a Service Request	vii

CHAPTER 1

Introduction to DPE CLI 1-1

DPE Licensing	1-1
Accessing the DPE CLI	1-2
DPE CLI Privileges	1-3
Accessing the DPE CLI from a Local Host	1-3
Accessing the DPE CLI from a Remote Host	1-4
Authentication Support	1-5
Local Authentication	1-5
RADIUS Authentication	1-5
TACACS+ Authentication	1-6

CHAPTER 2

System Commands 2-1

aaa authentication	2-3
disable	2-4
enable	2-5
exit	2-5
help	2-6
password	2-7
show	2-8
tacacs-server	2-13
radius-server	2-15
uptime	2-17

CHAPTER 3

DPE Configuration Commands 3-1

clear cache	3-3
dpe docsis shared-secret	3-4
no dpe docsis shared-secret	3-5

dpe docsis emic-shared-secret	3-5
no dpe docsis emic-shared-secret	3-6
dpe port	3-6
dpe provisioning-group primary	3-7
no dpe provisioning-group primary	3-8
dpe provisioning-group secondary	3-8
no dpe provisioning-group secondary	3-9
dpe rdu-server	3-10
dpe reload	3-12
dpe shared-secret	3-13
dpe start stop	3-13
dpe truststore-password	3-14
interface ip provisioning	3-14
no interface ip provisioning	3-15
interface ip provisioning fqdn	3-16
no interface ip provisioning fqdn	3-17
interface ip pg-communication	3-17
no interface ip pg-communication	3-18
service tftp	3-19
service tod	3-23
show device-attribute	3-24
dump device-attributes	3-25
show dump-device-attributes-status	3-25
show device-config	3-26
show dpe	3-27
show dpe config	3-28

CHAPTER 4

PacketCable Voice Technology Commands 4-1

debug service packetcable	4-2
service packetcable enable	4-5
no service packetcable enable	4-5
service packetcable registration encryption enable	4-6
no service packetcable registration encryption	4-6
service packetcable registration kdc-service-key	4-7
service packetcable registration policy-privacy	4-7
service packetcable snmp key-material	4-8

no service packetable snmp key-material **4-9**

service packetable snmp timeout **4-9**

service packetable show snmp log **4-9**

CHAPTER 5**SNMP Agent Commands **5-1****

snmp-server community **5-2**

no snmp-server community **5-3**

snmp-server contact **5-3**

no snmp-server contact **5-4**

snmp-server host **5-4**

no snmp-server host **5-5**

snmp-server inform **5-5**

no snmp-server inform **5-6**

snmp-server location **5-6**

no snmp-server location **5-7**

snmp-server reload **5-7**

snmp-server start | stop **5-8**

snmp-server udp-port **5-8**

no snmp-server udp-port **5-9**

CHAPTER 6**Log System Management Commands **6-1****

clear logs **6-2**

debug dpe **6-3**

debug on **6-7**

debug service tftp ipv4 | ipv6 **6-7**

no debug service tftp ipv4 | ipv6 **6-8**

no debug all **6-9**

log level **6-9**

show log **6-10**

CHAPTER 7**Support and Troubleshooting Commands **7-1****

clear bundles **7-1**

show bundles **7-2**

support bundle cache **7-2**

CHAPTER 8

Event System Management Commands 8-1

- dpe event 8-2
- dpe event config 8-3
- dpe event file 8-3
- dpe event request 8-4
- dpe event tftp 8-5
- dpe event log 8-6

CHAPTER 9

Hashed SNMP community string based on device IP address 9-1

- snmp hash read/write community 9-2
- snmp hash read/write format 9-3
- snmp hash read/write key 9-3
- snmp hash read/write enable 9-4
- snmp hash function 9-5
- snmp hash length 9-5

GLOSSARY

INDEX