·I|III|II CISCO

Installing and Setting Up Cisco CP Express Admin View

This chapter contains these sections:

- Downloading Cisco CP Express Admin View, page 5
- Installing Cisco CP Express Admin View, page 5
- Using Cisco CP Express Admin View, page 6

Downloading Cisco CP Express Admin View

To download Cisco CP Express Admin View, perform these steps:

1. Launch the browser, and go to the following web link:

https://software.cisco.com/download/release.html?i=!y&mdfid=281795035&softwareid=282159854&release=3.5&os

- When a login page appears, enter your login credentials and click Log In. If you do not have login credentials, register and obtain login credentials. Click Register (at the top of the page) to complete the registration process, and then return to this page. The Download Software page displays.
- 3. From the Download Software page, choose the release to download.
- Select the Cisco Configuration Professional Express 3.5 package link and click Download to download the compressed file, cisco-config-pro-exp-admin-k9-3_5-en.zip to the system.

This compressed file contains the Cisco CP Express Admin View installation files.

Installing Cisco CP Express Admin View

To install the Cisco CP Express Admin View on the router's flash memory, perform these steps:

1. Download the compressed file, cisco-config-pro-exp-admin-k9-3_5-en.zip from the following web link:

https://software.cisco.com/download/release.html?i=!y&mdfid=281795035&softwareid=282159854&release=3.5&os

- **2.** Extract the compressed file, *cisco-config-pro-exp-admin-k9-3_5-en.zip* file into the system. The *cisco-config-pro-exp-admin-k9-3_5-en.zip* file contains these files: *ccpexpressAdmin3_5_en.tar*.
- 3. Using an FTP or TFTP server, copy the extracted files onto the router's flash memory.

```
router> enable
Password: password
router# copy tftp: flash
```

4. Specify the IP address of the FTP or TFTP server, as shown in this example:

Address or name of remote host []? <xxx.xxx.xxx.xxx>

where *xxx.xxx.xxx.xxx* is the IP address of the FTP or TFTP server.

5. Specify the name of the source file that is to be copied onto the router's flash memory, as shown in this example:

Source filename []? ccpexpressAdmin_3_5_en.tar

6. Specify the name of the destination file, as shown in this example:

Destination file name []? ccpexpressAdmin_3_5_en.tar

7. Extract the ccpexpressAdmin35.tar file onto the router's flash memory, as shown in this example:

router# archive tar /xtract flash:ccpexpressAdmin_3_5_en.tar flash:/

8. After the installation is complete, delete the *ccpexpressAdmin_3_5_en.tar* file from the flash memory of the router, as shown in this example:

router# delete flash:ccpexpressAdmin_3_5_en.tar

9. Press Return to confirm the deletion.

Using Cisco CP Express Admin View

This section contains the following:

- Prerequisites, page 6
- Enabling HTTP Server or Secure Server, page 6
- Launching Cisco CP Express Admin View, page 7

Prerequisites

Before you launch the Cisco CP Express Admin View, gather the following information from your service provider:

- Virtual Channel Identifier (VCI) and Virtual Path Identifier (VPI) values if you use Asymmetric Digital Subscriber Line (ADSL) as a Wide Area Network (WAN)
- Username and password to access the Password Authentication Protocol (PAP) or Challenge Handshake Authentication Protocol (CHAP) if you use ADSL as a WAN
- (Optional) Primary and secondary DNS IP addresses
- IP subnet
- DHCP pool network

Enabling HTTP Server or Secure Server

Cisco CP Express can be accessed in one of these two modes:

- Secure mode–Uses HTTPS and requires HTTP Secure Server to be enabled on the router.
- Non-Secure mode–Uses HTTP and requires HTTP Server to be enabled on the router.

NOTE: By default, the HTTP and secure server are enabled for factory fresh routers.

You must enable HTTP or HTTPS before launching Cisco CP Express.

The login to the http service must point to the local database on the router, because the Cisco CP Express End User View is configured locally on the router.

1. To configure the router as an http server, execute this command:

router(config)# ip http server

2. To configure the router as an https server, execute this command:

router(config)# ip http secure-server

Launching Cisco CP Express Admin View

Prerequisite

Before you proceed with launching the Cisco CP Express Admin View, you must complete tasks detailed in the Cisco CP Express Quick Start Guide at the following web link:

http://www.cisco.com/c/en/us/td/docs/routers/access/800/829/software/cisco_configuration_professional_express/v3_5/guides/quickstart/CiscoCPExpress_qsg.html

CAUTION: This product is shipped with a default configuration which is unique to each device. The default configuration allows the user to access the CCP Express Quick Setup Wizard to perform basic configuration. Erasing or any other manual configuration changes prior to using CCP Express is strongly discouraged as the default configuration is mandatory for CCP Express to operate. For any guidance on these scenarios, users are requested to reach out to their platform support team.

Procedure

To launch the Cisco CP Express Admin View, perform these steps:

- 1. Launch the browser.
- 2. In the address bar, type the IP address of the router where Cisco CP Express Admin View is installed.

For example, type:

http://10.10.10.1 or http://myir800.com https://10.10.10.1 or https://myir800.com

3. Specify the username and the password of the router.

Figure 1 Authentication Page

Authentication I	Required
0	http://10.10.10.1 is requesting your username and password. The site says: "level_15 or view_access"
User Name:	
Password:	
	OK Cancel

If you are using the router for the first time, use the one-time username and password (by default, *cisco/cisco*) configured for the router.

4. Click Log In.

The Cisco CP Express launches and is ready for use. With the one-time user present, you get redirected to the Wizard page with the prompt to create a new user.

Create New User		
he username cisco is a c	onetime user. Create a new u	iser and login with the same.
UserName:	ciscocp	
New Password:	•••••	
Confirm New Password:	••••••	
	This connection is not secure. Logins entered here could be compromised.	

CAUTION: This step is mandatory as it is crucial to retain access to the router. The one-time user will be automatically removed at this stage.

Enter the username/password for the new user to be created, and click **Ok**. You will be prompted a second time to enter the username/password of the new user just created.

The Quick Setup Wizard & Advanced Setup choice page appears:



The Quick Setup Wizard is highly recommended, as it helps to bring up the device with basic configuration. The Advanced Settings option takes you to the Landing page displayed later in this document. Click on the **Quick Setup Wizard** to begin a quick and easy WAN/LAN setup wizard. The **Welcome** screen appears:

Bef	ore you begin:
+	This wizard helps to bring up your WAN/LAN connectivity quickly.
+	Ensure that you have all information from your service provider for completing the configuration. Click here for checklist
+	If you are configuring non 3G/4G based WAN connection then ensure physical WAN cable connectivity with Service Provider is proper.
+	If 3G/4G is configured as WAN then ensure SIM (Subscriber Information Module) is inserted properly in the Router slot.
+	The wizard by default enables some recommended configuration. Unless you have strong reason to change that, have them as desired.
+	You can always change the configuration and add advanced feature support once the configuration is successfully completed.
+ le	Best Practice: When using CCP Express to configure a device, do not delete/modify the config directly by logging onto the device as it will ad to misconfiguration.
-	Important Note: It is strongly recommended to use Quick Setup Wizard only when device is factory fresh.

Read through the **Before you begin** notes to make sure you have all of the information you need. When you are ready to begin, click **Get Started**. The **Basic Settings** screen appears:

	Basic	Primary WAN	Backup WAN	LAN	IOX	Wi-Fi	Security & App Exp.	Confirm & Apply
Basic Settings					Help a	ind Tips 🔞		
Router Name * :	IR829							
Domain Name * :	cisco.com			• The s	ymbol * * " ind	cates Mandatory fiel	ld.	
TimeZone * :	(GMT+05:30) Chennai, Kolkata, Mumbai, New Delhi	•						
Synchronize with I	NTP Server							
Make this router a	is NTP Master							
All the Devices (Di	ICP Client) will have time synchronized with router							
& Cancel								

Mandatory fields are marked with a red asterisk (*). Continue through the various screens by clicking **Next** to complete your basic configuration. When you are complete, the **Summary** screen appears:

Basic / IOX / Wilf Image: Primary WAN Image: Basic / IOX / Wilf Image: Primary WAN Image: Security & App Exp. > Router Name: IR825 > WAN Interface: Calular 0/0 > WAN Interface: Calular 0/0 > WAN Interface: Calular 0/0 > South Name: ICC pool > Coso recommended security settings: > Domain Name: Coso com > lpok-Internatic > lpok-Internatic > lpok-Internatic > LNN Internatic > LNN Internatic > LNN Internatic > Long lock fails: 255:255:255 Enabled > TimiZane: (GMT-Name) > NAT: Enabled > LNAT: Enabled > Default gateway: Viant [10:10:0] Enabled > DIID Senser: Automatic > Pervisione: Disabled > PProE: Enabled > Default gateway: Viant [10:10:10] Enabled > IND Enabled > With Enabled > Pervisione: Disabled > Pervisione: Disabled	Summary							
Nuter Name: R825 > WAN Interface: Cellular 010 > WAN Interface: GigabitEhreme® > Pool Name: ccp-pool > Cocar recommended security settings: Domain Name: ticks.com > Ipol: Automatic > Ipol: Automatic > LNN Network: 101.01.00 Enabled Timniagne (BMT-R053) Chemat, give Name > Ipol: Nationatic > Jpol: Network: 103.02.07 Enabled Timniagne (BMT-R053) Chemat, give Name > NATE Enabled > Default gateway: Want [10.10.01.01 Enabled D DMS server, Namese: > Persistance: Disabled > PPReE Enabled > Default gateway: Want [10.10.01.01] NDF Server, Namese: > Persistance: Disabled > PPReE Enabled > Link Network (Name) NDF Server, Nambled > Unit Enabled > Unit Enabled > Unit Enabled > Unit Enabled	💙 Basic / IOX / Wifi	< Primary WAN	🛩 Backup WAN	✓ LAN	< Security & App Exp.			
	Router Name: (R829 Comain Name: ctsco.com TimeZone: (GMT+05:38) Chennal, Kolata, Mumbak, New Dehin ONS Server: Automatic NITS Server: Disabled Not Enabled Vitifi: Enabled O	WAN Interface: Cellular 0/0 Jovid: Automatic Jovid: Not configured NAT: Finabled Persistance: Disabled	WAN Interface: GigabitEthernet0 Ipu4: Automatic Ipu6: Not configured VANT: Enabled POPGE: Enabled	 Pool Name: ccp-pool LAN Network: 10.10.10.0 Subnet Mask: 255.255.255.128 Default gateway: Vian1 [10.10.10.1] 	 Cisco recommended security settings: Enabled 			

Review your settings and if satisfied, click **Submit**. Once the configuration is pushed, you will be automatically redirected to the Dashboard page.



You can now use Cisco CP Express to configure additional features or modify existing feature configurations. This is the same page that will be displayed to you once the basic configuration is present on the device.