

Installation

This chapter explains how to install the Device Manager software and contains the following sections:

- Required Expertise, page 2-1
- System Requirements, page 2-1
- Device Manager Installation, page 2-2
- Device Manager Removal, page 2-5

Required Expertise

This guide is intended for Field Technicians who have basic experience operating a computer laptop.

System Requirements

This section lists the system requirements for Device Manager Release 4.1.

Laptop

The laptop running Device Manager must have the following:

- Microsoft Windows 7 Enterprise
- 2 GHz or faster processor recommended
- 1 GB RAM minimum (for potential large log file processing)
- WiFi or Ethernet interface
- 4 GB disk storage space
- Windows login enabled
- Utility-signed Certificate Authority (CA) and Client Certificate for router authentication (obtained from your IT department)
- Customer-specific IT security hardening to keep the Device Manager laptop secure

CGR 1000

I

See Feature History, page 1-14 for CGR 1000 software requirements.

1

IR500

See Feature History, page 1-14 for IR500 firmware requirements.

CG-NMS

To work with Device Manager, CG-NMS must be Release 2.1 or greater.

Device Manager Installation

To install the Device Manager:

- Step 1 Double-click the Device Manager installer executable to start installation.
- Step 2 Click Next.



Γ

Step 3 Select the check box to accept the terms of the License Agreement, and then click Next.

👺 Setup	
License Agreement	,
Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.	
IMPORTANT: PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY. IT IS VERY IMPORTANT THAT YOU CHECK THAT YOU ARE PURCHASING CISCO SOFTWARE OR EQUIPMENT FROM AN APPROVED SOURCE AND THAT YOU, OR THE ENTITY YOU REPRESENT (COLLECTIVELY, THE "CUSTOMER") HAVE BEEN REGISTERED AS THE END USER FOR THE PURPOSES OF THIS CISCO END USER LICENSE AGREEMENT. IF YOU ARE NOT REGISTERED AS THE END USER YOU HAVE NO LICENSE TO USE THE SOFTWARE AND THE LIMITED WARRANTY IN THIS END USER LICENSE AGREEMENT DOES NOT APPLY. ASSUMING YOU HAVE	
Do you accept this license?	
SitRock Installer	391511

1

Step 4 Select an installation directory by clicking the folder icon and browsing to a directory, or click **Next** to accept the default directory.

Setup	
Installation Directory	•
Please specify the directory where Cisco Connected Grid Device Manager will be installed.	
Installation Directory C:\Program Files (x86)\Cisco\Cisco Connected Grid Devic 👸	
BitRock Installer	613

Step 5 Click **Next** to begin the installation.

👺 Setup	
Ready to Install	O
Setup is now ready to begin installing Cisco Connected Grid D computer.	evice Manager on your
BitRock Installer	Next > Cancel



Step 6 Click Finish to exit the Setup Wizard and launch the Device Manager.

Device Manager Removal

ſ

To remove the Device Manager application, click **Start > All Programs > Cisco Connected Grid Device Manager > Uninstall Cisco Connected Grid Device Manager**, or use **Uninstall or change a program** from **Control Panel > Programs and Features**.



1