



Boot Commands on Cisco IOS XR Software

This module describes the commands used to boot or reset Cisco IOS XR software.

For more information about ROM Monitor (ROMMON) and boot tasks, see *Cisco IOS XR ROM Monitor Guide for the Cisco XR 12000 Series Router* or *Cisco IOS XR Getting Started Guide for the Cisco XR 12000 Series Router*.

- [config-register, page 2](#)
- [mirror, page 5](#)
- [mirror pause, page 7](#)
- [mirror resume, page 9](#)
- [mirror verify, page 11](#)
- [reload, page 13](#)
- [reload \(administration EXEC\), page 16](#)
- [show epm trace boot, page 18](#)
- [show mirror, page 20](#)
- [show reboot, page 24](#)
- [show system backup, page 28](#)
- [show variables boot, page 32](#)
- [show variables system, page 34](#)
- [system backup, page 36](#)
- [system boot-sequence, page 40](#)

config-register

To define the configuration register boot value, use the **config-register** command in administration EXEC mode.

config-register *value* [**location** {*node-id* | **all**}]

Syntax Description

<i>value</i>	Hexadecimal or decimal value that represents the 16-bit configuration register value to be used the next time the router is reloaded. Range is from 0x0 to 0xFFFF (0 to 65535 in decimal). For information about common configuration register settings, see Table 1: Common Configuration Register Settings, page 3 .
location { <i>node-id</i> all }	(Optional) Specifies the RP node for which to define the configuration register boot value. The all keyword specifies all RP nodes.

Command Default

By default, the configuration register value is 0x102 after a Turboboot.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.2	This command was introduced.
Release 3.3.0	Support was added for the location keyword.
Release 3.4.0	No modification.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The *configuration register setting* is a 16-bit, user-configurable value that determines how the route processor (RP) functions during initialization. The configuration register can cause the RP to boot normally from the default configuration, or to enter ROMMON mode during a reload. Configuration register settings can also be used to perform tasks such as password recovery.

The **config-register** command is entered in administration EXEC mode, on the designated shelf controller (DSC) of the system. The DSC is the primary RP of the owner secure domain router (owner SDR). When setting the configuration register value for the **config-register** command, note the following conditions:

- If both the primary and standby DSC are up and running when the configuration register value is set, the configuration register value applies to both the primary and standby DSC.
- By contrast, if only the primary DSC is up and running when the configuration register value is set and the standby DSC is introduced into the router at a later time, the router does *not* attempt to synchronize the configuration register value for the standby RP to that of the active RP; in this situation, the configuration register setting applied to the standby DSC is determined by the configuration register value set in ROMMON mode.



Note

To display the current configuration settings, use the **show variables boot** command .

This table describes the most commonly used configuration register settings.

Table 1: Common Configuration Register Settings

Value	Description
0x0	RP enters ROMMON mode (rommon B1>) on the next system boot.
0x2	RP loads the Cisco IOS XR software and default configuration on the next system boot. After logging in, the user can access EXEC mode.
0x102	Router loads the Cisco IOS XR software with the console Break key disabled on the next system boot.
0x40	Router enters the password recovery mode on the next system boot.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to set the configuration register on the DSC to 0x2. Setting the configuration registration to 0x2 causes the router to boot the Cisco IOS XR software and enter EXEC mode during a router reload.

```
RP/0/5/CPU0:router(admin)# config-register 0x2
```

```
Sun May 31 19:49:48.624 PST Successfully set config-register to 0x2 on node  
0/5/CPU0
```

Related Commands

Command	Description
reload, page 13	Performs a reload of the route processor.
show variables boot, page 32	Displays the configuration register setting and boot file setting for the RPs in the system.
show version	Displays information about the running Cisco IOS XR software.

mirror

To configure disk mirroring on a node, use the **mirror** command in global configuration mode. To disable disk mirroring, use the **no** form of this command.

mirror location [preconfigure] node-id primary-device:secondary-device:

no mirror location

Syntax Description

location <i>node-id</i>	Specifies the node of the RP. It can be a node that is not yet installed if the preconfigure keyword is used. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
preconfigure	(Optional) Enables you to specify a node that is not yet installed.
<i>primary-device</i> :	Specifies the primary boot device used to store installation packages and configuration files. Supported devices are: <ul style="list-style-type: none"> • disk0: • disk1: • compactflash: (if installed)
<i>secondary-device</i> :	Storage device on the same RP as the <i>primary-device</i> , to where critical data is replicated. Supported devices are the same as for <i>primary-device</i> : , but <i>secondary-device</i> : must be different than the <i>primary-device</i> : .

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror** command replicates all critical data contained in the primary partition of the primary boot device, onto a second storage device on the same RP. Therefore, if the primary boot device fails, applications continue to be serviced transparently by the secondary device, without having to switch control to a standby RP.

Before the **mirror** command can be used, the secondary storage device must be partitioned using the command. If the primary boot device is not partitioned, once mirroring is enabled and all data on the primary boot device is replicated to the secondary device, the primary boot device is partitioned automatically. This guarantees that only critical data on the primary boot device is mirrored to the secondary device. Noncritical data, such as logging data, should not be mirrored and should, therefore, be saved to the secondary partition on the storage device.

To temporarily suspend disk mirroring without changing the configuration, use the **mirror pause** command in EXEC mode.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to configure disk mirroring from the primary boot device (disk0:) to the secondary storage device (disk1:):

```
RP/0/0/CPU0:router(config)# mirror location 0/rp0/cpu0 disk0: disk1:
```

Related Commands

Command	Description
format	Formats a file system.
mirror pause, page 7	Temporarily pauses disk mirroring on a node.
mirror resume, page 9	Resumes disk mirroring on a node after it has been temporarily stopped.

mirror pause

To temporarily pause disk mirroring on a node, use the **mirror pause** command in EXEC or administration EXEC mode.

mirror pause [**location** {*node-id* | **all**}]

Syntax Description

location {*node-id* | **all**} (Optional) Specifies the node of the RP. The *node-id* argument is entered in the *rack/slot/module* notation. The **all** keyword specifies all RP nodes.

Command Default

If no node is specified, disk mirroring is paused on the active RP.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror pause** command temporarily pauses the mirroring of the primary boot device. This command is primarily useful during an installation operation to prevent significant performance degradation on single CPU boards. The **mirror pause** command does not change the configured state of mirroring, but rather causes the mirroring to be suspended until the **mirror resume** command is used.

The **mirror pause** command has no affect if the **mirror** configuration command is not enabled.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to pause disk mirroring on the active RP:

```
RP/0/0/CPU0:router# mirror pause
```

Related Commands

Command	Description
mirror, page 5	Configures disk mirroring on a node.
mirror resume, page 9	Resumes disk mirroring on a node after it has been temporarily stopped.

mirror resume

To resume disk mirroring on a node after it has been temporarily stopped, use the **mirror resume** command in EXEC or administration EXEC mode.

mirror resume [**location** {*node-id* | **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node of the RP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.
---	---

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror resume** command resumes the mirroring of the primary boot device after it has been temporarily paused with the **mirror pause** command.

The **mirror resume** command has no affect if the **mirror** configuration command is not enabled and the **mirror pause** command has not been used.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to resume disk mirroring on the active RP:

```
RP/0/0/CPU0:router# mirror resume
```

Related Commands

Command	Description
mirror, page 5	Configures disk mirroring on a node.
mirror pause, page 7	Temporarily pauses disk mirroring on a node.

mirror verify

To verify disk synchronization for disk mirroring on a node, use the **mirror verify** command in EXEC or administration EXEC mode.

mirror verify [*location node-id*]

Syntax Description	location node-id (Optional) Specifies the node of the RP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
---------------------------	--

Command Default If no node is specified, the verification is done on the active RP.

Command Modes EXEC
Administration EXEC

Command History	Release	Modification
	Release 3.6.0	This command was introduced.
	Release 3.7.0	No modification.
	Release 3.8.0	No modification.
	Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror verify** command verifies the synchronization consistency between the primary and secondary media devices being used in mirroring. The command verifies that the full contents are identical between the mirrored devices and reports any inconsistencies found.

Task ID	Task ID	Operations
	root-lr	read, write

Examples The following example shows how to verify the disk mirroring on the active RP:

```
RP/0/0/CPU0:router# mirror verify
```

```
Mirror Verify Information for 0/0/CPU0.
=====
Primary device and secondary device are fully synchronized.
```

Related Commands

Command	Description
mirror, page 5	Configures disk mirroring on a node.

reload

To reload the designated secure domain router shelf controller (DSDRSC) , use the **reload** command in EXEC mode.

reload

Syntax Description This command has no arguments or keywords.

Command Default No default behavior or values

Command Modes EXEC

Releases	Modifications
Release 3.2	This command was introduced.
Release 3.3.0	No modification.
Release 3.4.0	No modification.
Release 3.4.1	The force keyword was not supported.
Release 3.5.0	Prompt was added to continue with reload in the event that there is no available standby node.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **reload** command to cause the DSDRSC to reload the Cisco IOS XR software according to the configuration register setting (for example, 0x0 to enter ROMMON mode and 0x2 to reload the RP to EXEC mode). If a standby DSDRSC is in the ready redundancy state, the **reload** command also causes the router to fail over to the standby DSDRSC . Use the **show redundancy** command in EXEC mode to display the status of the standby RP.

When the **reload** command is used and a switchover occurs, the running (active) software configuration is automatically maintained during switchover.



Caution

If a standby RP is not installed or is not in the ready state, then the router experiences a loss of service while the active RP is reloading Cisco IOS XR software. To view the status of the standby RP, issue the **show redundancy** command in EXEC mode.

If you use the **reload** command and there is no available standby node, you are prompted to continue with the reload:

```
RP/0/0/CPU0:router# reload
Standby card not present or not Ready for failover. Proceed?[confirm]y
```

Task ID

Task ID	Operations
root-lr	execute

Examples

The following example shows how to reload the active RP. If a standby RP is in the ready state, then the router fails over to the standby RP. If the standby RP is not installed or is not in the ready state, then the router enters ROMMON mode and routing operations stop.

```
RP/0/0/CPU0:router# reload
Updating Commit Database. Please wait...[OK]
Proceed with reload? [confirm] y

PCI0 device[7]: Vendor ID 0x10ee
PCI0 device[7]: Device ID 0x300e
PCI1 device[7]: Device ID 0x1100
PCI1 device[7]: Vendor ID 0x1013
PCI1 device[8]: Device ID 0x649
PCI1 device[8]: Vendor ID 0x1095
PCI1 device[9]: Device ID 0x5618
PCI1 device[9]: Vendor ID 0x14e4
PCI1 device[10]: Device ID 0x5618
PCI1 device[10]: Vendor ID 0x14e4
System Bootstrap, Version 1.15(20040120:002852) ,
Copyright (c) 1994-2004 by cisco Systems, Inc.
Board type is 0x100000 (1048576)
Enabling watchdog
Broadcom 5618 #0 Found on PCI
Broadcom 5618 #1 Found on PCI
No. of BCM 56xx switches found 2 .
BCM Switch #0 initialisation complete.
BCM Switch #1 initialisation complete
G4(7450-SMP-GT64260_A) platform with 2048 Mb of main memory

rommon B1 >
```

Related Commands

Command	Description
config-register , page 2	Defines the configuration register setting in administration EXEC mode.

Command	Description
reload (administration EXEC), page 16	Performs a reload of a single node or all nodes in the system.
show redundancy	Displays the redundancy status of the RPs.

reload (administration EXEC)

To reload a node or all nodes on a single chassis or multishelf system, use the **reload** command in administration EXEC mode.

reload [**location** {*node-id* | **all**} | **rack** *rack-number*]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node to reload. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.
rack	Reloads all the nodes on a specified chassis.
<i>rack-number</i>	Rack number of the line card chassis or fabric chassis.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.3.0	This command was introduced.
Release 3.4.0	No modification.
Release 3.4.1	The force keyword was not supported.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To reload a specific node on the router, specify the **reload** command with the **location** *node-id* keyword and argument. The *node-id* is expressed in the *rack/slot/module* notation.

Task ID

Task ID	Operations
root-system	execute

Examples

The following example shows how to reload all nodes on the router:

```
RP/0/0/CPU0:router(admin)# reload location all

Graceful reload of all nodes not supported
Assuming 'force'
Operation may result in file corruptions or loss of config. Proceed [Y/N]? y
```



Note

To ensure the sanity of the configuration file system, enter the **cfs check** command on each SDR impacted by the reload operation . If you enter the **reload location all** command, run the **cfs check** command on every SDR in the system before reloading the router.

Related Commands

Command	Description
cfs check	Verifies the Configuration File System (CFS).
config-register, page 2	Defines the configuration register setting in administration EXEC mode.
reload, page 13	Performs a reload of the route processor .
show redundancy	Displays the redundancy status of the RPs.

show epm trace boot

To display execution path monitoring traces, use the **show epm trace boot** command in administration EXEC mode.

show epm trace boot [**hexdump**] [**last** *n*] [**reverse**] [**stats**] [**tailf**] [**unique**][**verbose**] [**wrapping**][**file** *filename original*] [**location** {*node-id* | **all**}]

Syntax Description

hexdump	(Optional) Displays traces in hexadecimal format.
last <i>n</i>	(Optional) Displays the last <i>n</i> number of traces only.
reverse	(Optional) Displays the most recent traces first.
stats	(Optional) Displays execution path statistics.
tailf	(Optional) Displays new traces as they are added.
unique	(Optional) Displays unique entries only, along with the count of the number of times this entry appears.
verbose	(Optional) Displays additional internal debugging information.
wrapping	(Optional) Displays wrapping entries.
file <i>filename original</i>	(Optional) Specifies the filename of the file to display. You can specify up to four trace files.
location { <i>node-id</i> all }	(Optional) Specifies the node of the RP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. You can specify up to four nodes. The all keyword specifies all RP nodes.

Command Default

All traces from all trace files from all RP nodes are displayed in time order, starting with the oldest traces.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show epm trace boot** command provides a simple way of tracking and time-stamping critical events to clearly understand their temporal relationship to one another and the amount of time spent performing critical operations. The command displays a merged output from a set of trace files.

Task ID

Task ID	Operations
basic services	read

Examples

The following example shows sample output from the **show epm trace boot** command:

```
RP/0/5/CPU0:router(admin)# show epm trace boot
Mon Jun 1 10:56:41.515 PST
24 wrapping entries (1024 possible, 3 filtered, 24 total)
Jan 1 08:00:04.179 epm/boot 0/5/CPU0 t1 @ 00:00:04 - [init] process-start
Jan 1 08:00:11.790 epm/boot 0/5/CPU0 t1 @ 00:00:11 - [insthelper] process-start
Jan 1 08:00:57.943 epm/boot 0/5/CPU0 t1 @ 00:00:57 - [sysmgr] process-start
Jan 1 08:01:00.051 epm/boot 0/5/CPU0 t7 @ 00:01:00 - [sysmgr] start-level: start
Jan 1 08:01:01.259 epm/boot 0/5/CPU0 t1 @ 00:01:01 - [sw_dwnld_svr] process-start
Jan 1 08:01:15.077 epm/boot 0/5/CPU0 t7 @ 00:01:15 - [sysmgr] start-level: admin
Jan 1 08:01:18.403 epm/boot 0/5/CPU0 t1 @ 00:01:18 - [instdir] process-start
Jan 1 08:01:36.537 epm/boot 0/5/CPU0 t1 @ 00:01:36 - [instdir_lr] process-start
Jan 1 08:02:33.210 epm/boot 0/5/CPU0 t14 @ 00:02:33 - [sysmgr] admin-plane-up
Jan 1 08:02:33.320 epm/boot 0/5/CPU0 t4 @ 00:02:33 - [cfgmgr-rp] admin-config-start
Jan 1 08:03:35.017 epm/boot 0/5/CPU0 t4 @ 00:03:35 - [cfgmgr-rp] admin-config-done
Jan 1 08:03:35.736 epm/boot 0/5/CPU0 t1 @ 00:03:35 - [devc-conaux] exec-available
Jan 1 08:03:38.247 epm/boot 0/5/CPU0 t9 @ 00:03:38 - [sysmgr] start-level: infra
Jan 1 08:03:43.679 epm/boot 0/5/CPU0 t4 @ 00:03:43 - [cfgmgr-rp] admin-plane-mount-done
Jan 1 08:03:58.985 epm/boot 0/5/CPU0 t7 @ 00:03:58 - [instdir] ready-for-requests
May 12 01:40:52.188 epm/boot 0/5/CPU0 t10 @ 00:04:48 - [sysmgr] start-level: active
May 12 01:41:40.431 epm/boot 0/5/CPU0 t10 @ 00:05:36 - [sysmgr] start-level: final
May 12 01:41:56.595 epm/boot 0/5/CPU0 t4 @ 00:05:52 - [cfgmgr-rp] lr-config-start
May 12 01:41:58.117 epm/boot 0/5/CPU0 t9 @ 00:05:54 - [sysmgr] lr-plane-up
May 12 01:43:04.868 epm/boot 0/5/CPU0 t4 @ 00:07:01 - [cfgmgr-rp] lr-config-done
May 12 01:43:05.431 epm/boot 0/5/CPU0 t4 @ 00:07:01 - [cfgmgr-rp] bulk-interface-config-start
May 12 01:43:05.929 epm/boot 0/5/CPU0 t7 @ 00:07:02 - [cfgmgr-rp] node-config-done
May 12 01:43:06.179 epm/boot 0/5/CPU0 t4 @ 00:07:02 - [cfgmgr-rp] bulk-interface-config-start
May 12 01:43:06.841 epm/boot 0/5/CPU0 t7 @ 00:07:02 - [cfgmgr-rp] node-config-done
```

In this sample output, the time stamp following the @ sign is the elapsed time in the format hh:mm:ss since the execution phase started (for example, since node start, in the case of a boot).

show mirror

To display disk mirroring information, use the **show mirror** command in EXEC or administration EXEC mode.

show mirror [**location** {*node-id* | **all**}]

Syntax Description

location {*node-id* | **all**} (Optional) Specifies the node of the RP for which to display the mirroring information. The *node-id* argument is entered in the *rack/slot/module* notation. The **all** keyword specifies all RP nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
filesystem	read

Examples

The following is sample output from the **show mirror** command:

```
RP/0/0/CPU0:router# show mirror

Mirror Information for 0/0/CPU0.
=====
```

```

Mirroring Enabled
  Configured Primary:      disk0:
  Configured Secondary:   disk1:

Current Mirroring State:  Syncing Files
  Current Physical Primary: disk1:
  Current Physical Secondary: disk0:

Mirroring Logical Device:  disk0:

Physical Device      State      Flags
-----
disk0:               Available  Enabled Formatted
disk1:               Available  Enabled Formatted
compactflash:        Not Present
disk0a:              Available  Formatted
disk1a:              Available  Formatted
compactflasha:       Not Present

Mirroring Rommon Variable
BOOT_DEV_SEQ_CONF = disk0;;disk1:
BOOT_DEV_SEQ_OPER = disk1:
MIRROR_ENABLE = Y
    
```

describes the significant fields shown in the display.

Table 2: show mirror Field Descriptions

Field	Description
Mirroring Enabled	Indicates whether mirroring is enabled or disabled.
Configured Primary	If mirroring is enabled, the configured primary disk for mirroring.
Configured Secondary	If mirroring is enabled, the configured secondary disk for mirroring.
Current Mirroring State	<p>Current status of mirroring. Possible values are as follows:</p> <p>Syncing files—Files are being synchronized between the primary and secondary disks.</p> <p>Not Configured—Mirroring is not configured.</p> <p>Mirroring Paused—In this state, no mirroring is being done to the secondary device and the disk redundancy has been removed. The values of the BOOT_DEV_SEQ_OPER and MIRROR_ENABLE variables reflect this.</p> <p>Redundant—The primary and secondary disks are totally in synchronization. Any read or write failure on the primary device results in disk redundancy switchover such that all operations are performed on the secondary device.</p>
Current Physical Primary	Current primary disk.

Field	Description
Current Physical Secondary	Current secondary disk.
Mirroring Logical Device	Device name used by the mirroring process to intercept all application requests to that named device before passing them through to one of the mirrored physical devices.
Physical Device	Physical disk in router.
State	Status of the disk. Possible values are as follows: Available—Disk exists in router and is available. Not present—Disk does not exist in router. Partitioning of disks is available only after the disk has been formatted with the partition keyword.
Flags	Enabled—Disk mirroring has been enabled on this device and the device is part of the mirroring process. Repaired—During the boot, some minor inconsistencies were discovered on the disk and were repaired to make the file system consistent. Formatted—Disk was formatted before mirroring was enabled.
BOOT_DEV_SEQ_CONF=	ROM Monitor environmental variable for the boot disk sequence. This variable is set when mirroring is enabled through the mirror configuration command. The devices in this ROMMON variable declare the primary and the secondary devices of the mirroring process. The first device is the primary device and the second device is the secondary device in the mirroring process. Note This variable is also shared by the disk backup feature. This variable can also be set or unset using the system boot-sequence command of the disk backup feature. But the use of system boot-sequence and system backup commands is blocked, if mirroring is enabled.
BOOT_DEV_SEQ_OPER=	ROM Monitor environmental variable that reflects the state of the disk redundancy status. When mirroring is enabled and the state is redundant, this variable is set to the primary device followed by the secondary device. When mirroring is not in the redundancy state, then this variable is updated to contain only the primary device.

Field	Description
MIRROR_ENABLE	ROM Monitor environmental variable whose value reflects the mirroring status. If it is set to Y, then mirroring is enabled. If it is set to P, then mirroring is paused. If empty, mirroring is not enabled.

Related Commands

Command	Description
mirror, page 5	Configures disk mirroring on a node.
mirror verify, page 11	Verifies disk synchronization for disk mirroring on a node.

show reboot

To display reboot information for a node, use the **show reboot** command in EXEC or administration EXEC mode.

show reboot {{first|last} {crashinfo|syslog|trace}|graceful|history [reverse]|pcds} location *node-id*

Syntax Description

first	(Optional) Displays information about the first ungraceful reboot.
last	(Optional) Displays information about the last ungraceful reboot.
crashinfo	Displays crash information for an ungraceful reboot.
syslog	Displays the syslogs related to an ungraceful reboot.
trace	Displays trace information for an ungraceful reboot.
graceful	Displays information about the last graceful reboot.
history	Displays the reboot history of a specific node.
reverse	(Optional) Displays the reboot history information in reverse chronological order.
pcds	Displays PCDS critical information about the last ungraceful reboot.
location <i>node-id</i>	Specifies which node to reload. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.6.0	This command was introduced.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **history** keyword for the **show reboot** command displays all reboot causes stored for previous node resets.

Crash information (**crashinfo**), syslog, and kernel dumper ltrace (**trace**) can be displayed for the first or last reboot if it is an ungraceful reboot.

Task ID

Task ID	Operations
system	read

Examples

The following example shows sample output from the **show reboot** command with the **history** keyword:

```
RP/0/0/CPU0:router# show reboot history location 0/rp0/cpu0
```

No	Time	Cause Code	Reason
01	Thu Jul 19 00:25:03 2007	0x00000001	Cause: User Initiated reload Process: reload Traceback: fc1941a0 fc194290 fc042d90 48200624 48202120 0
02	Thu Jul 19 20:32:57 2007	0x21000010	Cause: Missed deadline, client: sc-reddrv-main, timeout: 5 Process: wd-critical-mon Traceback: fc1941a0 fc194290 48200738 482013cc 48201c04 fc1d4fb0
03	Thu Jul 19 22:21:05 2007	0x00000000	
04	Thu Jul 19 22:44:37 2007	0x00000045	Cause: Non-dSC node booted with composite image Process: insthelper Traceback: fc1941a0 fc194290 fc61e4a0 4820f928 48210654 48201cc0
05	Thu Jul 19 22:52:19 2007	0x00000045	Cause: Non-dSC node booted with composite image Process: insthelper Traceback: fc1941a0 fc194290 fc6204a0 4820f928 48210654 48201cc0
06	Fri Jul 20 02:10:51 2007	0x00000001	Cause: User Initiated reload Process: reload Traceback: fc15a1a0 fc15a290 fc045d90 48200624 48202120 0
07	Mon Jul 23 19:39:49 2007	0x00000045	Cause: RP cold booted with incorrect software Process: insthelper Traceback: fc1941a0 fc194290 fc61a4a0 4820f8b0 48210fc8 48201cc0
08	Mon Jul 23 19:54:45 2007	0x00000002	Cause: User Initiated Reboot Process: reboot Traceback: fc1941a0 fc194290 48200154 48201468 0 0

The following example shows sample output from the **show reboot** command with the **first crashinfo** keywords:

```
RP/0/0/CPU0:router# show reboot first crashinfo location 0/rp0/cpu0
```

```
Crashinfo Timestamp: Thu Jul 19 20:32:57 2007
```

20070719 20:32:57

Crash Reason: Cause code 0x21000010 Cause: Missed deadline,
 client: sc-reddrv-main, timeout: 5 Process: wd-critical-mon
 Traceback: fc1941a0 fc194290 48200738 482013cc 48201c04 fc1d4fb0 Timezone UTC0

Exception at 0xfc1944c8 signal 5 c=1 f=3

Active process(s):
 pkg/bin/wd-critical-mon Thread ID 1 on cpu 0
 pkg/bin/l3test Thread ID 0 on cpu 1

```

REGISTER INFO
  r0      r1      r2      r3
R0 01000000 4817e8c0 4820e208 000000de
   r4      r5      r6      r7
R4 fc1b4856 7fffffff 4817e738 fc1b4856
   r8      r9      r10     r11
R8 00000000 602cf522 00000000 00000000
   r12     r13     r14     r15
R12 602cf51c 4820e1a0 00000000 00000000
   r16     r17     r18     r19
R16 00000000 00000000 00000000 00000000
   r20     r21     r22     r23
R20 00000000 00000000 48200000 48200000
   r24     r25     r26     r27
R24 48200000 48200000 48200000 48200000
   r28     r29     r30     r31
R28 00000028 00000001 21000010 6029b000
   cnt     lr      msr     pc
R32 00000000 fc194290 0002d932 fc1944c8
   cnd     xer
R36 44000094 20000006
    
```

SUPERVISOR REGISTERS

Memory Management Registers

Instruction BAT Registers

Index #	Value
IBAT0U #	0x1ffe
IBAT0L #	0x12
IBAT1U #	0
IBAT1L #	0
IBAT2U #	0x30000ffe
IBAT2L #	0xf0000032
IBAT3U #	0xffffc0003
IBAT3L #	0x40011

Data BAT Registers

Index #	Value
DBAT0U #	0x1ffe
DBAT0L #	0x12
DBAT1U #	0
DBAT1L #	0x10000012
DBAT2U #	0x30000ffe
DBAT2L #	0xf000006a
DBAT3U #	0xffffc0003
DBAT3L #	0x40011

Segment Registers

Index #	SR-Value
0 #	0
1 #	0
2 #	0
3 #	0
4 #	0
5 #	0
6 #	0
7 #	0
8 #	0
9 #	0

```

10 # 0
11 # 0
12 # 0
13 # 0
14 # 0
15 # 0

Exception Handling Registers
Data Addr Reg # DSISR
0x602cf440 # 0x42000000
SPRG0 # SPRG1 # SPRG2 # SPRG3
0x1 # 0x21000010 # 0x6029b000 # 0
SaveNRestore SRR0 # SaveNRestore SRR1
0xfc1944c4 # 0x2d932

Miscellaneous Registers
Processor Id Reg # 0
HID0 # 0x8410c0bc
HID1 # 0x9001ac80

MSSCR0 # 0x88000
MSSSR0 # 0

STACK TRACE
#0 0xfc194290
#1 0x48200738
#2 0x482013cc
#3 0x48201c04
#4 0xfc1d4fb0
    
```

Related Commands

Command	Description
reload , page 13	Performs a reload of the route processor .

show system backup

To display the system backup details and history, use the **show system backup** command in EXEC or administration EXEC mode.

show system backup [*target-device*] [**details** | **diff**] [**verify**] **location** { *node-id* | **all** }

Syntax Description

<i>target-device</i>	(Optional) Displays the backup details and history for the specified device. The supported devices are: <ul style="list-style-type: none"> • disk0: • disk1: • compactflash: (if installed)
details	(Optional) Lists the software packages and configurations stored on the specified backup device.
diff	(Optional) Displays the differences between the software packages and configuration files on the backup device with the packages and configuration files on the current boot device.
verify	(Optional) Verifies the software packages and configuration files stored on the specified backup device.
location { <i>node-id</i> all }	(Optional) Specifies the node of the RP for which to display information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.

Command Default

Enter the **show system backup** command without keywords or arguments to display the date, time, and status of the last backup for the current designated secure domain router shelf controller (DSDRSC) . This command also displays the configured primary and secondary boot devices.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.4.0	This command was introduced.
Release 3.5.0	No modification.
Release 3.6.0	No modification.

Release	Modification
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the command to display details of the current system backup on a local storage device. The command displays information about the backup performed for the active RP to which you are logged in, including the date, time, and status of the last backup.

- Use the *target-device* argument to display backup information for a specified device on a RP node.
- Use the **details** keyword to list information about the software packages and configuration files stored on the backup device.
- Use the **diff** keyword to display the differences between the software and configurations on the backup device and the software and configurations on the currently active boot disk.
- Use the **location node-id** keyword and argument to display information for a backup on a specific node. Use the **location all** keywords to display information for backups on all nodes in the system.

Various Command Modes

- To display information for the current secure domain router (SDR), enter the **show system backup** command in the EXEC mode of that SDR.
- When the command is entered in administration EXEC mode, the backup information for the owner SDR is displayed.

Task ID

Task ID	Operations
root-lr	execute

Examples

In the following example, the **show system backup** command displays the status of the last system backup:

```
RP/0/0/CPU0:router# admin
RP/0/0/CPU0:router(admin)# show system backup

System Backup information for node0_0_CPU0 on disk1:
=====
Last Backup Successful
Backup started at Sat Jun 24 12:22:10 2006
  ended at Sat Jun 24 12:42:11 2006
Verify started at Sat Jun 24 12:42:12 2006
  ended at Sat Jun 24 12:48:47 2006
BOOT_DEV_SEQ_CONF=disk0:;disk1:
```

```
BOOT_DEV_SEQ_OPER=disk0;;disk1:
```

In the following example, the **show system backup** command is entered with the **details** keyword to display additional information about the configuration and software package files stored on the backup device. Because this command is entered in administration EXEC mode, the backup information for both the administration and SDR configurations is displayed.

```
RP/0/0/CPU0:router(admin)# show system backup details

System Backup information for node0_0_CPU0 on disk1:
=====
Last Backup Successful
Backup started at Sat Jun 24 12:22:10 2006
  ended at Sat Jun 24 12:42:11 2006
Verify started at Sat Jun 24 12:42:12 2006
  ended at Sat Jun 24 12:48:47 2006
BOOT_DEV_SEQ_CONF=disk0;;disk1:
BOOT_DEV_SEQ_OPER=disk0;;disk1:
Admin configuration last commit record on disk1:
  Device          Commitid      Time Stamp
  disk1:         2000000010   23:07:59 UTC Fri Jun 09 2006

SDR configuration last commit record on disk1:
  Device          Commitid      Time Stamp
  disk1:         1000000030   11:56:43 UTC Thu Jun 22 2006

Active software packages on disk1:
c12k-os-mpi-3.4.0
c12k-base-3.4.0
c12k-admin-3.4.0
c12k-fwdg-3.4.0
c12k-lc-3.4.0
c12k-rout-3.4.0
c12k-diags-3.4.0
c12k-k9sec-3.4.0
c12k-mcast-3.4.0
c12k-mgbl-3.4.0
c12k-mpls-3.4.0
No Inactive software packages on disk1:
```

In the following example, backup information is displayed for backups located on disk1: in all RPs in the system. In this example, a separate backup was created on disk1: of node 0/3/CPU0 for a non-owner SDR.

```
RP/0/0/CPU0:router(admin)# show system backup disk1: location all

System Backup information for node0_0_CPU0 on disk1:
=====
Last Backup Successful
Backup started at Sat Jun 24 12:22:10 2006
  ended at Sat Jun 24 12:42:11 2006
Verify started at Sat Jun 24 12:42:12 2006
  ended at Sat Jun 24 12:48:47 2006
BOOT_DEV_SEQ_CONF=disk0;;disk1:
BOOT_DEV_SEQ_OPER=disk0;;disk1:

System Backup information for node0_3_CPU0 on disk1:
=====
Last Backup Successful
Backup started at Sat Jun 24 13:02:23 2006
  ended at Sat Jun 24 13:21:30 2006
Verify started at Sat Jun 24 13:21:30 2006
  ended at Sat Jun 24 13:27:55 2006
BOOT_DEV_SEQ_CONF=disk0;;disk1:
BOOT_DEV_SEQ_OPER=disk0;;disk1:
```

describes the significant fields shown in the display.

Table 3: show system backup Field Descriptions

Field	Description
BOOT_DEV_SEQ_CONF=	ROM Monitor environmental variable for the boot disk sequence. This variable is defined by the system boot-sequence command. The first disk is the primary device; the second disk is the backup (secondary) device. The value listed in the secondary device is also used as the default backup target device for the system backup command.
BOOT_DEV_SEQ_OPER=	ROM Monitor environmental variable for the boot disks currently in use by the system.

Related Commands

Command	Description
system backup, page 36	Performs a backup of software and configuration files.
system boot-sequence, page 40	Defines the order of boot devices used to bring up a router and defines the default backup target device used by the system backup command.

show variables boot

To display the configuration register setting and boot file setting for the route processors (RPs) in the system, use the **show variables boot** command in administration EXEC mode.

show variables boot [**location** {**all**| *node-id*}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node to reload. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.
---	--

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.3.0	This command was introduced.
Release 3.4.0	Support was added for the location keyword.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the command to display system boot variables for the router. This command displays the configuration register setting and boot file setting for the RPs in the system. Use the **location** *node-id* keyword and argument to display the configuration register setting for a specific card.

The configuration register setting is set with the **config-register** command. The boot variable is set in ROM Monitor mode. For more information about ROM Monitor mode, see *Cisco IOS XR ROM Monitor Guide for the Cisco XR 12000 Series Router*.

Task ID

Task ID	Operations
root-lr	read

Examples

The following example shows sample output from the command:

```
RP/0/5/CPU0:router# show variables boot

Mon Jun  1 13:01:31.892 PST
BOOT variable = disk0:c12k-os-mpi-3.9.0.10I/mbiprp-rp.vm,1;
CONFREG variable = 0x102
```

Related Commands

Command	Description
config-register, page 2	Defines the configuration register setting in administration EXEC mode.
show variables system, page 34	Displays internal system environmental variables set on the router.
show version	Displays information about the Cisco IOS XR software.

show variables system

To display internal system environmental variables set on the router, use the **show variables system** command in EXEC mode.

show variables system

Syntax Description This command has no arguments or keywords.

Command Default No default behavior or values

Command Modes EXEC

Command History

Release	Modification
Release 3.2	This command was introduced.
Release 3.3.0	No modification.
Release 3.4.0	No modification.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the command to display system environmental variables for the router.

To display the configuration register setting, use the **show variables boot** command in administration EXEC mode.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example illustrates sample output from the command. The output is meant to be interpreted by Cisco personnel.

RP/0/0/CPU0:router# **show variables system**

```

TERM=vt220
GDB_PDEBUG=-P1
TERM=vt100
DIR_PREFIX=.
LOADPATH=/pkg
LD_LIBRARY_PATH=/pkg/lib
PATH=/pkg/bin
BFM_CONFIG_PATH=/pkg/bfm/config
BGP_PATH=/pkg/bgp
CONFIGS_PATH=/pkg/configs
CRAFT_PATH=/pkg/cwi
CTF_PATH=/pkg/ctf
DM_RULES_PATH=/pkg/dm/rules
ETC_PATH=/pkg/etc
FPD_PATH=/pkg/fpd
IM_RULES_PATH=/pkg/rules
INIT_STARTUP_PATH=/pkg/init.d
INSTHELPER_PATH=/pkg/other
MAN_PATH=/pkg/man
MIB_LIBRARY_PATH=/pkg/lib/mib
MIB_PATH=/pkg/mib
NETIO_SCRIPT_PATH=/pkg/script
PARSER_PATH=/pkg/parser
PARTITIONS_PATH=/pkg/partitions
QOS_PATH=/pkg/qos
SCHEMA_PATH=/pkg/schema
STARTUP_PATH=/pkg/startup
TCL_LIBRARY=/pkg/lib/tcl
UCODE_PATH=/pkg/gsr/ucode
UCODE_ROOT_PATH=/pkg/ucode
VCM_RULES_PATH=/pkg/vcmrules
JOB_ID=0
INSTANCE_ID=1
SYSMGR_TUPLE=
SYSMGR_NODE=node0_RP0_CPU0
EXIT_STATUS=0
SYSMGR_RESTART_REASON=0
AAA_USER=labuser
EXEC_PID=18280619
TASKID_MAP_SIZE=72
HOME=/disk0:/usr
TMPDIR=/disk0:/var/tmp
PWD=/disk0:/usr
    
```

Related Commands

Command	Description
config-register, page 2	Defines the configuration register setting in administration EXEC mode.
show variables boot, page 32	Displays the configuration register setting and boot file setting for the RPs in the system.
show version	Displays information about the Cisco IOS XR software.

system backup

To back up the system software and configurations to a backup disk, use the **system backup** command in EXEC or administration EXEC mode.

system backup [*target-device*] [**format**] [**synchronous**|**asynchronous**] [**location** {*node-id*|**all**}]

Syntax Description

<i>target-device</i>	<p>(Optional) Specifies the storage device used for the system backup. If a target device is not specified, then the secondary device defined with the system boot-sequence command is used. If a target device is not specified with either command, then the system backup command returns an error.</p> <ul style="list-style-type: none"> • The target device cannot be the current boot device. • The target device must be large enough to store the current software set and configuration. • The supported storage devices are: <ul style="list-style-type: none"> ◦ disk0: ◦ disk1: ◦ compactflash: (if installed)
format	<p>(Optional) Formats a target disk that already contains a system backup. By default, the command formats the target disk if that target disk does not contain a previous system backup. If the target disk already contains a backup, then the disk is not formatted again. The format keyword forces a format of the target device even if it contains a previous system backup.</p>
synchronous	<p>(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned. This is the default mode.</p>
asynchronous	<p>(Optional) Performs the command in asynchronous mode. In asynchronous mode, the command runs in the background, and the EXEC prompt is returned as soon as possible.</p>
location { <i>node-id</i> all }	<p>(Optional) Specifies an alternative node location for the backup target disk, such as the standby DSDRSC .</p> <p>By default, the backup files are copied to the target device in the current DSDRSC . Use the location <i>node-id</i> keyword and argument to specify an alternative node for the backup files, such as the standby DSDRSC .</p> <p>The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p>

Use the **all** keyword to back up the software and configuration files to all RPs in the system or SDR. Each RP must contain a disk in the specified target device location, such as disk1:.

Command Default

The operation is performed in synchronous mode.
 The backup files are copied to the secondary device defined with the **system boot-sequence** command.
 The backup files are copied to the target device on the current designated secure domain router shelf controller (DSDRSC).

Command Modes

EXEC
 Administration EXEC

Command History

Release	Modification
Release 3.4.0	This command was introduced.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Target Device for the Backup

Use the **system boot-sequence** command with the *target-device* argument to specify the local storage device for backup software and configuration files. The *target-device* argument is optional and applies only to the current backup operation.

- If a target storage device is not specified, then the files are backed up to the secondary storage device defined with the **system boot-sequence** command.
- If a target device is not specified with either the **system backup** command or the **system boot-sequence** command, then the backup operation is not allowed.

The *target-device* can be any local storage device except the current boot device, and must be large enough to store the current software set and configuration. Supported storage devices are:

- **disk0:**

- **disk1:**
- **compactflash:** (if installed)

Location Node of the Target Device

By default, the backup is created on the specified target device of the active DSDRSC where the command is executed.

- To specify an alternate node for the system backup, such as the standby DSDRSC , use the **system backup** command with the **location node-id** keyword and argument.
- To perform the backup on all installed route processors (RPs) , use the **system backup** command with the **location all** keywords in EXEC mode.
- To perform the backup on all RPs in all SDRs installed in the system, use the **system backup** command with the **location all** keywords in administration EXEC mode.



Note

Each RP impacted by the **system backup** command must contain the specified target device. For example, if the **system backup** command is executed for disk1: on all RPs in the system, then a flash disk must be installed in disk1: of each RP.

Various Command Modes

- Use the **system backup** command in administration EXEC mode to back up the administration plane configuration, including software and configurations for all SDRs in the system.
- Use the **system backup** command in the EXEC mode of an SDR to back up the software and configurations for a specific SDR.

Commit and Installation Operations Not Allowed During Backup

- Configuration changes are not allowed during the backup process. Any attempts to commit configuration changes are rejected until the backup operation is complete.
- The backup process cannot be performed during an installation operation. If an installation operation is performed while a backup is in process, the backup operation terminates.

Displaying the Current Backup Information

Enter the **show system backup** command to display information about the current backup files. If no backup exists, an error message is displayed.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to back up the software and configuration files on a router.

- The **system backup** command is run in administration EXEC mode, which backs up both the administration and SDR configurations.
- The target device is defined as disk1:.
- The disk is formatted because this is the first backup on the device.

```
RP/0/0/CPU0:router# admin
RP/0/0/CPU0:router(admin)# system backup disk1:

Info: node0_0_CPU0: formatting target device
Info: node0_0_CPU0: copying admin configuration
Info: node0_0_CPU0: copying SDR configuration
Info: node0_0_CPU0: copying installed software
Info: node0_0_CPU0: backup complete.
Info: node0_0_CPU0: verifying admin configuration
Info: node0_0_CPU0: verifying installed software
Info: node0_0_CPU0: verify complete.
Info: node0_0_CPU0: command succeeded.
```

Related Commands

Command	Description
show system backup, page 28	Displays the system backup settings and history.
system boot-sequence, page 40	Defines the order of boot devices used to bring up a router. The secondary device argument also defines the default backup target device used by the system backup command.

system boot-sequence

To define the order of local storage devices used to boot a router, use the **system boot-sequence** command in EXEC or administration EXEC mode.

system boot-sequence {*primary-device* [*secondary-device*] [**disable**] [**location** {*node-id* | **all**}]}

Syntax Description

<i>primary-device</i>	Default device where software packages are installed and run. This device is also the default location for router configurations. The value of the <i>primary-device</i> argument is normally disk0: .
<i>secondary-device</i>	(Optional) Secondary (backup) boot device, used by the system backup command to back up system software and configurations. Supported storage devices are: <ul style="list-style-type: none"> • disk0: • disk1: • compactflash: (if installed) <p>Note The value of the <i>secondary-device</i> argument must be different from the value of the <i>primary-device</i> argument.</p>
disable	Temporarily disables the automatic recovery mechanism.
location { <i>node-id</i> all }	(Optional) Specifies the node of the RP for which to define the boot sequence. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.

Command Default

The primary device is **disk0:**. The (optional) secondary boot device is not defined.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.4.0	This command was introduced.
Release 3.4.1	The disable keyword and <i>secondary-device</i> argument were introduced.
Release 3.5.0	No modification.
Release 3.6.0	No modification.
Release 3.7.0	No modification.

Release	Modification
Release 3.8.0	No modification.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the command to define the local storage devices used to boot a router. You can define two devices with this command.

- The value of the *primary-device* argument defines the default device where software packages are installed and run. This device is also the default location for router configurations.
- The value of the *secondary-device* argument defines the device used by the **system backup** command to back up system software and configurations. This field is optional.
- The secondary device can also be temporarily defined when the **system backup** command is executed with the *target-device* argument. Use the command with the *secondary-device* argument to permanently define the secondary (backup) device.



Note

The primary and secondary device definitions remain in effect until the command is entered again.

General Usage Guidelines

- The value of the *secondary-device* argument must be different from the value of the *primary-device* argument.
- We recommend disk0: as the primary boot device in the boot sequence, and disk1: as the secondary boot device.
- The boot device specified with the command must be installed in the card or the command is rejected.

Command Modes

- Use the command in administration EXEC mode to define the boot sequence for all secure domain routers (SDRs) in the system.
- Use the command in EXEC mode to define the boot sequence for a specific SDR.

Location Node

- Use the **location** *node-id* keyword and argument to define the boot sequence for a specific route processor (RP).
- Use the **location all** keywords to define the boot sequence for all RPs in the SDR. Use this command in administration EXEC mode to define the boot sequence for all RPs in all SDRs.

Disabling Automatic Recovery

Use the command with the **disable** keyword to disable the automatic recovery.

Displaying the Current Boot Sequence Settings

Enter the **show system backup** command to display the currently configured boot sequence devices.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to define the primary and secondary boot device for the active RP (DSC). In this example, the default location for software and configurations is disk0:. The location for backups of software and configurations is disk1:.

```
RP/0/0/CPU0:router# admin
RP/0/0/CPU0:router(admin)# system boot-sequence disk0: disk1:

Info: node0_0_CPU0: command succeeded.
```

Related Commands

Command	Description
show system backup, page 28	Displays the system backup settings and history.
system backup, page 36	Performs a backup of software and configuration files.