



# CHAPTER 13

## Upgrading, Downgrading, and Installing System Images

---

This chapter describes how to upgrade, downgrade, and install system images. It contains the following sections:

- [Upgrades, Downgrades, and System Images, page 13-1](#)
- [Supported FTP and HTTP/HTTPS Servers, page 13-2](#)
- [Upgrading the Sensor, page 13-2](#)
- [Configuring Automatic Upgrades, page 13-6](#)
- [Downgrading the Sensor, page 13-10](#)
- [Recovering the Application Partition, page 13-11](#)
- [Installing System Images, page 13-12](#)

## Upgrades, Downgrades, and System Images



### Note

After you upgrade any IPS software on your sensor, you must restart the IDM to see the latest software features.

---

You can upgrade and downgrade the software on the sensor. Upgrading applies a service pack, signature update, signature engine update, minor version, major version, or recovery partition file. Downgrading removes the last applied service pack or signature update from the sensor.



### Caution

You cannot use the **downgrade** command to revert to a previous major or minor version, for example, from Cisco IPS 6.2 to 6.1. You can only use the **downgrade** command to downgrade from the latest signature update or signature engine update. To revert to 6.1, you must reimagine the sensor.

---

You can recover the application partition image on your sensor if it becomes unusable. Using the **recover** command lets you retain your host settings while other settings revert to the factory defaults.

To install a new system image on the sensor, use ROMMON, the bootloader file, or the maintenance partition depending on which platform you have.

When you install a new system image on your sensor, all accounts are removed and the default cisco account is reset to use the default password **cisco**. After installing the system image, you must initialize the sensor again.

After you reimage and initialize your sensor, upgrade your sensor with the most recent service pack, signature update, signature engine update, minor update, major update, and recovery partition file.

**For More Information**

- For the procedure for initializing the sensor, see [Chapter 10, “Initializing the Sensor.”](#)
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1.](#)

## Supported FTP and HTTP/HTTPS Servers

The following FTP servers are supported for IPS software updates:

- WU-FTPD 2.6.2 (Linux)
- Solaris 2.8
- Sambar 6.0 (Windows 2000)
- Serv-U 5.0 (Windows 2000)
- MS IIS 5.0 (Windows 2000)

The following HTTP/HTTPS servers are supported for IPS software updates:

- CMS - Apache Server (Tomcat)
- CMS - Apache Server (JRun)

**For More Information**

- For the procedure for downloading IPS software updates from Cisco.com, see [Obtaining Cisco IPS Software, page 12-1.](#)
- For the procedure for configuring automatic updates, see [Configuring Automatic Upgrades, page 13-6.](#)

## Upgrading the Sensor

This section explains how to use the **upgrade** command to upgrade the software on the sensor. It contains the following topics:

- [IPS 6.2 Upgrade Files, page 13-3](#)
- [upgrade Command and Options, page 13-3](#)
- [Using the upgrade Command, page 13-4](#)
- [Upgrading the Recovery Partition, page 13-5](#)

## IPS 6.2 Upgrade Files

The following files are part of Cisco IPS 6.2(1)E3:

- Readme
  - IPS-6.2-1-E3.readme.txt
- Minor Version Upgrade File
  - IPS-K9-6.2-1-E3.pkg
  - IPS-AIM-K9-6.2-1-E3.pkg
  - IPS-NME-K9-6.2-1-E3.pkg
- System Image Files
  - IPS-4240-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-4255-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-4260-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-4270\_20-K9-sys-1.1-a-6.2-1-E3.img
  - WS-SVC-IDSM2-K9-sys-1.1-a-6.2-1-E3.bin.gz
  - IPS-SSC\_5-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-SSM\_10-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-SSM\_20-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-SSM\_40-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-AIM-K9-sys-1.1-a-6.2-1-E3.img
  - IPS-NME-K9-sys-1.1-a-6.2-1-E3.img
- Recovery Image Files
  - IPS-K9-r-1.1-a-6.2-1-E3.pkg
  - IPS-AIM-K9-r-1.1-a-6.2-1-E3.pkg
  - IPS-NME-K9-r-1.1-a-6.2-1-E3.pkg

### For More Information

For the procedure for obtaining these files on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

## upgrade Command and Options

Use the **upgrade** *source-url* command to apply service pack, signature update, engine update, minor version, major version, or recovery partition file upgrades.

The following options apply:

- *source-url*—The location of the source file to be copied.
  - ftp:—Source URL for an FTP network server. The syntax for this prefix is:  
ftp:[//[username@]location]/relativeDirectory/filename  
ftp:[//[username@]location]//absoluteDirectory/filename




---

**Note** You are prompted for a password.

---

- scp:—Source URL for the SCP network server. The syntax for this prefix is:  
 scp:[//[username@]location]/relativeDirectory]/filename  
 scp:[//[username@]location]//absoluteDirectory]/filename




---

**Note** You are prompted for a password.

---

- http:—Source URL for the web server. The syntax for this prefix is:  
 http:[//[username@]location]/directory]/filename




---

**Note** The directory specification should be an absolute path to the desired file.

---

- https:—Source URL for the web server. The syntax for this prefix is:  
 https:[//[username@]location]/directory]/filename




---

**Note** The directory specification should be an absolute path to the desired file.

---

## Using the upgrade Command

**Caution**


---

You must log in to Cisco.com using an account with cryptographic privileges to download software. The first time you download software on Cisco.com, you receive instructions for setting up an account with cryptographic privileges.

---

**Caution**


---

Do not change the filename. You must preserve the original filename for the sensor to accept the update.

---

**Caution**


---

When you upgrade AIM-IPS or NME-IPS using manual upgrade, you must disable heartbeat reset on the router before installing the upgrade. You can reenale heartbeat reset after you complete the upgrade. If you do not disable heartbeat reset, the upgrade can fail and leave AIM-IPS or NME-IPS in an unknown state, which can require a system reimage to recover.

---

To upgrade the sensor, follow these steps:

- 
- Step 1** Download the appropriate file (for example, IPS-K9-6.2-1-E3.pkg) to an FTP, SCP, HTTP, or HTTPS server that is accessible from your sensor.
  - Step 2** Log in to the CLI using an account with administrator privileges.
  - Step 3** Enter configuration mode.  

```
sensor# configure terminal
```

**Step 4** Upgrade the sensor.

```
sensor(config)# upgrade url/IPS-K9-6.2-1-E3.pkg
```

The URL points to where the update file is located, for example, to retrieve the update using FTP, enter the following:

```
sensor(config)# upgrade ftp://username@ip_address//directory/IPS-K9-6.2-1-E3.pkg
```

**Step 5** Enter the password when prompted.

```
Enter password: *****
```

**Step 6** Enter **yes** to complete the upgrade.




---

**Note** Major updates, minor updates, and service packs may force a restart of the IPS processes or even force a reboot of the sensor to complete installation.

---




---

**Note** The operating system is reimaged and all files that have been placed on the sensor through the service account are removed.

---

#### For More Information

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers](#), page 13-2.
- For the procedure for locating software on Cisco.com and obtaining an account with cryptographic privileges, see [Obtaining Cisco IPS Software](#), page 12-1.

## Upgrading the Recovery Partition

Use the **upgrade** command to upgrade the recovery partition with the most recent version so that it is ready if you need to recover the application partition on your sensor.




---

**Note** Recovery partition images are generated for major and minor updates and only in rare situations for service packs or signature updates.

---




---

**Note** AIM-IPS and NME-IPS have unique recovery images that you must use to upgrade the recovery partition:

AIM-IPS—IPS-AIM-K9-r-1.1-a-6.2-1-E3.pkg

NME-IPS—IPS-NME-K9-r-1.1-a-6.2-1-E3.pkg

---

To upgrade the recovery partition on your sensor, follow these steps:

- Step 1** Download the recovery partition image file (IPS-K9-r-1.1-a-6.2-1-E3.pkg) to an FTP, SCP, HTTP, or HTTPS server that is accessible from your sensor.

**Caution**

Some browsers add an extension to the filename. The filename of the saved file must match what is displayed on the download page or you cannot use it to upgrade the recovery partition.

- Step 2** Log in to the CLI using an account with administrator privileges.

- Step 3** Enter configuration mode.

```
sensor# configure terminal
```

- Step 4** Upgrade the recovery partition.

```
sensor(config)#
upgrade scp://user@server_ipaddress//upgrade_path/IPS-K9-r-1.1-a-6.2-1-E3.pkg

sensor(config)#
upgrade ftp://user@server_ipaddress//upgrade_path/IPS-K9-r-1.1-a-6.2-1-E3.pkg
```

- Step 5** Enter the server password.

The upgrade process begins.

**Note**

This procedure only reimages the recovery partition. The application partition is not modified by this upgrade. To reimage the application partition after the recovery partition, use the **recover application-partition** command.

**For More Information**

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).
- For the procedure for using the **recover** command, see [Using the recover Command, page 13-11](#).

## Configuring Automatic Upgrades

This section describes how to configure the sensor to automatically look for upgrades in the upgrade directory. It contains the following topics:

- [Automatic Upgrades, page 13-7](#)
- [auto-upgrade Command and Options, page 13-7](#)

- [Using the auto-upgrade Command, page 13-8](#)

## Automatic Upgrades



### Caution

In IPS 6.2(5)E4 and later the default value of the Cisco server IP address has been changed from 198.133.219.25 to 72.163.4.161 in the Auto Update URL configuration. If you have automatic update configured on your sensor, you may need to update firewall rules to allow the sensor to connect to this new IP address.

You can configure the sensor to look for new upgrade files in your upgrade directory automatically. For example, several sensors can point to the same remote FTP server directory with different update schedules, such as every 24 hours, or Monday, Wednesday, and Friday at 11:00 pm.

You specify the following information to schedule automatic upgrades:

- Server IP address
- Path of the directory on the file server where the sensor checks for upgrade files
- File copy protocol (SCP or FTP)
- Username and password
- Upgrade schedule

You must download the software upgrade from Cisco.com and copy it to the upgrade directory before the sensor can poll for automatic upgrades.

### For More Information

For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

## auto-upgrade Command and Options

Use the **auto-upgrade-option enabled** command in the service host submode to configure automatic upgrades.

The following options apply:

- **cisco-server**—Enables automatic signature and engine updates from Cisco.com.
- **cisco-url**—The Cisco server locator service.

You do not need to change this unless the www.cisco.com IP address changes.

- **default**— Sets the value back to the system default setting.
- **directory**— Directory where upgrade files are located on the file server.

A leading '/' indicates an absolute path.

- **file-copy-protocol**— File copy protocol used to download files from the file server. The valid values are **ftp** or **scp**.



### Note

If you use SCP, you must use the **ssh host-key** command to add the server to the SSH known hosts list so the sensor can communicate with it through SSH.

- **ip-address**— IP address of the file server.
- **password**— User password for Cisco server authentication.
- **schedule-option**—Schedules when Cisco server automatic upgrades occur. Calendar scheduling starts upgrades at specific times on specific days. Periodic scheduling starts upgrades at specific periodic intervals.
  - **calendar-schedule**—Configure the days of the week and times of day that automatic upgrades will be performed.
    - days-of-week**—Days of the week on which auto-upgrades will be performed. You can select multiple days: *sunday* through *saturday* are the valid values.
    - no**—Removes an entry or selection setting.
    - times-of-day**—Times of day at which auto-upgrades will begin. You can select multiple times. The valid value is *hh:mm[:ss]*.
  - **periodic-schedule**—Configure the time that the first automatic upgrade should occur, and how long to wait between automatic upgrades.
    - interval**—The number of hours to wait between automatic upgrades. Valid values are 0 to 8760.
    - start-time**—The time of day to start the first automatic upgrade. The valid value is *hh:mm[:ss]*.
- **user-name**—Username for server authentication.
- **user-server**—Enables automatic upgrades from a user-defined server.

#### For More Information

For the procedure for adding a remote host to the SSH known hosts list, for IDM refer to [Defining Known Hosts Keys](#), for IME refer to [Defining Known Host Keys](#), and for the CLI refer to [Adding Hosts to the SSH Known Hosts List](#).

## Using the auto-upgrade Command



#### Caution

In IPS 6.2(5)E4 and later the default value of the Cisco server IP address has been changed from 198.133.219.25 to 72.163.4.161 in the Auto Update URL configuration. If you have automatic update configured on your sensor, you may need to update firewall rules to allow the sensor to connect to this new IP address.

If you get an unauthorized error message while configuring an automatic update, make sure you have the correct ports open on any firewalls between the sensor and Cisco.com. For example, you need port 443 for the initial automatic update connection to [www.cisco.com](http://www.cisco.com), and you need port 80 to download the chosen package from a Cisco file server. The IP address may change for the Cisco file server, but you can find it in the `lastDownloadAttempt` section in the output of the **show statistics host** command.



#### Note

To check the status of the last automatic update or the next scheduled automatic update, run the **show statistics host** command and check the Auto Update Statistics section.



To schedule automatic upgrades, follow these steps:

**Step 1** Log in to the CLI using an account with administrator privileges.

**Step 2** Enter automatic upgrade submode.

```
sensor# configure terminal
sensor(config)# service host
sensor(config-hos)# auto-upgrade
sensor(config-hos-aut)#
```

**Step 3** Configure the sensor to automatically look for new upgrades either on Cisco.com or on your file server.

a. On Cisco.com.

```
sensor(config-hos-aut)# cisco-server enabled
```

Continue with Step 4.

b. From your server.

```
sensor(config-hos-aut)# user-server enabled
```

c. Specify the IP address of the file server.

```
sensor(config-hos-ena)# ip-address 10.1.1.1
```

d. Specify the directory where the upgrade files are located on the file server.

```
sensor(config-hos-ena)# directory /tftpboot/sensor_updates
```

e. Specify the file server protocol.

```
sensor(config-hos-ena)# file-copy-protocol ftp
```



**Note** If you use SCP, you must use the `ssh host-key` command to add the server to the SSH known hosts list so the sensor can communicate with it through SSH.

**Step 4** Specify the username for authentication.

```
sensor(config-hos-ena)# user-name tester
```

**Step 5** Specify the password of the user.

```
sensor(config-hos-ena)# password
Enter password[:] *****
Re-enter password: *****
```

**Step 6** Specify the scheduling.

a. For calendar scheduling, which starts upgrades at specific times on specific day.

```
sensor(config-hos-ena)# schedule-option calendar-schedule
sensor(config-hos-ena-cal)# days-of-week sunday
sensor(config-hos-ena-cal)# times-of-day 12:00:00
```

b. For periodic scheduling, which starts upgrades at specific periodic intervals.

```
sensor(config-hos-ena)# schedule-option periodic-schedule
sensor(config-hos-ena-per)# interval 24
sensor(config-hos-ena-per)# start-time 13:00:00
```

**Step 7** Verify the settings.

```

sensor(config-hos-ena)# show settings
enabled
-----
schedule-option
-----
periodic-schedule
-----
start-time: 13:00:00
interval: 24 hours
-----
ip-address: 10.1.1.1
directory: /tftpboot/update/6.1_dummy_updates
user-name: tester
password: <hidden>
file-copy-protocol: ftp default: scp
-----
sensor(config-hos-ena)#

```

**Step 8** Exit automatic upgrade submode.

```

sensor(config-hos-ena)# exit
sensor(config-hos)# exit
Apply Changes?[yes]:

```

**Step 9** Press **Enter** to apply the changes or type **no** to discard them.**For More Information**

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for adding a remote host to the SSH known hosts list, for IDM refer to [Defining Known Hosts Keys](#), for IME refer to [Defining Known Host Keys](#), and for the CLI refer to [Adding Hosts to the SSH Known Hosts List](#)

## Downgrading the Sensor

Use the **downgrade** command to remove the last applied signature upgrade or signature engine upgrade from the sensor.

**Caution**

You cannot use the **downgrade** command to revert to a previous major or minor version, for example, from Cisco IPS 6.2 to 6.1. You can only use the **downgrade** command to downgrade from the latest signature update or signature engine update. To revert to 6.1, you must reimagine the sensor.

To remove the last applied signature update or signature engine update from the sensor, follow these steps:

**Step 1** Log in to the sensor using an account with administrator privileges.**Step 2** Enter global configuration mode.

```

sensor# configure terminal

```

**Step 3** If there is no recently applied service pack or signature update, the **downgrade** command is not available.

```
sensor(config)# downgrade
No downgrade available.
sensor(config)#
```

---

## Recovering the Application Partition

This section explains how to recover the application partition, and contains the following topics:

- [Application Partition, page 13-11](#)
- [Using the recover Command, page 13-11](#)

## Application Partition

You can recover the application partition image for the appliance if it becomes unusable. Some network configuration information is retained when you use this method, which lets you have network access after the recovery is performed.

Use the **recover application-partition** command to boot to the recovery partition, which automatically recovers the application partition on your appliance.



### Note

If you have upgraded your recovery partition to the most recent version before you recover the application partition image, you can install the most up-to-date software image.

Because you can execute the **recover application-partition** command through a Telnet or SSH connection, we recommend using this command to recover sensors that are installed at remote locations.



### Note

When you reconnect to the sensor after recovery, you must log in with the default username and password **cisco**.

### For More Information

For the procedure for upgrading the recovery partition to the most recent version, see [Upgrading the Recovery Partition, page 13-5](#).

## Using the recover Command

To recover the application partition image, follow these steps:

**Step 1** Download the recovery partition image file (IPS-K9-r-1.1-a-6.2-1-E3.pkg) to an FTP, HTTP, or HTTPS server that is accessible from your sensor.

**Step 2** Log in to the CLI using an account with administrator privileges.

**Step 3** Enter configuration mode.

```
sensor# configure terminal
```



**Note** To upgrade the recovery partition the sensor must already be running IPS 6.2(1).

**Step 4** Recover the application partition image.

```
sensor(config)# recover application-partition
```

Warning: Executing this command will stop all applications and re-image the node to version 6.2(1)E3. All configuration changes except for network settings will be reset to default.

```
Continue with recovery? []:
```

**Step 5** Enter **yes** to continue.

Shutdown begins immediately after you execute the **recover** command. Shutdown can take a while, and you will still have access to the CLI, but access will be terminated without warning.

The application partition is reimaged using the image stored on the recovery partition. You must now initialize the appliance with the **setup** command. The IP address, netmask, access lists, time zone, and offset are saved and applied to the reimaged application partition. If you executed the **recover application-partition** command remotely, you can SSH to the sensor with the default username and password (**cisco/cisco**) and then initialize the sensor again with the **setup** command. You cannot use Telnet until you initialize the sensor because Telnet is disabled by default.

#### For More Information

- For a list of supported TFTP servers, see [Supported TFTP Servers, page 13-13](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).
- For the procedure for using the **setup** command, see [Chapter 10, “Initializing the Sensor.”](#)

## Installing System Images

This section contains the procedures for installing system images on the appliances and modules. It contains the following topics:

- [Understanding ROMMON, page 13-13](#)
- [Supported TFTP Servers, page 13-13](#)
- [Connecting an Appliance to a Terminal Server, page 13-13](#)
- [Installing the IPS-4240 and IPS-4255 System Images, page 13-14](#)
- [Installing the IPS-4260 System Image, page 13-17](#)
- [Installing the IPS 4270-20 System Image, page 13-19](#)
- [Installing the AIM-IPS System Image, page 13-22](#)
- [Installing the AIP-SSM and AIP-SSC-5 System Image, page 13-25](#)
- [Installing the IDSM-2 System Image, page 13-27](#)
- [Installing the NME-IPS System Image, page 13-39](#)

**Caution**

All user configuration settings are lost when you install the system image. Before trying to recover the sensor by installing the system image, try to recover by using the **recover application-partition** command or by selecting the recovery partition during sensor bootup.

## Understanding ROMMON

Some Cisco sensors include a preboot CLI called ROMMON, which lets you boot images on sensors where the image on the primary device is missing, corrupt, or otherwise unable to boot the normal application. ROMMON is particularly useful for recovering remote sensors as long as the serial console port is available.

Access to ROMMON is available only through the serial console port, a Cisco-standard asynchronous RS-232C DTE available in an RJ-45F connector on the sensor chassis. The serial port is configured for 9600 baud, 8 data bits, 1 stop bit, no parity, and no flow control.

**For More Information**

For the procedure for using a terminal server, see [Connecting an Appliance to a Terminal Server, page 13-13](#).

## Supported TFTP Servers

ROMMON uses TFTP to download an image and launch it. TFTP does not address network issues such as latency or error recovery. It does implement a limited packet integrity check so that packets arriving in sequence with the correct integrity value have an extremely low probability of error. But TFTP does not offer pipelining so the total transfer time is equal to the number of packets to be transferred times the network average RTT. Because of this limitation, we recommend that the TFTP server be located on the same LAN segment as the sensor. Any network with an RTT less than a 100 milliseconds should provide reliable delivery of the image. Be aware that some TFTP servers limit the maximum file size that can be transferred to ~32 MB.

## Connecting an Appliance to a Terminal Server

A terminal server is a router with multiple, low speed, asynchronous ports that are connected to other serial devices. You can use terminal servers to remotely manage network equipment, including appliances.

To set up a Cisco terminal server with RJ-45 or hydra cable assembly connections, follow these steps:

**Step 1**

Connect to a terminal server using one of the following methods:

- For terminal servers with RJ-45 connections, connect a 180 rollover cable from the console port on the appliance to a port on the terminal server.
- For hydra cable assemblies, connect a straight-through patch cable from the console port on the appliance to a port on the terminal server.

**Step 2** Configure the line and port on the terminal server.

In enable mode, enter the following configuration, where # is the line number of the port to be configured.

```

config t
line #
login
transport input all
stopbits 1
flowcontrol hardware
speed 9600
exit
exit
wr mem

```

**Step 3** Be sure to properly close a terminal session to avoid unauthorized access to the appliance.

If a terminal session is not stopped properly, that is, if it does not receive an exit(0) signal from the application that initiated the session, the terminal session can remain open. When terminal sessions are not stopped properly, authentication is not performed on the next session that is opened on the serial port.



**Caution**

Always exit your session and return to a login prompt before terminating the application used to establish the connection.



**Caution**

If a connection is dropped or terminated by accident, you should reestablish the connection and exit normally to prevent unauthorized access to the appliance.

## Installing the IPS-4240 and IPS-4255 System Images



**Note**

This procedure is for IPS-4240, but is also applicable to IPS-4255. The system image for IPS-4255 has “4255” in the filename.

You can install the IPS-4240 and IPS-4255 system image by using the ROMMON on the appliance to TFTP the system image onto the compact flash device.

To install the IPS-4240 and IPS-4255 system image, follow these steps:

**Step 1** Download the IPS-4240 system image file (IPS-4240-K9-sys-1.1-a-6.2-1-E3.img) to the tftp root directory of a TFTP server that is accessible from your IPS-4240.



**Note**

Make sure you can access the TFTP server location from the network connected to the Ethernet port of your IPS-4240.

**Step 2** Boot IPS-4240.

```
Booting system, please wait...
```

```
CISCO SYSTEMS
```

```
Embedded BIOS Version 1.0(5)0 09/14/04 12:23:35.90
```

```
Low Memory: 631 KB
```

```
High Memory: 2048 MB
```

```
PCI Device Table.
```

Bus	Dev	Func	VendID	DevID	Class	Irq
00	00	00	8086	2578	Host Bridge	
00	01	00	8086	2579	PCI-to-PCI Bridge	
00	03	00	8086	257B	PCI-to-PCI Bridge	
00	1C	00	8086	25AE	PCI-to-PCI Bridge	
00	1D	00	8086	25A9	Serial Bus	11
00	1D	01	8086	25AA	Serial Bus	10
00	1D	04	8086	25AB	System	
00	1D	05	8086	25AC	IRQ Controller	
00	1D	07	8086	25AD	Serial Bus	9
00	1E	00	8086	244E	PCI-to-PCI Bridge	
00	1F	00	8086	25A1	ISA Bridge	
00	1F	02	8086	25A3	IDE Controller	11
00	1F	03	8086	25A4	Serial Bus	5
00	1F	05	8086	25A6	Audio	5
02	01	00	8086	1075	Ethernet	11
03	01	00	177D	0003	Encrypt/Decrypt	9
03	02	00	8086	1079	Ethernet	9
03	02	01	8086	1079	Ethernet	9
03	03	00	8086	1079	Ethernet	9
03	03	01	8086	1079	Ethernet	9
04	02	00	8086	1209	Ethernet	11
04	03	00	8086	1209	Ethernet	5

```
Evaluating BIOS Options ...
```

```
Launch BIOS Extension to setup ROMMON
```

```
Cisco Systems ROMMON Version (1.0(5)0) #1: Tue Sep 14 12:20:30 PDT 2004
```

```
Platform IPS-4240-K9
```

```
Management0/0
```

```
MAC Address: 0000.c0ff.ee01
```

- Step 3** Press **Break** or **Esc** at the following prompt while the system is booting to interrupt boot. Press the spacebar to begin boot immediately.



**Note** You have ten seconds to press **Break** or **Esc**.

```
Use BREAK or ESC to interrupt boot.
```

```
Use SPACE to begin boot immediately.
```

The system enters ROMMON mode. The `rommon>` prompt appears.

- Step 4** Check the current network settings.

```
rommon> set
```

```
ROMMON Variable Settings:
```

```
ADDRESS=0.0.0.0
```

```
SERVER=0.0.0.0
```

```
GATEWAY=0.0.0.0
```

```
PORT=Management0/0
```

```
VLAN=untagged
```

```
IMAGE=
```

```
CONFIG=
```

The variables have the following definitions:

- Address—Local IP address of IPS-4240
- Server—TFTP server IP address where the application image is stored
- Gateway—Gateway IP address used by IPS-4240
- Port—Ethernet interface used for IPS-4240 management
- VLAN—VLAN ID number (leave as untagged)
- Image—System image file/path name
- Config—Unused by these platforms




---

**Note** Not all values are required to establish network connectivity. The address, server, gateway, and image values are required. If you are not sure of the settings needed for your local environment, contact your system administrator.

---

**Step 5** If necessary, change the interface used for the TFTP download.




---

**Note** The default interface used for TFTP downloads is Management0/0, which corresponds to the MGMT interface of IPS-4240.

---

```
rommon> PORT=interface_name
```

**Step 6** If necessary, assign an IP address for the local port on IPS-4240.

```
rommon> ADDRESS=ip_address
```




---

**Note** Use the same IP address that is assigned to IPS-4240.

---

**Step 7** If necessary, assign the TFTP server IP address.

```
rommon> SERVER=ip_address
```

**Step 8** If necessary, assign the gateway IP address.

```
rommon> GATEWAY=ip_address
```

**Step 9** Verify that you have access to the TFTP server by pinging it from your local Ethernet port with one of the following commands.

```
rommon> ping server_ip_address
rommon> ping server
```

**Step 10** If necessary define the path and filename on the TFTP file server from which you are downloading the image.

```
rommon> IMAGE=path/file_name
```



**Caution**

---

Make sure that you enter the **IMAGE** command in all uppercase. You can enter the other ROMMON commands in either lower case or upper case, but the **IMAGE** command specifically must be all uppercase.

---



### UNIX Example

```
rommon> IMAGE=/system_images/IPS-4240-K9-sys-1.1-a-6.2-1-E3.img
```



**Note** The path is relative to the default tftpboot directory of the UNIX TFTP server. Images located in the default tftpboot directory do not have any directory names or slashes in the IMAGE specification.

### Windows Example

```
rommon> IMAGE=\system_images\IPS-4240-K9-sys-1.1-a-6.2-1-E3.img
```

**Step 11** Enter **set** and press **Enter** to verify the network settings.



**Note** You can use the **sync** command to store these settings in NVRAM so they are maintained across boots. Otherwise, you must enter this information each time you want to boot an image from ROMMON.

**Step 12** Download and install the system image.

```
rommon> tftp
```



#### Caution

To avoid corrupting the system image, do not remove power from IPS-4240 while the system image is being installed.



**Note** If the network settings are correct, the system downloads and boots the specified image on IPS-4240. Be sure to use the IPS-4240 image.

#### For More Information

- For a list of supported TFTP servers, see [Supported TFTP Servers, page 13-13](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

## Installing the IPS-4260 System Image

You can install the IPS-4260 system image by using the ROMMON on the appliance to TFTP the system image onto the flash device.

To install the IPS-4260 system image, follow these steps:

- Step 1** Download the IPS-4260 system image file (IPS-4260-K9-sys-1.1-a-6.2-1-E3.img) to the tftp root directory of a TFTP server that is accessible from your IPS-4260.
- Make sure you can access the TFTP server location from the network connected to your IPS-4260 Ethernet port.
- Step 2** Boot IPS-4260.

**Step 3** Press **Ctrl-R** at the following prompt while the system is booting.

```
Evaluating Run Options...
```



**Note** You have five seconds to press **Ctrl-R**.

```
Assuming IPS-4260-K9 Platform
 2 Ethernet Interfaces detected
```

```
Cisco Systems ROMMON Version (1.0(11)1c) #26: Mon Mar 13 18:05:54 CST 2006
```

```
Platform IPS-4260-K9
Management0/0
Link is UP
MAC Address: 0004.23cc.6047
```

```
Use ? for help.
rommon #0>
```

**Step 4** If necessary, change the port used for the TFTP download.

```
rommon #1> interface name
```

The port in use is listed just after the platform identification. In the example, port Management0/0 is being used.



**Note** The default port used for TFTP downloads is Management0/0, which corresponds with the command and control (MGMT) interface of the IPS-4260.



**Note** Ports Management0/0 (MGMT) and GigabitEthernet0/1 (GE 0/1) are labeled on the back of the chassis.

**Step 5** Specify an IP address for the local port on IPS-4260.

```
rommon> address ip_address
```



**Note** Use the same IP address that is assigned to IPS-4260.

**Step 6** Specify the TFTP server IP address.

```
rommon> server ip_address
```

**Step 7** Specify the gateway IP address.

```
rommon> gateway ip_address
```

**Step 8** Verify that you have access to the TFTP server by pinging it from the local Ethernet port.

```
rommon> ping server_ip_address
rommon> ping server
```

**Step 9** Specify the path and filename on the TFTP file server from which you are downloading the image.

```
rommon> file path/filename
```

### UNIX Example

```
rommon> file /system_images/IPS-4260-K9-sys-1.1-a-6.2-1-E3.img
```



**Note** The path is relative to the default tftpboot directory of the UNIX TFTP server. Images located in the default tftpboot directory do not have any directory names or slashes in the file location.

### Windows Example

```
rommon> file <tftpboot_directory>IPS-4260-K9-sys-1.1-a-6.2-1-E3.img
```

**Step 10** Download and install the system image.

```
rommon> tftp
```



**Note** IPS-4260 reboots once during the reimaging process. Do not remove power from IPS-4260 during the update process or the upgrade can become corrupted.

### For More Information

- For a list of supported TFTP servers, see [Supported TFTP Servers, page 13-13](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

## Installing the IPS 4270-20 System Image

You can install the IPS 4270-20 system image by using the ROMMON on the appliance to TFTP the system image onto the compact flash device.

To install the IPS 4270-20 system image, follow these steps:

**Step 1** Download the IPS 4270-20 system image file (IPS-4270\_20-K9-sys-1.1-a-6.2-1-E3.img) to the tftp root directory of a TFTP server that is accessible from your IPS 4270-20.



**Note** Make sure you can access the TFTP server location from the network connected to the Ethernet port of your IPS 4270-20.

**Step 2** Boot IPS 4270-20.

```
Booting system, please wait...
Cisco Systems ROMMON Version (1.0(12)10) #7: Thu Jun 21 13:50:04 CDT 2007
```

```
ft_id_update: Invalid ID-PROM Controller Type (0x5df)
```

```
ft_id_update: Defaulting to Controller Type (0x5c2)
```



**Note** The controller type errors are a known issue and can be disregarded.

**Step 3** Press **Break** or **Esc** at the following prompt while the system is booting to interrupt boot. Press the spacebar to begin boot immediately.




---

**Note** You have ten seconds to press **Break** or **Esc**.

---

Use BREAK or ESC to interrupt boot.  
Use SPACE to begin boot immediately.

The system enters ROMMON mode. The `rommon>` prompt appears.

**Step 4** Check the current network settings.

```
rommon> set

ROMMON Variable Settings:
  ADDRESS=0.0.0.0
  SERVER=0.0.0.0
  GATEWAY=0.0.0.0
  PORT=Management0/0
  VLAN=untagged
  IMAGE=
  CONFIG=
  LINKTIMEOUT=20
  PKTTIMEOUT=2
  RETRY=20
```

The variables have the following definitions:

- Address—Local IP address of IPS 4270-20
- Server—TFTP server IP address where the application image is stored
- Gateway—Gateway IP address used by IPS 4270-20
- Port—Ethernet interface used for IPS 4270-20 management
- VLAN—VLAN ID number (leave as untagged)
- Image—System image file/path name
- Config—Unused by these platforms




---

**Note** Not all values are required to establish network connectivity. The address, server, gateway, and image values are required. If you are not sure of the settings needed for your local environment, contact your system administrator.

---

**Step 5** If necessary, assign an IP address for the local port on IPS 4270-20.

```
rommon> ADDRESS=ip_address
```




---

**Note** Use the same IP address that is assigned to IPS 4270-20.

---

**Step 6** If necessary, assign the TFTP server IP address.

```
rommon> SERVER=ip_address
```

**Step 7** If necessary, assign the gateway IP address.

```
rommon> GATEWAY=ip_address
```

- Step 8** Verify that you have access to the TFTP server by pinging it from your local Ethernet port with one of the following commands:

```
rommon> ping server_ip_address
rommon> ping server
```

- Step 9** If necessary define the path and filename on the TFTP file server from which you are downloading the image.

```
rommon> IMAGE=path/file_name
```

#### UNIX Example

```
rommon> IMAGE=/system_images/IPS-4270_20-K9-sys-1.1-a-6.2-1-E3.img
```



---

**Note** The path is relative to the UNIX TFTP server default tftpboot directory. Images located in the default tftpboot directory do not have any directory names or slashes in the IMAGE specification.

---

#### Windows Example

```
rommon> IMAGE=\system_images\IPS-4270_20-K9-sys-1.1-a-6.2-1-E3.img
```

- Step 10** Enter **set** and press **Enter** to verify the network settings.



---

**Note** You can use the **sync** command to store these settings in NVRAM so they are maintained across boots. Otherwise, you must enter this information each time you want to boot an image from ROMMON.

---

- Step 11** Download and install the system image.

```
rommon> tftp
```



#### Caution

---

To avoid corrupting the system image, do not remove power from IPS 4270-20 while the system image is being installed.

---



---

**Note** If the network settings are correct, the system downloads and boots the specified image on IPS 4270-20. Be sure to use the IPS 4270-20 image.

---

#### For More Information

- For a list of supported TFTP servers, see [Supported TFTP Servers](#), page 13-13.
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software](#), page 12-1.

## Installing the AIM-IPS System Image

To install the AIM-IPS system image, follow these steps:

- Step 1** Download the AIM-IPS system image file (IPS-AIM-K9-sys-1.1-6.2-1-E3.img), and place it on a TFTP server relative to the tftp root directory.



**Note** Make sure the network is configured so that AIM-IPS can access the TFTP server.

If no TFTP server is available, you can configure the router to operate as a TFTP server.

```
router# copy tftp: flash:
router# configure terminal
router(config)# tftp-server flash:IPS-AIM-K9-sys-1.1-6.2-1-E3.img
router(config)# exit
router#
```

- Step 2** Disable the heartbeat reset.

```
router# service-module IDS-Sensor 0/slot_number heartbeat-reset disable
```



**Note** Disabling the heartbeat reset prevents the router from resetting the module during system image installation if the process takes too long.

- Step 3** Session to AIM-IPS.

```
router# service-module IDS-Sensor 0/slot_number session
```



**Note** Use the **show configuration | include interface IDS-Sensor** command to determine the AIM-IPS slot number.

- Step 4** Suspend the session by pressing **Shift-Ctrl-6 X**.

You should see the `router#` prompt. If you do not see this prompt, try **Ctrl-6 X**.

- Step 5** Reset AIM-IPS.

```
router# service-module IDS-Sensor 0/slot_number reset
```

You are prompted to confirm the **reset** command.

- Step 6** Press **Enter** to confirm.

- Step 7** Press **Enter** to resume the suspended session.

After displaying its version, the bootloader displays this prompt for 15 seconds.

```
Please enter '***' to change boot configuration:
```

- Step 8** Enter **\*\*\*** during the 15-second delay.

The bootloader prompt appears.

- Step 9** Press **Enter** to session back to AIM-IPS.

- Step 10** Configure the bootloader.

```
ServicesEngine bootloader> config
```

```

IP Address [10.89.148.188]>
Subnet mask [255.255.255.0]>
TFTP server [10.89.150.74]>
Gateway [10.89.148.254]>
Default boot [disk]>
Number cores [2]>
ServicesEngine boot-loader >

```

For each prompt, enter a value or accept the previously stored input that appears inside square brackets by pressing **Enter**.



**Note** The gateway IP address must match the IP address of the IDS-Sensor *slot/port* interface.



**Note** If you set up the module interfaces using the **unnumbered** command, the gateway IP address should be the IP address of the other router interface being used as part of the unnumbered command.



**Caution**

The pathname for the AIM-IPS image is full but relative to the tftp server root directory (typically /tftpboot).

**Step 11** Start the bootloader.

```
ServicesEngine bootloader> upgrade
```

**Step 12** Follow the bootloader instructions to install the software (choose option 1 and follow the wizard instructions).



**Note** In the following example, the AIM-IPS IP address is 10.1.9.201. The imaging process accesses the AIM-IPS image from the router TFTP server at IP address 10.1.9.1.

### Example

```

Booting from flash...please wait.
Please enter '***' to change boot configuration:
11 ***
ServicesEngine boot-loader Version : 1.1.0
ServicesEngine boot-loader > config

IP Address [10.1.9.201]>
Subnet mask [255.255.255.0]>
TFTP server [10.1.9.1]>
Gateway [10.1.9.1]>
Default boot [disk]>
Number cores [2]>
ServicesEngine boot-loader > upgrade

Cisco Systems, Inc.
Services engine upgrade utility for AIM-IPS
-----
Main menu
1 - Download application image and write to USB Drive
2 - Download bootloader and write to flash
3 - Download minikernel and write to flash
r - Exit and reset card

```





## Installing the AIP-SSM and AIP-SSC-5 System Image

This section describes how to install the AIP-SSM and AIP-SSC-5 system image, and contains the following topics:

- [Reimaging AIP-SSM and AIP-SSC-5, page 13-25](#)
- [Reimaging AIP-SSM and AIP-SSC-5 Using the recover configure/boot Command, page 13-25](#)

### Reimaging AIP-SSM and AIP-SSC-5

You can reimage AIP-SSM and AIP-SSC-5 in one of the following ways:

- From ASA using the **hw-module module 1 recover configure/boot** command.
- Recovering the application image from the sensor CLI using the **recover application-partition** command.
- Upgrading the recovery image from the sensor CLI using the **upgrade** command.

#### For More Information

- For the procedure for using the **hw-module module 1 recover configure/boot** command, see [Reimaging AIP-SSM and AIP-SSC-5 Using the recover configure/boot Command, page 13-25](#).
- For the procedure for recovering the application partition, see [Recovering the Application Partition, page 13-11](#).
- For the procedure for upgrading the recovery image, see [Upgrading the Recovery Partition, page 13-5](#).

### Reimaging AIP-SSM and AIP-SSC-5 Using the recover configure/boot Command

If AIP-SSM or AIP-SSC-5 suffers a failure and the module application image cannot run, you can transfer application images from a TFTP server to the module using the adaptive security appliance CLI. The adaptive security appliance can communicate with the module ROMMON application to transfer the image.

**Note**

Be sure the TFTP server that you specify can transfer files up to 60 MB in size.

**Note**

This process can take approximately 15 minutes to complete, depending on your network and the size of the image.

To install the AIP-SSM and AIP-SSC-5 system image, follow these steps:

- 
- Step 1** Log in to the adaptive security appliance.
  - Step 2** Enter enable mode.  

```
asa# enable
```
  - Step 3** Configure the recovery settings for AIP-SSM and AIP-SSC-5.  

```
asa (enable)# hw-module module 1 recover configure
```



**Note** If you make an error in the recovery configuration, use the **hw-module module 1 recover stop** command to stop the system reimaging and then you can correct the configuration.

**Step 4** Specify the TFTP URL for the system image.

Image URL [tftp://0.0.0.0/]:

Example

Image URL [tftp://0.0.0.0/]: **tftp://10.89.146.1/IPS-SSM-K9-sys-1.1-a-6.2-1-E3.img**

**Step 5** Specify the command and control interface of AIP-SSM or AIP-SSC-5.



**Note** The port IP address is the management IP address of AIP-SSM and AIP-SSC-5.

Port IP Address [0.0.0.0]:

Example

Port IP Address [0.0.0.0]: **10.89.149.231**

**Step 6** Leave the VLAN ID at 0.

VLAN ID [0]:

**Step 7** Specify the default gateway of AIP-SSM or AIP-SSC-5.

Gateway IP Address [0.0.0.0]:

Example

Gateway IP Address [0.0.0.0]: **10.89.149.254**

**Step 8** Execute the recovery.

```
asa# hw-module module 1 recover boot
```

This transfers the image from the TFTP server to AIP-SSM or AIP-SSC-5 and restarts it.

**Step 9** Periodically check the recovery until it is complete.



**Note** The status reads *Recovery* during recovery and reads *Up* when reimaging is complete.

```
asa# show module 1
```

Mod	Card Type	Model	Serial No.
0	ASA 5540 Adaptive Security Appliance	ASA5540	P2B00000019
1	ASA 5500 Series Security Services Module-20	ASA-SSM-20	P1D000004F4

Mod	MAC Address Range	Hw Version	Fw Version	Sw Version
0	000b.fcf8.7b1c to 000b.fcf8.7b20	0.2	1.0(7)2	7.0(0)82
1	000b.fcf8.011e to 000b.fcf8.011e	0.1	1.0(7)2	5.0(0.22)S129.0

```
Mod Status
```

```
0 Up Sys
```

```

1 Up
asa#

asa# show module 1
Mod Card Type                               Model                               Serial No.
-----
0 ASA 5505 Adaptive Security Appliance     ASA5505                             JAB11370240
1 ASA 5500 Series Security Services Card-5  ASA-SSC-AIP-5                       JAF12380MDH

Mod SSM Application Name                    Status                               SSM Application Version
-----
1 SSC SSM                                  Down                                 6.2.(1)E3

```



**Note** The Status field in the output indicates the operational status of AIP-SSM or AIP-SSC-5. An AIP-SSM or AIP-SSC-5 operating normally shows a status of “Up.” While the adaptive security appliance transfers an application image to AIP-SSM or AIP-SSC-5, the Status field in the output reads “Recover.” When the adaptive security appliance completes the image transfer and restarts AIP-SSM or AIP-SSC-5, the newly transferred image is running.



**Note** To debug any errors that may happen in the recovery process, use the **debug module-boot** command to enable debugging of the system reimaging process.

**Step 10** Session to AIP-SSM or AIP-SSC-5 and initialize it with the **setup** command.



**Note** You do not have to run the **setup** command to initialize AIP-SSC-5. You can initialize it using ASDM.

#### For More Information

- For a list of recommended TFTP servers, see [Supported TFTP Servers, page 13-13](#).
- For the procedure use the **setup** command to initialize AIP-SSM or AIP-SSC-5, see [Chapter 10, “Initializing the Sensor.”](#)

## Installing the IDSM-2 System Image

This section describes the IDSM-2 system image, and contains the following topics:

- [Understanding the IDSM-2 System Image, page 13-28](#)
- [Installing the IDSM-2 System Image for Catalyst Software, page 13-28](#)
- [Installing the IDSM-2 System Image for Cisco IOS Software, page 13-29](#)
- [Configuring the IDSM-2 Maintenance Partition for Catalyst Software, page 13-30](#)
- [Configuring the IDSM-2 Maintenance Partition for Cisco IOS Software, page 13-34](#)

- [Upgrading the IDSM-2 Maintenance Partition for Catalyst Software, page 13-38](#)
- [Upgrading the IDSM-2 Maintenance Partition for Cisco IOS Software, page 13-38](#)

## Understanding the IDSM-2 System Image

If the IDSM-2 application partition becomes unusable, you can reimage it from the maintenance partition. After you reimage the application partition of IDSM-2, you must initialize IDSM-2 using the **setup** command.

When there is a new maintenance partition image file, you can reimage the maintenance partition from the application partition.

### For More Information

For the procedure to use the **setup** command to initialize IDSM-2, see [Chapter 10, “Initializing the Sensor.”](#)

## Installing the IDSM-2 System Image for Catalyst Software

To install the system image, follow these steps:

**Step 1** Download the IDSM-2 system image file (IPS-IDSM2-K9-sys-1.1-a-6.2-1-E3.bin.gz) to the FTP root directory of an FTP server that is accessible from your IDSM-2.

**Step 2** Log in to the switch CLI.

**Step 3** Boot IDSM-2 to the maintenance partition.

```
console> (enable) reset module_number cf:1
```

**Step 4** Log in to the maintenance partition CLI.

```
login: guest
Password: cisco
```



**Note** You must configure the maintenance partition on IDSM-2.

**Step 5** Install the system image.

```
guest@hostname.localdomain# upgrade ftp://user@ftp server IP/directory  
path/IPS-IDSM2-K9-sys-1.1-a-6.2-1-E3.bin.gz
```

**Step 6** Specify the FTP server password.

After the application partition file has been downloaded, you are asked if you want to proceed:

```
Upgrading will wipe out the contents on the hard disk. Do you want to proceed installing  
it [y|n]:
```

**Step 7** Enter **y** to continue.

When the application partition file has been installed, you are returned to the maintenance partition CLI.

**Step 8** Exit the maintenance partition CLI and return to the switch CLI.

**Step 9** Reboot IDSM-2 to the application partition.

```
console> (enable) reset module_number hdd:1
```

- Step 10** When IDSM-2 has rebooted, check the software version.
- Step 11** Log in to the application partition CLI and initialize IDSM-2 using the **setup** command.

#### For More Information

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).
- For the procedure for configuration the maintenance partition on IDMS-2, see [Configuring the IDSM-2 Maintenance Partition for Catalyst Software, page 13-30](#) and [Configuring the IDSM-2 Maintenance Partition for Cisco IOS Software, page 13-34](#).
- For the procedure for initializing IDSM-2, see [Chapter 10, “Initializing the Sensor.”](#)

## Installing the IDSM-2 System Image for Cisco IOS Software

To install the system image, follow these steps:

- Step 1** Download the IDSM-2 system image file (IPS-IDSM2-K9-sys-1.1-a-6.2-1-E3.bin.gz) to the FTP root directory of an FTP server that is accessible from your IDSM-2.
- Step 2** Log in to the switch CLI.
- Step 3** Boot IDSM-2 to the maintenance partition.
- ```
router# hw-module module module_number reset cf:1
```
- Step 4** Session to the maintenance partition CLI.
- ```
router# session slot slot_number processor 1
```
- Step 5** Log in to the maintenance partition CLI.
- ```
login: guest
Password: cisco
```
- Step 6** Configure the maintenance partition interface IP address.
- ```
guest@localhost.localdomain# ip address ip_address netmask
```



**Note** Choose an address that is appropriate for the VLAN on which the IDSM-2 management interface is located based on the switch configuration.

- Step 7** Configure the maintenance partition default gateway address.
- ```
guest@localhost.localdomain# ip gateway gateway_address
```
- Step 8** Install the system image.
- ```
guest@hostname.localdomain# upgrade
ftp://user@ftp_server_ip_address/directory_path/IPS-IDSM2-K9-sys-1.1-a-6.2-1-E3.bin.gz
-install
```
- Step 9** Specify the FTP server password. After the application partition file has been downloaded, you are asked if you want to proceed:
- Upgrading will wipe out the contents on the hard disk.

```
Do you want to proceed installing it [y|n]:
```

**Step 10** Enter **y** to continue.

When the application partition file has been installed, you are returned to the maintenance partition CLI.

**Step 11** Exit the maintenance partition CLI and return to the switch CLI.

**Step 12** Reboot IDSM-2 to the application partition.

```
router# hw-module module module_number reset hdd:1
```

**Step 13** Verify that IDSM-2 is online and that the software version is correct and that the status is `ok`.

```
router# show module module_number
```

**Step 14** Session to the IDSM-2 application partition CLI.

```
router# session slot slot_number processor 1
```

**Step 15** Initialize IDSM-2 using the `setup` command.

#### For More Information

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).
- For the procedure for configuration the maintenance partition on IDMS-2, see [Configuring the IDSM-2 Maintenance Partition for Catalyst Software, page 13-30](#) and [Configuring the IDSM-2 Maintenance Partition for Cisco IOS Software, page 13-34](#).
- For the procedure for initializing IDSM-2, see [Chapter 10, “Initializing the Sensor.”](#)

## Configuring the IDSM-2 Maintenance Partition for Catalyst Software

To configure the IDSM-2 maintenance partition, follow these steps:

**Step 1** Log in to the switch CLI.

**Step 2** Enter privileged mode.

```
console# enable
console(enable)#
```

**Step 3** Reload IDSM-2.

```
console> (enable) reset module_number cf:1
```

**Step 4** Session to IDSM-2.

```
console# session 9
Trying IDS-9...
Connected to IDS-9.
Escape character is '^'.

Cisco Maintenance image
```



**Note** You cannot Telnet or SSH to the IDSM-2 maintenance partition. You must session to it from the switch CLI.

**Step 5** Log in as user **guest** and password **cisco**.



**Note** You can change the guest password, but we do not recommend it. If you forget the maintenance partition guest password, and you cannot log in to the IDSM-2 application partition for some reason, IDSM-2 requires an RMA.

```
login: guest
Password: cisco

Maintenance image version: 2.1(2)

guest@idsm2.localdomain#
```

**Step 6** View the IDSM-2 maintenance partition host configuration.

```
guest@idsm2.localdomain# show ip

IP address       : 10.89.149.74
Subnet Mask      : 255.255.255.128
IP Broadcast     : 10.255.255.255
DNS Name         : idsm2.localdomain
Default Gateway  : 10.89.149.126
Nameserver(s)   :
```

guest@idsm2.localdomain#

**Step 7** Clear the IDSM-2 maintenance partition host configuration (ip address, gateway, hostname).

```
guest@idsm2.localdomain# clear ip
guest@localhost.localdomain# show ip

IP address       : 0.0.0.0
Subnet Mask      : 0.0.0.0
IP Broadcast     : 0.0.0.0
DNS Name         : localhost.localdomain
Default Gateway  : 0.0.0.0
Nameserver(s)   :
```

guest@localhost.localdomain#

**Step 8** Configure the maintenance partition host configuration.

a. Specify the IP address.

```
guest@localhost.localdomain# ip address ip_address netmask
```

b. Specify the default gateway.

```
guest@localhost.localdomain# ip gateway gateway_ip_address
```

c. Specify the hostname.

```
guest@localhost.localdomain# ip host hostname
```

**Step 9** View the maintenance partition host configuration.

```
guest@idsm2.localdomain# show ip
```

```

IP address      : 10.89.149.74
Subnet Mask     : 255.255.255.128
IP Broadcast    : 10.255.255.255
DNS Name        : idsm2.localdomain
Default Gateway : 10.89.149.126
Nameserver(s)   :

```

```

guest@idsm2.localdomain#

```

**Step 10** Verify the image installed on the application partition.

```

guest@idsm2.localdomain# show images
Device name      Partition#      Image name
-----
Hard disk(hdd)  1              6.1(1)
guest@idsm2.localdomain#

```

**Step 11** Verify the maintenance partition version (including the BIOS version).

```

guest@idsm2.localdomain# show version

Maintenance image version: 2.1(2)
mp.2-1-2.bin : Thu Nov 18 11:41:36 PST 2004 :
integ@kplus-build-lx.cisco.com

Line Card Number :WS-SVC-IDS2-XL
Number of Pentium-class Processors : 2
BIOS Vendor: Phoenix Technologies Ltd.
BIOS Version: 4.0-Rel 6.0.9

Total available memory: 2012 MB
Size of compact flash: 61 MB
Size of hard disk: 19077 MB
Daughter Card Info: Falcon rev 3, FW ver 2.0.3.0 (IDS), SRAM 8 MB, SDRAM 256 MB

guest@idsm2.localdomain#

```

**Step 12** Upgrade the application partition.

```

guest@idsm2.localdomain# upgrade
ftp://jsmith@10.89.146.11//RELEASES/Latest/6.2-1/WS-SVC-IDS2-K9-sys-1.1-a-6.1-1.190-E0.1.bin.gz
Downloading the image. This may take several minutes...
Password for jsmith@10.89.146.114:
500 'IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.bin.gz': command not understood.

ftp://jsmith@10.89.146.11//RELEASES/Latest/6.2-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.bin.gz
(unknown size)
/tmp/upgrade.gz      [ ] 28616K
29303086 bytes transferred in 5.34 sec (5359.02k/sec)

Upgrade file
ftp://jsmith@10.89.146.114//RELEASES/Latest/6.2-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.bin.gz
is downloaded.
Upgrading will wipe out the contents on the storage media.
Do you want to proceed installing it [y|N]:

```

**Step 13** Enter **y** to proceed with the upgrade.

```

Proceeding with upgrade. Please do not interrupt.
If the upgrade is interrupted or fails, boot into maintenance image again and restart
upgrade.

```

```

Creating IDS application image file...

```



```

Initializing the hard disk...
Applying the image, this process may take several minutes...
Performing post install, please wait...
Application image upgrade complete. You can boot the image now.
guest@idsm3.localdomain#

```

**Step 14** Display the upgrade log.

```
guest@idsm3.localdomain# show log upgrade
```

```

Upgrading the line card on Fri Mar 11 21:21:53 UTC 2005
Downloaded upgrade image
ftp://jsmith@10.89.146.114//RELEASES/Latest/6.2-1/WS-SVC-IDS2-K9-sys-1.1-a-6.2-1-E3.bin.gz
z
Extracted the downloaded file
Proceeding with image upgrade.
Fri Mar 11 21:22:06 2005 : argv1 = 0, argv2 = 0, argv3 = 3, argv4 = 1
Fri Mar 11 21:22:06 2005 : Creating IDS application image file...
Fri Mar 11 21:22:06 2005 : footer: XXXXXXXXXXXXXXXXXXXX
Fri Mar 11 21:22:06 2005 : exeoff: 0000000000031729
Fri Mar 11 21:22:06 2005 : image: 0000000029323770
Fri Mar 11 21:22:06 2005 : T: 29323818, E: 31729, I: 29323770
Fri Mar 11 21:22:07 2005 : partition: /dev/hdc1
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Image: /tmp/cdisk.gz
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Device: /dev/hdc1
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Install type: 1
Fri Mar 11 21:22:07 2005 : Initializing the hard disk...
Fri Mar 11 21:22:07 2005 : Required disk size: 524288 Kb (blocks)
Fri Mar 11 21:22:07 2005 : Available disk size: 19535040 Kb (blocks)
Fri Mar 11 21:22:13 2005 : Partitions created on '/dev/hdc'.
Fri Mar 11 21:22:13 2005 : Device '/dev/hdc' verified for OK.
Fri Mar 11 21:22:19 2005 : Created ext2 fileSystem on '/dev/hdc1'.
Fri Mar 11 21:22:19 2005 : Directory '/mnt/hd/' created.
Fri Mar 11 21:22:19 2005 : Partition '/dev/hdc1' mounted.
Fri Mar 11 21:22:19 2005 : Finished initializing the hard disk.
Fri Mar 11 21:22:19 2005 : Applying the image, this process may take several minutes...
Fri Mar 11 21:22:19 2005 : Directory changed to '/mnt/hd'.
Fri Mar 11 21:22:20 2005 : Performing post install, please wait...
Fri Mar 11 21:22:20 2005 : File /mnt/hd/post-install copied to /tmp/post-install.
Fri Mar 11 21:22:20 2005 : Directory changed to '/tmp'.
Fri Mar 11 21:22:28 2005 : Partition '/dev/hdc1' unmounted.
Fri Mar 11 21:22:28 2005 : Directory changed to '/tmp'.
Application image upgrade complete. You can boot the image now.
Partition upgraded successfully
guest@idsm2.localdomain#

```

**Step 15** Clear the upgrade log.

```

guest@idsm2.localdomain# clear log upgrade
Cleared log file successfully

```

**Step 16** Display the upgrade log.

```

guest@idsm2.localdomain# show log upgrade
guest@idsm2.localdomain#

```

**Step 17** Ping another computer.

```

guest@idsm2.localdomain# ping 10.89.146.114
PING 10.89.146.114 (10.89.146.114) from 10.89.149.74 : 56(84) bytes of data.
64 bytes from 10.89.146.114: icmp_seq=0 ttl=254 time=381 usec
64 bytes from 10.89.146.114: icmp_seq=1 ttl=254 time=133 usec
64 bytes from 10.89.146.114: icmp_seq=2 ttl=254 time=129 usec
64 bytes from 10.89.146.114: icmp_seq=3 ttl=254 time=141 usec
64 bytes from 10.89.146.114: icmp_seq=4 ttl=254 time=127 usec

```

```

--- 10.89.146.114 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/mdev = 0.127/0.182/0.381/0.099 ms
guest@idsm2.localdomain#

```

**Step 18** Reset IDSM-2.

**Note** You cannot specify a partition when issuing the **reset** command from the maintenance partition. IDSM-2 boots to whichever partition is specified in the boot device variable. If the boot device variable is blank, IDSM-2 boots to the application partition.

```

guest@idsm2.localdomain# reset
guest@idsm2.localdomain#
2005 Mar 11 21:55:46 CST -06:00 %SYS-4-MOD_SHUTDOWNSTART:Module 9 shutdown in progress. Do
not remove module until shutdown completes

Broadcast message from root Fri Mar 11 21:55:47 2005...

The system is going down for system halt NOW !!
console> (enable)#

```

**For More Information**

For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers](#), page 13-2.

## Configuring the IDSM-2 Maintenance Partition for Cisco IOS Software

To configure the IDSM-2 maintenance partition, follow these steps:

**Step 1** Log in to the switch CLI.

**Step 2** Session to IDSM-2.

```

router# session slot 11 processor 1
The default escape character is Ctrl-^, then x.
You can also type 'exit' at the remote prompt to end the session
Trying 127.0.0.111 ... Open

Cisco Maintenance image

```



**Note** You cannot Telnet or SSH to the IDSM-2 maintenance partition. You must session to it from the switch CLI.

**Step 3** Log in as user **guest** and password **cisco**.



**Note** You can change the guest password, but we do not recommend it. If you forget the maintenance partition guest password, and you cannot log in to the IDSM-2 application partition for some reason, you will have to RMA IDSM-2.

```
login: guest
```

```
password: cisco

Maintenance image version: 2.1(2)

guest@idsm2.localdomain#
```

**Step 4** View the maintenance partition host configuration.

```
guest@idsm2.localdomain# show ip

IP address      : 10.89.149.74
Subnet Mask     : 255.255.255.128
IP Broadcast    : 10.255.255.255
DNS Name        : idsm2.localdomain
Default Gateway : 10.89.149.126
Nameserver(s)  :
```

guest@idsm2.localdomain#

**Step 5** Clear the maintenance partition host configuration (ip address, gateway, hostname).

```
guest@idsm2.localdomain# clear ip
guest@localhost.localdomain# show ip

IP address      : 0.0.0.0
Subnet Mask     : 0.0.0.0
IP Broadcast    : 0.0.0.0
DNS Name        : localhost.localdomain
Default Gateway : 0.0.0.0
Nameserver(s)  :
```

guest@localhost.localdomain#

**Step 6** Configure the maintenance partition host configuration.

**a.** Specify the IP address.

```
guest@localhost.localdomain# ip address ip_address netmask
```

**b.** Specify the default gateway.

```
guest@localhost.localdomain# ip gateway gateway_ip_address
```

**c.** Specify the hostname.

```
guest@localhost.localdomain# ip host hostname
```

**Step 7** View the maintenance partition host configuration.

```
guest@idsm2.localdomain# show ip

IP address      : 10.89.149.74
Subnet Mask     : 255.255.255.128
IP Broadcast    : 10.255.255.255
DNS Name        : idsm2.localdomain
Default Gateway : 10.89.149.126
Nameserver(s)  :
```

guest@idsm2.localdomain#

**Step 8** Verify the image installed on the application partition.

```
guest@idsm2.localdomain# show images
Device name      Partition#      Image name
-----
Hard disk(hdd)  1              6.1(1)
```

```
guest@idsm2.localdomain#
```

**Step 9** Verify the maintenance partition version (including the BIOS version).

```
guest@idsm2.localdomain# show version
```

```
Maintenance image version: 2.1(2)
mp.2-1-2.bin : Thu Nov 18 11:41:36 PST 2004 :
integ@kplus-build-lx.cisco.com

Line Card Number :WS-SVC-IDS2-XL
Number of Pentium-class Processors : 2
BIOS Vendor: Phoenix Technologies Ltd.
BIOS Version: 4.0-Rel 6.0.9

Total available memory: 2012 MB
Size of compact flash: 61 MB
Size of hard disk: 19077 MB
Daughter Card Info: Falcon rev 3, FW ver 2.0.3.0 (IDS), SRAM 8 MB, SDRAM 256 MB
```

```
guest@idsm2.localdomain#
```

**Step 10** Upgrade the application partition.

```
guest@idsm2.localdomain# upgrade
```

```
ftp://jsmith@10.89.146.11//RELEASES/Latest/6.2-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.img
Downloading the image. This may take several minutes...
Password for jsmith@10.89.146.114:
500 'SIZE IPS-IDS2-K9-sys-1.1-a-6.2-1.bin.gz': command not understood.
```

```
ftp://jsmith@10.89.146.11//RELEASES/Latest/6.1-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.img
(unknown size)
/tmp/upgrade.gz      [ ]  28616K
29303086 bytes transferred in 5.34 sec (5359.02k/sec)
```

```
Upgrade file
ftp://jsmith@10.89.146.114//RELEASES/Latest/6.2-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.img is
downloaded.
Upgrading will wipe out the contents on the storage media.
Do you want to proceed installing it [y|N]:
```

**Step 11** Enter **y** to proceed with the upgrade.

```
Proceeding with upgrade. Please do not interrupt.
If the upgrade is interrupted or fails, boot into maintenance image again and restart
upgrade.
```

```
Creating IDS application image file...
```

```
Initializing the hard disk...
Applying the image, this process may take several minutes...
Performing post install, please wait...
Application image upgrade complete. You can boot the image now.
guest@idsm3.localdomain#
```

**Step 12** Display the upgrade log.

```
guest@idsm3.localdomain# show log upgrade
```

```
Upgrading the line card on Fri Mar 11 21:21:53 UTC 2005
Downloaded upgrade image
ftp://jsmith@10.89.146.114//RELEASES/Latest/6.2-1/IPS-IDS2-K9-sys-1.1-a-6.2-1-E3.img
Extracted the downloaded file
Proceeding with image upgrade.
Fri Mar 11 21:22:06 2005 : argv1 = 0, argv2 = 0, argv3 = 3, argv4 = 1
```

```

Fri Mar 11 21:22:06 2005 : Creating IDS application image file...
Fri Mar 11 21:22:06 2005 : footer: XXXXXXXXXXXXXXXXXXXX
Fri Mar 11 21:22:06 2005 : exeoff: 0000000000031729
Fri Mar 11 21:22:06 2005 : image: 0000000029323770
Fri Mar 11 21:22:06 2005 : T: 29323818, E: 31729, I: 29323770
Fri Mar 11 21:22:07 2005 : partition: /dev/hdc1
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Image: /tmp/cdisk.gz
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Device: /dev/hdc1
Fri Mar 11 21:22:07 2005 : startIDSAppUpgrade:Install type: 1
Fri Mar 11 21:22:07 2005 : Initializing the hard disk...
Fri Mar 11 21:22:07 2005 : Required disk size: 524288 Kb (blocks)
Fri Mar 11 21:22:07 2005 : Available disk size: 19535040 Kb (blocks)
Fri Mar 11 21:22:13 2005 : Partitions created on '/dev/hdc'.
Fri Mar 11 21:22:13 2005 : Device '/dev/hdc' verified for OK.
Fri Mar 11 21:22:19 2005 : Created ext2 fileSystem on '/dev/hdc1'.
Fri Mar 11 21:22:19 2005 : Directory '/mnt/hd/' created.
Fri Mar 11 21:22:19 2005 : Partition '/dev/hdc1' mounted.
Fri Mar 11 21:22:19 2005 : Finished initializing the hard disk.
Fri Mar 11 21:22:19 2005 : Applying the image, this process may take several minutes...
Fri Mar 11 21:22:19 2005 : Directory changed to '/mnt/hd'.
Fri Mar 11 21:22:20 2005 : Performing post install, please wait...
Fri Mar 11 21:22:20 2005 : File /mnt/hd/post-install copied to /tmp/post-install.
Fri Mar 11 21:22:20 2005 : Directory changed to '/tmp'.
Fri Mar 11 21:22:28 2005 : Partition '/dev/hdc1' unmounted.
Fri Mar 11 21:22:28 2005 : Directory changed to '/tmp'.
Application image upgrade complete. You can boot the image now.
Partition upgraded successfully
guest@idsm2.localdomain#

```

**Step 13** Clear the upgrade log.

```

guest@idsm2.localdomain# clear log upgrade
Cleared log file successfully

```

**Step 14** Display the upgrade log.

```

guest@idsm2.localdomain# show log upgrade
guest@idsm2.localdomain#

```

**Step 15** Ping another computer.

```

guest@idsm2.localdomain# ping 10.89.146.114
PING 10.89.146.114 (10.89.146.114) from 10.89.149.74 : 56(84) bytes of data.
64 bytes from 10.89.146.114: icmp_seq=0 ttl=254 time=381 usec
64 bytes from 10.89.146.114: icmp_seq=1 ttl=254 time=133 usec
64 bytes from 10.89.146.114: icmp_seq=2 ttl=254 time=129 usec
64 bytes from 10.89.146.114: icmp_seq=3 ttl=254 time=141 usec
64 bytes from 10.89.146.114: icmp_seq=4 ttl=254 time=127 usec

--- 10.89.146.114 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/mdev = 0.127/0.182/0.381/0.099 ms
guest@idsm2.localdomain#

```

**Step 16** Reset IDSM-2.


---

**Note** You cannot specify a partition when issuing the **reset** command from the maintenance partition. IDSM-2 boots to whichever partition is specified in the boot device variable. If the boot device variable is blank, IDSM-2 boots to the application partition.

---

```

guest@idsm2.localdomain# reset
guest@idsm2.localdomain#

```

```
Broadcast message from root Fri Mar 11 22:04:53 2005...

The system is going down for system halt NOW !!

[Connection to 127.0.0.111 closed by foreign host]
router#
```

---

**For More Information**

For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).

**Upgrading the IDSM-2 Maintenance Partition for Catalyst Software**

To upgrade the maintenance partition, follow these steps:

- 
- Step 1** Download the IDSM-2 maintenance partition file (c6svc-mp.2-1-2.bin.gz) to the FTP root directory of an FTP server that is accessible from your IDSM-2.
- Step 2** Session to IDSM-2 from the switch.
- ```
console>(enable) session slot_number
```
- Step 3** Log in to the IDSM-2 CLI.
- Step 4** Enter configuration mode.
- ```
idsm2# configure terminal
```
- Step 5** Upgrade the maintenance partition.
- ```
idsm2(config)# upgrade
ftp://user@ftp_server_IP_address/directory_path/c6svc-mp.2-1-2.bin.gz
```
- You are asked whether you want continue.
- Step 6** Enter the FTP server password.
- Step 7** Enter **y** to continue. The maintenance partition file is upgraded.
- 

**For More Information**

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

**Upgrading the IDSM-2 Maintenance Partition for Cisco IOS Software**

To upgrade the maintenance partition, follow these steps:

- 
- Step 1** Download the IDSM-2 maintenance partition file (c6svc-mp.2-1-2.bin.gz) to the FTP root directory of an FTP server that is accessible from your IDSM-2.
- Step 2** Log in to the switch CLI.

**Step 3** Session in to the application partition CLI.

```
router# session slot slot_number processor 1
```

**Step 4** Log in to IDSM-2.

**Step 5** Enter configuration mode.

```
idsm2# configure terminal
```

**Step 6** Upgrade the maintenance partition.

```
idsm2(config)# upgrade
ftp://user@ftp_server_IP_address/directory_path/c6svc-mp.2-1-2.bin.gz
```

**Step 7** Specify the FTP server password.

```
Password: *****
```

You are prompted to continue.

```
Continue with upgrade?:
```

**Step 8** Enter **yes** to continue.

---

#### For More Information

- For a list of supported FTP and HTTP/HTTPS servers, see [Supported FTP and HTTP/HTTPS Servers, page 13-2](#).
- For the procedure for locating software on Cisco.com, see [Obtaining Cisco IPS Software, page 12-1](#).

## Installing the NME-IPS System Image



#### Note

Use the **show configuration | include interface ids-sensor** command to determine the NME-IPS slot number.

To install the NME-IPS system image, follow these steps:

**Step 1** Download the NME-IPS system image file (IPS-NME-K9-sys-1.1-6.2-1-E3.img), and place it on a TFTP server relative to the tftp root directory.



#### Note

Make sure the network is configured so that NME-IPS can access the TFTP server.

If no TFTP server is available, you can configure the router to operate as a TFTP server.

```
router# copy tftp: flash:
router# configure terminal
router(config)# tftp-server flash:IPS-NME-K9-sys-1.1-6.2-1-E3.img
router(config)# exit
router#
```

**Step 2** Disable the heartbeat reset.

```
router# service-module ids-sensor 1/0 heartbeat-reset disable
```




---

**Note** Disabling the heartbeat reset prevents the router from resetting the module during system image installation if the process takes too long.

---

**Step 3** Session to NME-IPS.

```
router# service-module ids-sensor 1/0 session
```

**Step 4** Suspend the session by pressing **Shift-Ctrl-6 X**. You should see the `router#` prompt. If you do not see this prompt, try **Ctrl-6 X**.

**Step 5** Reset NME-IPS.

```
router# service-module ids-sensor 1/0 reset
```

You are prompted to confirm the **reset** command.

**Step 6** Press **Enter** to confirm.

**Step 7** Press **Enter** to resume the suspended session. After displaying its version, the bootloader displays this prompt for 15 seconds.

```
Please enter '***' to change boot configuration:
```

**Step 8** Enter **\*\*\*** during the 15-second delay. The bootloader prompt appears.

**Step 9** Press **Enter** to session back to NME-IPS.

**Step 10** Configure the bootloader.

```
ServicesEngine bootloader> config
```

```
IP Address [10.89.148.195]>
Subnet mask [255.255.255.0]>
TFTP server [10.89.150.74]>
Gateway [10.89.148.254]>
Default boot [disk]>
Number cores [2]>
ServicesEngine boot-loader >
```

For each prompt, enter a value or accept the previously stored input that appears inside square brackets by pressing **Enter**.




---

**Caution** The pathname for the NME-IPS image is full but relative to the tftp server root directory (typically `/tftpboot`).

---

**Step 11** Start the bootloader.

```
ServicesEngine bootloader> upgrade
```

**Step 12** Follow the bootloader instructions to install the software (choose option 1 and follow the wizard instructions).

Example

```
Booting from flash...please wait.
Please enter '***' to change boot configuration:
12 ***
ServicesEngine boot-loader Version : 1.2.0
ServicesEngine boot-loader > config

IP Address [10.89.148.195]>
Subnet mask [255.255.255.0]>
```





