

application manager, restoring 6-8

ituille i los	Application Manager windows 6-1
802.1x window	App License window
EAP-FAST configuration 5-11	options 6-2
EAP-PEAP configuration 5-11	overview 6-2
EAP-TTLS configuration 5-11	App Setup window
enable 802.1x 5-10	options 6-3
EPA-TLS configuration 5-10	overview 6-3
overview 5-10	audio, settings 4-13
A	B
About link 1-5	backing up, configuration of IP camera 7-4
Account Initialization window, options 7-2	Basic Settings window
action, triggered by event 4-19, 4-25	options 5-2
ActiveX controls 1-4	overview 5-1
Administration windows 7-1, 8-1	bit rate, of video 4-13
alert, trigger types 4-26	Bonjour, enabling on camera 5-7
Alert Notification window	brightness 3-4
options 4-26	
overview 4-24 app	С
configuring 6-6 description 6-1	camera settings, controls in Camera Video/Control window 3-4
enabling 6-1	Camera Settings window
installing 6-5	options 4-15
license, installing 6-5	overview 4-14
running 6-7	Camera Video & Control window
stopping 6-7	accessing 3-1
uninstalling 6-8	description 1-5
App Configuration window	displaying 1-4
options 6-1	configuration windows
overview 6-1	802.1x window 5-10

accessing 1-2	D
Administration windows 7-1	_
Alert Notification window 4-24	date and time
App Configuration window 6-1	configuring manually 5-5
Basic Settings window 5-1	updating through NTP server 5-5
Camera Settings window 4-14	day
Device Processes window 7-7	filter 4-14
Discovery Settings window 5-6	mode 4-14
Event Notification window 4-19	daylight saving time, adjustment for 5-5
Feature Setup windows 4-1	Device Processes window
Firmware Settings window 7-6	options 7-8
Initialization window 7-1	overview 7-7
IO Ports Settings window 4-18	DHCP, obtaining IP address through 2-1, 5-4
IP Addressing window 5-3	Differentiated Services (DiffServ) 5-13
IP Filter Settings window 5-11	Discovery Settings window
Local Log window 8-4	options 5-7
Local Storage window 4-28	overview 5-6
Log Setup Settings window 8-1	DNS server
Log windows 8-1	primary 5-4
Maintenance Settings window 7-4	secondary 5-4
Network Setup windows 5-1	dual streaming 4-1
Password Complexity window 7-8	
QoS Settings window 5-12	E
SNMP Settings window 5-7	<u> </u>
Streaming Settings window 4-1	e-mail notification
Time Settings window 5-5	configuring 4-21, 4-22
User Settings window 7-3	for alert 4-26, 4-27
Video Overlay Settings window 4-16	From field 4-23, 4-27
configuring, app 6-6	recipients 4-23, 4-27
connecting, to the IP camera	event
after the first time 1-2	actions
for the first time 2-1	email notification 4-19, 4-25
PC requirements for 1-3, 2-1	FTP notification 4-20, 4-25
secure connection 1-3	HTTP notification 4-19, 4-25
contrast 3-4	output port state change 4-19, 4-25
	syslog server message 4-19, 4-25
	notification
	from health trigger 4-24
	from system trigger 4-19

trigger types 4-20	HTTPS
Event Notification window	accessing camera through 1-3
options 4-20	allowing access through 7-2
overview 4-19	default port 7-2
event triggering, enabling for app 6-6	port 7-2
F	
factory default configurations, resetting 7-5	Initialization window, overview 7-1
factory default configurations, restoring 7-5	input ports, state change 4-19
Feature Setup windows 4-1	installing
Local Storage 4-28	app 6-5
firmware	app license 6-5
upgrading 7-6, 7-7	IO Ports Settings window
version in IP camera 7-7	options 4-18
Firmware Settings window	overview 4-18
options 7-7	IP address
overview 7-6	controlling access by 5-11
focus and zoom controls 3-8	default for IP camera 1-3, 2-1
FTP notification	fixed 5-4
configuring 4-24	obtaining from DCHP server 2-1
	obtaining through DHCP 5-4
	static 5-4
G	IP Addressing window
gateway, for IP camera 5-4	options 5-3
	overview 5-3
	— IP camera
Н	accessing through a web browser 1-2, 2-1
help, for IP camera windows 1-5	connecting to after the first time 1-2
Home window	connecting to for the first time 2-1
accessing 1-2	controlling access to 5-11
description 1-4, 1-5	day mode 4-14
displaying 1-4	logging in to 1-4
HTTP	logging out of 1-4
accessing camera through 1-3	MAC address 7-7
allowing access through 2-2, 7-2	name 5-2
default port 7-2	night mode 4-14
port 7-2	overview 1-1
	rebooting 7-5

restarting 7-5	microphone
restoring factory default configurations 7-5	use 4-14
time zone 5-5	motion detection
windows 1-2, 1-5	controls 3-7, 3-10
IP Filter Settings window	enabling 3-7
options 5-12	sensitivity 3-8
overview 5-11	multicast
	address 4-12
	enabling 4-12
L	port 4-12
live video	
See also video	N
live video, viewing	IV
through home window 3-1	name, of IP camera 5-2, 7-7
through third-party device or software 3-1	Network Setup windows 5-1
Local 4-28	night
Local Log window	filter 4-14
options 8-4	mode 4-14
overview 8-4	
Local Storage window, overview 4-28	
log file	0
sending to Syslog server 8-2	output ports, power on state 4-18
storage of 8-1	
viewing 8-4	
log in, to IP camera 1-4	P
log out, of IP camera 1-4	password
Log Setup Settings window	complexity 7-8
options 8-2	configuring requirements for 7-8
overview 8-1	for primary SMTP server 4-22
	for secondary SMTP server 4-23, 4-27
M	for SMTP server 4-27
VI	for user 7-4
MAC address, of IP camera 7-7	hardening 7-8
Maintenance Settings window	requirements for 2-2,7-4
options 7-5	Password Complexity window
overview 7-4	options 7-8
Medianet window, Enable Flow Metadata 5-7	overview 7-8
	port number 1-3

processes	SSH
descriptions 7-8	allowing access through 7-2
stopping 7-7	alternative port 7-2
	default port 7-2
0	Streaming Settings window
Q	options 4-12
QoS Settings window	overview 4-1
options 5-13	subnet mask, of IP camera 5-4
overview 5-12	Syslog server 8-2
quality of service 5-12	
	T
R	text overlay, on video 4-17
rebooting, IP camera 7-5	Time Settings window
Refresh link 1-4	options 5-5
resetting, factory default configurations 7-5	overview 5-5
restarting, IP camera 7-5	time stamp, on video 4-17
restoring, factory default configurations 7-5	time zone, of IP camera 5-5
	trigger
	for alert 4-26
S	for event 4-20
saturation 3-4	health 4-24
secure connection 1-3	system 4-19
security	
controlling processes 7-7	U
password hardening 7-8	o
stopping processes 7-7	uninstalling app 6-8
Setup window	user, password 7-4
description 1-5	user name, requirements for 7-3
displaying 1-4	User Settings window
sharpness 3-4	options 7-3
SNMP, configuring 5-7	overview 7-3
SNMP Settings window	
options 4-29, 5-7	V
overview 5-7	V
SNMP v2c 5-8	video
SNMP v3 5-8	bit rate 4-13
	codec, controls in Camera Video/Control window 3-1

```
primary stream 4-1
    quality 4-13
    resolution, controls in Camera Video/Control
    window 3-1
    secondary stream 4-1
    text overlay 4-17
    time stamp on 4-17
    viewing live
        through Home window 3-1
        through third-party device or software 3-1
    See also live video
video codec
    display in Streaming Settings window 4-13
video image
    optimizing for lighting condition 4-14
Video Overlay Settings window
    options 4-17
    overview 4-16
video resolution
    configuration guidelines 4-1
View Video link 1-4
```