



## INDEX

---

### A

- About link [4-2](#)
- ActiveX controls [4-2](#)

---

### B

- brightness [4-5](#)

---

### C

- camera
  - See* IP camera
- Camera Video/Control window
  - accessing [4-5](#)
  - description [4-2](#)
  - displaying [4-2](#)
- connecting, to the IP camera
  - for the first time [3-1](#)
  - PC requirements for [3-1](#)
- contrast [4-6](#)

---

### D

- DHCP, obtaining IP address through [3-1](#)

---

### F

- factory reset [4-4](#)
- focus/zoom
  - accessing controls [4-8](#)
  - controls [4-8](#)

---

### G

- GPIO terminal block [2-7](#)

---

### H

- help, for IP camera windows [4-2](#)
- Home window
  - description [4-2](#)
  - displaying [4-1](#)
- HTTP, allowing access through [3-2](#)

---

### I

- installing
  - GPIO terminal block [2-7](#)
  - IP camera [2-1](#)
  - mounting to ceiling or wall [2-4](#)
  - warnings [2-1](#)
  - waterproof connector [2-6](#)
- IP address
  - default for IP camera [3-1](#)
  - obtaining from DHCP server [3-1](#)
- IP camera
  - accessing through a web browser [3-1](#)
  - connecting to for the first time [3-1](#)
  - installation [2-1](#)
    - GPIO terminal block [2-7](#)
    - mounting to ceiling or wall [2-4](#)
    - warnings [2-1](#)
    - waterproof connector [2-6](#)
  - logging out of [4-2](#)
  - panning [4-6](#)

powering off [4-4](#)  
 powering on [4-4](#)  
 tilting [4-6](#)  
 windows [4-2](#)

---

## L

live video

viewing  
     through home window [4-5](#)  
     through third-party device or software [4-5](#)  
*See also* video

log out, of IP camera [4-2](#)

---

## M

motion detection

accessing controls [4-7](#)  
 controls [4-7](#)  
 enabling [4-7](#)  
 sensitivity [4-7, 4-8](#)  
 threshold [4-7, 4-8](#)

mounting to ceiling or wall [2-4](#)

---

## P

panning [4-6](#)

password

requirements for [3-2](#)

password, requirements for [3-2](#)

power

adapter [2-1](#)  
 powering off the IP camera [4-4](#)  
 powering on the IP camera [4-4](#)  
 Power over Ethernet (PoE) [2-1](#)

Power over Ethernet (PoE) [2-1](#)

---

## R

rebooting, IP camera [4-4](#)

Refresh link [4-1](#)

reset

factory default values [4-4](#)  
 reboot [4-4](#)

---

## S

saturation [4-6](#)

sensitivity, for motion detection [4-7, 4-8](#)

Setup window

description [4-2](#)  
 displaying [4-2](#)

sharpness [4-6](#)

---

## T

terminal block [2-7](#)

threshold, for motion detection [4-7, 4-8](#)

tilting [4-6](#)

---

## V

video

viewing live  
     through Home window [4-5](#)  
     through third-party device or software [4-5](#)  
*See also* live video

video codec

controls in Camera Video/Control window [4-5](#)

video image

controls in Camera Video/Control window [4-5](#)

video resolution

controls in Camera Video/Control window [4-5](#)

View Video link [4-2](#)

---

**W**

warnings before installation [2-1](#)

waterproof connector [2-6](#)

---

**Z**

zoom

    accessing controls [4-8](#)

zoom controls [4-8](#)

