



Run the System Setup Wizard

- [Run the System Setup Wizard, on page 1](#)
- [Check for Available Upgrades, on page 2](#)

Run the System Setup Wizard

Before you begin:

- Enable and register Smart License before running the System Setup Wizard. For more information, see [Smart Software Licensing](#).

Run the System Setup Wizard to configure basic settings and enable a set of system defaults. The System Setup Wizard starts automatically when you access the appliance through the web-based interface and displays the end user license agreement (also known as the EULA).

Step 1 Accept the end user license agreement.

Step 2 Enter information from the “[Document Network Settings](#)”.

If you need additional information about the settings, choose **Help and Support > Online Help**.

Step 3 Review the configuration summary page.

Step 4 Click **Install this Configuration**.

Step 5 The appliance may not appear to have accepted your configuration or be performing the installation. This is because you have changed the IP address, but the installation is underway.

Step 6 If you temporarily changed the IP address of your computer as described above, change the IP address settings back to the original values.

Step 7 Ensure that your computer and the appliance are connected to the network.

Step 8 Log in to the appliance again, at the hostname or IP address that you noted in the “[Plan the Installation](#)”. Use the username **admin** and the new password that you entered in the wizard.

The Cisco Web Security Appliance uses a self-signed certificate that may trigger a warning from your web browser. Accept the certificate and ignore this warning.

Step 9 Be sure to keep your new administrator password in a safe place.

Check for Available Upgrades

After logging in to the appliance, look at the top of the web browser window for an upgrade notification (or for a notice in the CLI.) If an upgrade is available, evaluate whether you should install it.

Details about each release are available in the release notes for that Async OS version.