



B Commands

- [beacon](#), on page 2
- [banner motd](#), on page 4
- [boot](#), on page 6
- [bport](#), on page 8
- [bport-keepalive](#), on page 9
- [broadcast](#), on page 10

beacon

To configure the port beacon LEDs on one or both ends of a link, use the beacon command. To disable the LED, use the no form of this command.

```
beacon interface fc slot/port both | local | peer [status normal | warning | critical] [duration seconds]
[frequency number]
```

```
no beacon interface fc slot/port both | local | peer
```

Syntax Description

interface fc slot/port	Specifies a Fibre Channel port.
both	Specifies local and peer port LEDs.
local	Specifies local port LED.
peer	Specifies peer port LED.
status	(Optional) Specifies a status for the port LEDs.
normal	Sets the status for port LEDs to normal from the previous state.
warning	Sets the status for port LEDs to warning ^{Footnote.} from the previous state.
critical	Sets the status for port LEDs to critical from the previous state.
duration seconds	(Optional) Configures the duration to blink the port beacon LED, in seconds. The range is 0 to 32767. Note When you configure the duration to 0 second, the port LEDs will continue to be in the same state until stopped by using the no beacon interface fc slot/port command for the port.
frequency number	(Optional) Configures a frequency (number of blinks per 10 seconds) for port LEDs. The range is 0 to 255. Note When you configure the frequency to 0, the port LEDs will not blink and continue to be in the same state.

¹ On Cisco switches only, the normal status indicates green color and warning status indicates orange color on the port LED. There is no color specified for critical status because the critical status is rejected on Cisco switches.

Command Default

The port beacon LED is disabled.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
8.4(1)	Added support for Cisco MDS switches that are operating in Cisco NPV mode.

Release	Modification
8.3(1)	This command was introduced.

Usage Guidelines

See the “Guidelines and Limitations for Port Beaconing” section in the [Cisco MDS 9000 Series NX-OS Interfaces Configuration Guide](#).

Examples

The following example shows how to set the LED status of a peer port to normal (green color) with a duration of 120 seconds and frequency of one blink per second:

```
switch# beacon interface fc 6/1 peer status normal duration 120 frequency 10
```

Related Commands

Command	Description
show interface	Displays local and peer LED status of interfaces.
switchport beacon	Enables the beacon LED on a local interface.

banner motd

To configure a message of the day (MOTD) banner, use the banner motd command in configuration mode.

```
banner motd [delimiting-character message delimiting-character]
no banner motd [delimiting-character message delimiting-character]
```

Syntax Description

delimiting-character	(Optional) Identifies the delimiting character.
message	(Optional) Specifies the banner message that is restricted to 40 lines with a maximum of 254 characters in each line.

Command Default

None.

Command Modes

Configuration mode.

Command History

Release	Modification
1.3(4)	This command was introduced.

Usage Guidelines

The configured MOTD banner is displayed before the login prompt on the terminal whenever a user logs in to a Cisco MDS 9000 Family switch.

Follow these guidelines when choosing your delimiting character:

- Do not use the delimiting-character in the message string.
- Do not use " and % as delimiters.

You can include tokens in the form \$(token) in the message text. Tokens will be replaced with the corresponding configuration variable. For example:

- \$(hostname) displays the host name for the switch
- \$(line) displays the vty or tty line no or name
- The \$(line-desc) and \$(domain) tokens are not supported.

Examples

The following example spans multiple lines and uses tokens to configure the banner message:

```
switch# config terminal
switch(config)# banner motd #
>Welcome to switch $(hostname).
>Your tty line is $(line).
>#
```

The following example shows a structured multiple line banner message:

```
switch# show banner motd
+++++
You have accessed a Cisco MDS switch.
```

```
Only authorized personnel have the right to access this switch.  
If you are not on the list of the authorized personnel,  
disconnect immediately or you will be prosecuted according to law.
```

```
Planned maintenance activity:  
Saturday 27th Feb 2021 from 20.00 till 23.00
```

```
For more information, contact your administrator.
```

```
+++++
```

Related Commands

Command	Description
show banner motd	Displays the configured banner message.

boot

To perform operations on the system, use the boot command in configuration mode. To negate this feature or return to factory defaults, use the no form of the command.

```
boot asm-sfn bootflash: | slot0: | tftp: [image] [module [slot-number]] | auto-copy | kickstart bootflash:
| slot0: | tftp: [image] [sup-1 [sup-2] | sup-2] | lasilc bootflash: | slot0: | tftp: [image] [module
[slot-number]] | ssi bootflash: | slot0: | system bootflash: | slot0: | tftp: [image] [sup-1 [sup-2] | sup-2]
no boot asm-sfn bootflash: | slot0: | tftp: [image] [module [slot-number]] | auto-copy | kickstart
bootflash: | slot0: | tftp: [image] [sup-1 [sup-2] | sup-2] | lasilc bootflash: | slot0: | tftp: [image]
[module [slot-number]] | ssi bootflash: | slot0: | system bootflash: | slot0: | tftp: [image] [sup-1 [sup-2]
| sup-2]
```

Syntax Description

asm-sfn	Configures the virtualization image.
bootflash:	Specifies system image URI for bootflash.
slot0:	Specifies system image URI for slot 0.
tftp:	Specifies system image URI for TFTP.
image	(Optional) Specifies the image file name.
module slot-number	(Optional) Specifies the slot number of the SSM.
auto-copy	Configures auto-copying of boot variable images.
kickstart	Configures the kickstart image.
lasilc	Configures the boot image.
ssi	Configures the SSI image.
system	Configures the system image.
sup-1	(Optional) The upper supervisor.
sup-2	(Optional) The lower supervisor.

Disabled. The default state for auto-copy is enabled.

Command Modes

Configuration mode.

Command History

Release	Modification
1.2(2)	This command was introduced
3.0(1)	Changed the default state for auto-copy to enabled.

Usage Guidelines

The boot kickstart slot0:image command is currently not allowed. For kickstart, only bootflash: is allowed.

When the boot auto-copy command is issued, the system copies the boot variable images which are local (present) in the active supervisor module (but not in the standby supervisor module) to the standby supervisor module. For kickstart and system boot variables, only those images that are set for the standby supervisor module are copied. For modules (line card) images, all modules present in standby's corresponding locations (bootflash: or slot0:) will be copied.

Examples

The following example adds the new system image file to the SYSTEM environment variable:

```
switch(config)# boot system bootflash:system.img
```

The following example boots from the CompactFlash device (slot0:). The switch updates the SYSTEM environment variable to reflect the new image file in the specified flash device:

```
switch(config)# boot system slot0:system.img
```

The following example overwrites the old Kickstart environment variable in the configuration file:

```
switch(config)# boot kickstart bootflash:kickstart.img
```

The following example specifies the SSM image to be used:

```
switch(config)# boot asm-sfn bootflash:m9000-ek9-asm-sfn-mz.1.2.2.bin
```

The following example enables automatic copying of boot variables from the active supervisor module to the standby supervisor module:

```
switch(config)# boot auto-copy
```

The following example disables the automatic copy feature (default).

```
switch(config)# no boot auto-copy
```

Related Commands

Command	Description
show boot	Displays the configured boot variable information.

bport

To configure a B port mode on a FCIP interface, use the `bport` option. To disable a B port mode on a FCIP interface, use the `no bport` form of the command.

```
bport
no bport
```

Syntax Description This command has no other arguments or keywords.

Command Default Disabled.

Command Modes Interface configuration submode.

Release	Modification
1.1(1)	This command was introduced.

Usage Guidelines Access this command from the `switch(config-if)#` submode.

Examples The following example shows how to configure a B port mode on an FCIP interface:

```
switch# config terminal
switch(config)# interface fcip 1
switch(config-if)# bport
```

Command	Description
<code>bport-keepalive</code>	Configures B port keepalive responses.
<code>show interface fcip</code>	Displays an interface configuration for a specified FCIP interface.

bport-keepalive

To configure keepalive responses for B port FCIP interfaces, use the bport-keepalive option. To disable keepalive responses for B port FCIP interfaces, use the no form of the command.

```
bport-keepalive
no bport-keepalive
```

Syntax Description This command has no arguments or keywords.

Command Default Disabled.

Command Modes Interface configuration submode.

Command History	Release	Modification
	1.1(1)	This command was introduced.

Usage Guidelines Access this command from the switch(config-if)# submode.

Examples The following example shows how to configure keepalive responses for B port FCIP interfaces:

```
switch# config terminal
switch(config)# interface fcip 1
switch(config-if)# bport-keepalives
```

Related Commands	Command	Description
	bport	Configures a B port FCIP interface.
	show interface fcip	Displays an interface configuration for a specified FCIP interface.

broadcast

To enable the broadcast frames attribute in a zone attribute group, use the broadcast command. To revert to the default, use the no form of the command.

```
broadcast
no broadcast
```

Syntax Description This command has no arguments or keywords.

Command Default Disabled.

Command Modes Zone attribute configuration submode.

Release	Modification
2.0(x)	This command was introduced.

Usage Guidelines Broadcast frames are sent to all Nx ports.

If any NL port attached to an FL port shares a broadcast zone with the source of the broadcast frame, then the frames are broadcast to all devices in the loop.

This command only configures the broadcast attribute for enhanced zoning. To enable broadcast zoning for basic mode, use the attribute broadcast subcommand after entering zone configuration mode using the zone name command.

Examples

The following example shows how to set the broadcast attribute for a zone attribute group:

```
switch# config terminal
switch(config)# zone-attribute-group name admin-attributes vsan 10
switch(config-attribute-group)# broadcast
```

Related Commands

Command	Description
show zone-attribute-group	Displays zone attribute group information.
zone mode enhanced vsan	Enables enhanced zoning for a VSAN.
zone name	Configures zone attributes.
zone-attribute-group name	Configures zone attribute groups.