



A

appliance name
 CLI setup [2-13](#)
audience [iii-v](#)

C

CIMC
 information about [1-1](#)
CLI prompt, appliance [2-13](#)
control and packet VLAN
 about [2-8](#)
 CLI setup [2-10, 2-16](#)
conventions [iii-vi](#)

D

default gateway
 CLI setup [2-13](#)
documentation
 additional publications [iii-vii](#)
 related documents [iii-vi](#)

F

Flow Chart
 Replacing a Cisco Nexus 1010 [2-24](#)

H

HA
 redundancy role [2-6](#)

redundancy state [2-7](#)

M

management software
 verify setup [2-18](#)
management VLAN
 about [2-8](#)
 CLI setup [2-11, 2-16](#)
mgmt0
 CLI setup [2-13](#)

N

name, appliance [2-13](#)
NTP
 CLI setup [2-13](#)

P

password strength [2-6](#)
ports, uplinks [2-8](#)
prompt, CLI [2-13](#)

R

redundancy
 role [2-6](#)
 state [2-7](#)
related documents [iii-vii, iii-viii](#)
replacing a Cisco Nexus 1010 [2-21](#)

Send document comments to nexus1k-docfeedback@cisco.com.

S

SSH

CLI setup [2-13](#)

strong password [2-6](#)

T

Telnet

CLI setup [2-13](#)

U

uplinks

CLI setup [2-16](#)

port and VLAN assignments [2-8](#)

V

verify

management software setup [2-18](#)

VLAN

about [2-8](#)

uplink port assignments [2-8](#)