

Q Commands

This chapter describes the Cisco Nexus 1000V commands that begin with the letter Q.

qos statistics

To enable the recording of quality of service (QoS) statistics, use the **qos statistics** command. To disable the recording of QoS statistics, use the **no** form of this command.

qos statistics

no qos statistics

Syntax Description This command has no arguments or keywords.

Defaults QoS statistics are not recorded.

Command Modes Global configuration (config)

SupportedUserRoles network-admin

Examples This example shows how to enable the recording of QoS statistics:

```
n1000v# configure terminal
n1000v(config)# qos statistics
n1000v(config)#
```

Related Commands	Command	Description
	show policy-map	Displays the policy map configuration for all policy maps or for a specified policy map.
