



W Commands

This chapter describes the Cisco Nexus Virtual Services Appliance commands that begin with the letter W.

where

To display your current context in the command-line interface (CLI), use the **where** command.

where [**detail**]

Syntax Description

detail	(Optional) Displays detailed context information.
---------------	---

Defaults

Displays summary context information.

Command Modes

Any command mode

Supported User Roles

network-admin

Command History

Release	Modification
4.0(4)SP1(1)	This command was introduced.

Usage Guidelines

This command helps you track where you are in the CLI and how you got there.

Examples

This example shows how to display summary context information:

```
n1010(config-if)# where
?conf; interface Ethernet2/3      admin@n1010%default
```

Send document comments to nexus1k-docfeedback@cisco.com.

This example shows how to display detailed context information:

```
n1010(config-if)# where detail
?conf; interface Ethernet2/3      admin@switch%default
mode:                               conf
                                     interface Ethernet2/3
username:                            admin
routing-context vrf: default
```

Related Commands

Command	Description
cli var name	Defines a command line interface (CLI) variable for a terminal session.
exit	Exits the CLI.
show cli variables	Displays user-defined CLI persistent variables.

Send document comments to nexus1k-docfeedback@cisco.com.

write erase

To erase configurations in persistent memory areas, use the **write erase** command.

write erase [**boot** | **debug**]

Syntax	Description
boot	(Optional) Erases only the boot variable and mgmt0 interface configuration.
debug	(Optional) Erases only the debug configuration.

Defaults	Description
	Erases all configuration in persistent memory except for the boot variable, mgmt0 interface, and debug configuration.

Command Modes	Description
	Any command mode

Supported User Roles	Description
	network-admin

Command History	Release	Modification
	4.0(4)SP1(1)	This command was introduced.

Usage Guidelines	Description
	You can use the write erase command to erase the startup configuration in the persistent memory when information is corrupted or otherwise unusable. Erasing the startup configuration returns the device to its initial state, except for the boot variable, mgmt0 interface, and debug configurations. You have to explicitly erase those configurations with the boot and debug options.

Examples	Description
	This example shows how to erase the startup configuration:

```
n1010(config)# write erase
Warning: This command will erase the startup-configuration.
Do you wish to proceed anyway? (y/n) [n] y
```

This example shows how to erase the boot variable and mgmt0 interface configuration in the persistent memory:

```
n1010(config)# write erase boot
```

This example shows how to erase the debug configuration in the persistent memory:

```
n1010(config)# write erase debug
```

Send document comments to nexus1k-docfeedback@cisco.com.

Related Commands	Command	Description
	copy running-config startup-config	Copies the running configuration to the startup configuration.
	show running-config	Displays the startup configuration.