

# **Managing Users**

This chapter contains the following sections:

- Information About User Management, on page 1
- Displaying Current User Access, on page 1
- Sending a Message to Users, on page 2
- Feature History for User Management, on page 2

# **Information About User Management**

You can identify the users currently connected to the device and send a message to either a single user or all users.

For information about creating user accounts and assigning user roles, see the *Cisco Nexus 1000V Security Configuration Guide*.

# **Displaying Current User Access**

You can display all users currently accessing the switch.

### Before you begin

Log in to the CLI.

### Procedure

	Command or Action	Purpose
Step 1		Displays a list of users who are currently accessing the system.

### Example

This example shows how to display current user access:

switch#	Show users			
NAME	LINE	TIME	IDLE	PID COMMENT

admin	pts/0	Jul	1 04:40 03:29	2915 (::ffff:64.103.145.136)
admin	pts/2	Jul	1 10:06 03:37	6413 (::ffff:64.103.145.136)
admin	pts/3	Jul	1 13:49 .	8835 (171.71.55.196)*
switch#				

### Sending a Message to Users

You can send a message to all active CLI users who are currently using the system.

#### Before you begin

Log in to the CLI.

#### Procedure

	Command or Action	Purpose
Step 1	switch# send {session device} line	Sends a message to users currently logged in to the system.
		• The <i>session</i> argument sends the message to a specified pts/tty device type.
		• The <i>device</i> argument specifies the device type.
		• The <i>line</i> argument is a message of up to 80 alphanumeric characters.

### Example

This example shows up to send a message to users:

 ${\tt switch}\#$  send Hello. Shutting down the system in 10 minutes.

Broadcast Message from admin@switch (/dev/pts/34) at 8:58 ... Hello. Shutting down the system in 10 minutes.

switch#

### **Feature History for User Management**

Feature Name	Releases	Feature Information
User Management	4.0(4)SV1(1)	This feature was introduced.