

INDEX

B

bandwidth (QoS) command [2](#)

C

class (control plane policy map) command [3](#)
class (policy map type qos) command [5](#)
class class-default command [7](#)
class-map type control-plane command [14](#)
class-map type network-qos command [15](#)
class-map type qos command [12](#)
class-map type queuing command [17](#)
class type network-qos command [9](#)
class type queuing command [11](#)
clear copp statistics command [19](#)
clear qos statistics command [20](#)
congestion-control random-detect command [21, 25](#)
congestion-control random-detect ecn command [23](#)
control-plane command [27](#)

D

description command [28](#)

I

ip dscp (ERSPAN) command [29](#)
ip ttl (ERSPAN) command [30](#)

M

match access-group command [31](#)
match cos command [33](#)
match dscp command [34](#)
match ip rtp command [36](#)
match precedence command [37](#)
match qos-group command [39](#)
mtu (ERSPAN) command [41](#)
mtu (interface) command [42](#)

P

police (policy map) command [44](#)
policy-map type control-plane command [46](#)
policy-map type network-qos command [48](#)
policy-map type qos command [50](#)
policy-map type queuing command [52](#)
priority command [54, 55](#)

S

service-policy (control-plane) command [57](#)
service-policy (Layer 3 interface) command [61](#)
service-policy (policy-map class) command [59](#)
set cos (policy map type network-qos) command [62](#)
set dscp command [64](#)
set precedence command [67](#)
set qos-group command [70](#)
shape command [72](#)
show class-map type control-plane command [73](#)
show class-map type network-qos command [75](#)
show class-map type qos command [77](#)

show class-map type queuing command 79
show copp status command 81
show hardware internal buffer info pkt-stats command 82
show interface untagged-cos command 85
show policy-map command 86
show policy-map interface brief command 91
show policy-map interface command 89
show policy-map interface control-plane command 92
show policy-map system command 94
show policy-map type control-plane command 96
show queuing interface command 98
show running-config copp command 100
show running-config ipqos command 102
show startup-config copp command 104
show startup-config ipqos command 106
show wrr-queue qos-group-map command 108
show wrr unicast-bandwidth command 107
system jumbontu command 109
system qos command 110

U

untagged cos command 111, 112

W

wrr-queue qos-group-map command 113
wrr unicast-bandwidth command 115