



A

abort (Call Home) command [SM-2](#)
abort (session) command [SM-3](#)
action cli command [SM-4](#)
action counter command [SM-6](#)
action event-default command [SM-8](#)
action policy-default command [SM-10](#)
action reload command [SM-12](#)
action snmp-trap command [SM-14](#)
action syslog command [SM-16](#)
alert-group (Call Home) command [SM-18](#)

C

callhome command [SM-20](#)
callhome send diagnostic command [SM-21](#)
callhome test command [SM-22](#)
clear logging logfile command [SM-23](#)
clear logging nvram command [SM-24](#)
clear logging onboard command [SM-25](#)
clear logging session command [SM-26](#)
clear ntp session command [SM-27](#)
clear ntp statistics command [SM-28](#)
clear ptp counters command [SM-29](#)
clear scheduler logfile command [SM-30](#)
clock protocol command [SM-32](#)
commit (Call Home) command [SM-33](#)
commit (session) command [SM-34](#)
contract-id (Call Home) command [SM-35](#)
customer-id (Call Home) command [SM-36](#)

D

description (SPAN, ERSPAN) command [SM-38](#)
destination interface (ERSPAN) command [SM-41](#)
destination ip (ERSPAN) command [SM-40](#)
destination-profile (Call Home) command [SM-42](#)
diagnostic bootup level command [SM-45](#)
duplicate-message throttle (Call Home) command [SM-46](#)

E

email-contact (Call Home) command [SM-47](#)
enable (Call Home) command [SM-48](#)
event cli command [SM-50](#)
event counter command [SM-51](#)
event fanabsent command [SM-53](#)
event fanbad command [SM-54](#)
event manager policy command [SM-59](#)
event policy-default command [SM-61](#)
event snmp command [SM-62](#)
event temperature command [SM-70](#)
event track command [SM-71](#)

F

feature ptp command [SM-72](#)
feature scheduler command [SM-74](#)

H

hardware [SM-76](#)
hardware profile buffer info port-threshold
command [SM-76](#)

Send comments to nexus3k-docfeedback@cisco.com

I

ip access-list (session) command [SM-77](#)
 ip domain-list command [SM-78](#)
 ip domain-lookup command [SM-80](#)
 ip domain-name command [SM-81](#)
 ip host command [SM-83](#)
 ip name-server command [SM-84](#)
 ip port access-group (session) command [SM-86](#)

L

logging abort command [SM-87](#)
 logging commit command [SM-88](#)
 logging console command [SM-89](#)
 logging distribute command [SM-90](#)
 logging event command [SM-91](#)
 logging event port command [SM-92](#)
 logging level command [SM-93](#)
 logging logfile command [SM-95](#)
 logging module command [SM-97](#)
 logging monitor command [SM-98](#)
 logging server command [SM-99](#), [SM-101](#)
 logging timestamp command [SM-103](#)

M

monitor erspan origin ip-address command [SM-104](#)
 monitor session command [SM-105](#)

N

ntp abort command [SM-109](#)
 ntp command [SM-107](#)
 ntp commit command [SM-110](#)
 ntp distribute command [SM-111](#)
 ntp sync-retry command [SM-112](#)

P

periodic-inventory (Call Home) command [SM-113](#)
 phone-contact (Call Home) command [SM-115](#)
 ptp announce command [SM-117](#)
 ptp command [SM-116](#)
 ptp delay-request minimum interval command [SM-119](#)
 ptp domain command [SM-121](#)
 ptp priority1 command [SM-122](#)
 ptp priority2 command [SM-123](#)
 ptp source command [SM-124](#)
 ptp sync interval command [SM-126](#)
 ptp vlan command [SM-128](#)

R

rmon alarm command [SM-130](#)
 rmon event command [SM-132](#)
 rmon hcalarm command [SM-134](#)

S

scheduler command [SM-136](#), [SM-138](#), [SM-139](#), [SM-140](#),
[SM-141](#), [SM-142](#), [SM-144](#), [SM-145](#)
 show callhome command [SM-147](#)
 show callhome destination-profile command [SM-148](#)
 show callhome transport-email command [SM-150](#)
 show callhome user-def-cmds command [SM-151](#)
 show diagnostic bootup level command [SM-152](#)
 show diagnostic result command [SM-153](#)
 show event manager environment command [SM-154](#)
 show event manager event-types command [SM-156](#)
 show event manager history events [SM-159](#)
 show event manager policy-state command [SM-161](#)
 show event manager script system command [SM-163](#)
 show event manager system-policy command [SM-164](#)
 show hosts command [SM-167](#)
 show logging console command [SM-168](#)
 show logging info command [SM-169](#)

Send comments to nexus3k-docfeedback@cisco.com

- show logging last command [SM-170](#)
 - show logging level command [SM-171](#)
 - show logging logfile command [SM-173](#)
 - show logging module command [SM-174](#)
 - show logging monitor command [SM-175](#)
 - show logging nvram command [SM-176](#)
 - show logging onboard command [SM-177](#)
 - show logging pending command [SM-181](#)
 - show logging pending-diff command [SM-182](#)
 - show logging server command [SM-184](#)
 - show logging session status command [SM-183](#)
 - show logging status command [SM-185](#)
 - show logging timestamp command [SM-186](#)
 - show monitor session command [SM-187](#)
 - show ntp peers command [SM-190](#)
 - show ntp peer-status command [SM-189](#)
 - show ntp statistics command [SM-191](#)
 - show ntp timestamp-status command [SM-192](#)
 - show ptp brief command [SM-193](#)
 - show ptp clock command [SM-194](#)
 - show ptp clock foreign-masters-record command [SM-196](#)
 - show ptp corrections command [SM-198](#)
 - show ptp parent command [SM-199](#)
 - show ptp port command [SM-201](#)
 - show ptp time-property command [SM-203](#)
 - show rmon command [SM-204](#)
 - show running-config callhome command [SM-208](#)
 - show running-config command [SM-206](#)
 - show running-config eem command [SM-209](#)
 - show running-config exclude-provision command [SM-211](#)
 - show running-config interface command [SM-213](#)
 - show running-config monitor command [SM-214](#)
 - show running-config ptp command [SM-216](#)
 - show scheduler command [SM-218](#)
 - show snmp community command [SM-222](#)
 - show snmp context command [SM-223](#)
 - show snmp engineID command [SM-224](#)
 - show snmp group command [SM-225](#)
 - show snmp host command [SM-226](#)
 - show snmp sessions command [SM-227](#)
 - show snmp trap command [SM-228](#)
 - show snmp user command [SM-229](#)
 - show startup-config callhome command [SM-231](#)
 - show startup-config command [SM-230](#)
 - show startup-config eem command [SM-232](#)
 - show startup-config exclude-provision command [SM-234](#)
 - show startup-config ptp command [SM-235](#)
 - show startup-config vtp command [SM-237](#)
 - show tech-support callhome command [SM-238](#)
 - shut (ERSPAN) command [SM-239](#)
 - site-id (Call Home) command [SM-240](#)
 - snmp-server community command [SM-241](#)
 - snmp-server contact command [SM-243](#)
 - snmp-server context command [SM-244](#)
 - snmp-server enable traps command [SM-246](#)
 - snmp-server enable traps link command [SM-249](#)
 - snmp-server enable traps vtp command [SM-251](#)
 - snmp-server globalEnforcePriv command [SM-252](#)
 - snmp-server host command [SM-253](#)
 - snmp-server location command [SM-255](#)
 - snmp-server mib community-map command [SM-256](#)
 - snmp-server tcp-session command [SM-258](#)
 - snmp-server user command [SM-259](#)
 - snmp trap link-status command [SM-261](#)
 - source (SPAN, ERSPAN) command [SM-263](#)
 - source ip (ERSPAN) command [SM-265](#)
 - streetaddress (Call Home) command [SM-266](#)
 - switching-mode store-forward command [SM-267](#)
 - switchport mode command [SM-268](#)
 - switch-priority (Call Home) command [SM-269](#)
-
- T**
- tag command [SM-270](#)
 - terminal event-manager bypass command [SM-271](#)
 - transport email (Call Home) command [SM-272](#)

Send comments to nexus3k-docfeedback@cisco.com

V

verify (session) command [SM-274](#)

vrf (ERSPAN) command [SM-275](#)