



## CHAPTER 9

# Configuring RIP

---

This chapter describes how to configure the Routing Information Protocol (RIP).

This chapter includes the following sections:

- [Information About RIP, page 9-1](#)
- [Licensing Requirements for RIP, page 9-4](#)
- [Prerequisites for RIP, page 9-4](#)
- [Guidelines and Limitations, page 9-4](#)
- [Default Settings, page 9-4](#)
- [Configuring RIP, page 9-5](#)
- [Verifying the RIP Configuration, page 9-17](#)
- [Displaying RIP Statistics, page 9-17](#)
- [Configuration Examples for RIP, page 9-18](#)
- [Related Topics, page 9-18](#)
- [Additional References, page 9-18](#)
- [Feature History for RIP, page 9-19](#)

## Information About RIP

This section includes the following topics:

- [RIP Overview, page 9-2](#)
- [RIPv2 Authentication, page 9-2](#)
- [Split Horizon, page 9-2](#)
- [Route Filtering, page 9-3](#)
- [Route Summarization, page 9-3](#)
- [Route Redistribution, page 9-3](#)
- [Load Balancing, page 9-3](#)
- [Virtualization Support, page 9-4](#)

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

## RIP Overview

RIP uses User Datagram Protocol (UDP) data packets to exchange routing information in small internetworks. RIPv2 supports IPv4. RIPv2 uses an optional authentication feature supported by the RIPv2 protocol (see the “[RIPv2 Authentication](#)” section on page 9-2).

RIP uses the following two message types:

- Request—Sent to the multicast address 224.0.0.9 to request route updates from other RIP-enabled routers.
- Response—Sent every 30 seconds by default (see the “[Verifying the RIP Configuration](#)” section on page 9-17). The router also sends response messages after it receives a Request message. The response message contains the entire RIP route table. RIP sends multiple response packets for a request if the RIP routing table cannot fit in one response packet.

RIP uses a *hop count* for the routing metric. The hop count is the number of routers that a packet can traverse before reaching its destination. A directly connected network has a metric of 1; an unreachable network has a metric of 16. This small range of metrics makes RIP an unsuitable routing protocol for large networks.

## RIPv2 Authentication

You can configure authentication on RIP messages to prevent unauthorized or invalid routing updates in your network. Cisco NX-OS supports a simple password or an MD5 authentication digest.

You can configure the RIP authentication per interface by using key-chain management for the authentication keys. Key-chain management allows you to control changes to the authentication keys used by an MD5 authentication digest or simple text password authentication. See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 5.x* for more details about creating key-chains.

To use an MD5 authentication digest, you configure a password that is shared at the local router and all remote RIP neighbors. Cisco NX-OS creates an MD5 one-way message digest based on the message itself and the encrypted password and sends this digest with the RIP message (Request or Response). The receiving RIP neighbor validates the digest by using the same encrypted password. If the message has not changed, the calculation is identical and the RIP message is considered valid.

An MD5 authentication digest also includes a sequence number with each RIP message to ensure that no message is replayed in the network.

## Split Horizon

You can use split horizon to ensure that RIP never advertises a route out of the interface where it was learned.

Split horizon is a method that controls the sending of RIP update and query packets. When you enable split horizon on an interface, Cisco NX-OS does not send update packets for destinations that were learned from this interface. Controlling update packets in this manner reduces the possibility of routing loops.

You can use split horizon with poison revers to configure an interface to advertise routes learned by RIP as unreachable over the interface that learned the routes. [Figure 9-1](#) shows a sample RIP network with split horizon with poison reverse enabled.



***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

Cisco NX-OS supports the Equal Cost Multiple Paths (ECMP) feature with up to 16 equal-cost paths in the RIP route table and the unicast RIB. You can configure RIP to load balance traffic across some or all of those paths.

## Virtualization Support

Cisco NX-OS supports multiple instances of the RIP protocol that runs on the same system. RIP supports Virtual Routing and Forwarding instances (VRFs).

By default, Cisco NX-OS places you in the default VRF unless you specifically configure another VRF. See [Chapter 11, “Configuring Layer 3 Virtualization.”](#)

## Licensing Requirements for RIP

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	RIP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .
	<b>Note</b> Make sure the LAN Base Services license is installed on the switch to enable Layer 3 interfaces.

## Prerequisites for RIP

RIP has the following prerequisites:

- You must enable the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 9-5).

## Guidelines and Limitations

RIP has the following configuration guidelines and limitations:

- Cisco NX-OS does not support RIPv1. If Cisco NX-OS receives a RIPv1 packet, it logs a message and drops the packet.
- Cisco NX-OS does not establish adjacencies with RIPv1 routers.

## Default Settings

[Table 9-1](#) lists the default settings for RIP parameters.

[Send document comments to nexus3k-docfeedback@cisco.com.](mailto:nexus3k-docfeedback@cisco.com)

**Table 9-1**      *Default RIP Parameters*

Parameters	Default
Maximum paths for load balancing	16
RIP feature	Disabled
Split horizon	Enabled

## Configuring RIP

This section includes the following topics:

- [Enabling the RIP Feature, page 9-5](#)
- [Creating a RIP Instance, page 9-6](#)
- [Configuring RIP on an Interface, page 9-8](#)
- [Configuring a Passive Interface, page 9-11](#)
- [Configuring Route Summarization, page 9-11](#)
- [Configuring Route Summarization, page 9-11](#)
- [Configuring Route Redistribution, page 9-12](#)
- [Configuring Virtualization, page 9-13](#)
- [Tuning RIP, page 9-16](#)



**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

## Enabling the RIP Feature

You must enable the RIP feature before you can configure RIP.

### SUMMARY STEPS

1. **configure terminal**
2. **feature rip**
3. (Optional) **show feature**
4. (Optional) **copy running-config startup-config**

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>feature rip</b>  <b>Example:</b> switch(config)# feature rip	Enables the RIP feature.
Step 3	<b>show feature</b>  <b>Example:</b> switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature rip** command to disable the RIP feature and remove all associated configuration.

Command	Purpose
<b>no feature rip</b>  <b>Example:</b> switch(config)# no feature rip	Disables the RIP feature and removes all associated configuration.

## Creating a RIP Instance

You can create a RIP instance and configure the address family for that instance.

### BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 9-5).

### SUMMARY STEPS

1. **configure terminal**
2. **router rip** *instance-tag*
3. **address-family ipv4 unicast**
4. (Optional) **show ip rip** [**instance** *instance-tag*] [**vrf** *vrf-name*]
5. (Optional) **copy running-config startup-config**

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>router rip</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# router RIP Enterprise switch(config-router)#	Creates a new RIP instance with the configured <i>instance-tag</i> .
Step 3	<b>address-family ipv4 unicast</b> <b>Example:</b> switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Configures the address family for this RIP instance and enters address-family configuration mode.
Step 4	<b>show ip rip</b> [ <i>instance instance-tag</i> ] [ <i>vrf vrf-name</i> ]  <b>Example:</b> switch(config-router-af)# show ip rip	(Optional) Displays a summary of RIP information for all RIP instances.
Step 5	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no router rip** command to remove the RIP instance and the associated configuration.

Command	Purpose
<b>no router rip</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# no router rip Enterprise	Deletes the RIP instance and all associated configuration.



### Note

You must also remove any RIP commands configured in interface mode.

You can configure the following optional parameters for RIP in address-family configuration mode:

Command	Purpose
<b>distance</b> <i>value</i>  <b>Example:</b> switch(config-router-af)# distance 30	Sets the administrative distance for RIP. The range is from 1 to 255. The default is 120. See the <a href="#">“Administrative Distance”</a> section on page 1-7.
<b>maximum-paths</b> <i>number</i> <b>Example:</b> switch(config-router-af)# maximum-paths 6	Configures the maximum number of equal-cost paths that RIP maintains in the route table. The range is from 1 to 16. The default is 16.

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

This example shows how to create a RIP instance for IPv4 and set the number of equal-cost paths for load balancing:

```
switch# configure terminal
switch(config)# router rip Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# max-paths 10
switch(config-router-af)# copy running-config startup-config
```

## Restarting a RIP Instance

You can restart a RIP instance. This clears all neighbors for the instance.

To restart a RIP instance and remove all associated neighbors, use the following command:

Command	Purpose
<b>restart rip</b> instance-tag	Restarts the RIP instance and removes all neighbors.
<b>Example:</b> switch(config)# restart rip Enterprise	

## Configuring RIP on an Interface

You can add an interface to a RIP instance.

### BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 9-5).

### SUMMARY STEPS

1. **configure terminal**
2. **interface** *interface-type slot/port*
3. **no switchport**
4. **ip rip** *instance-tag*
5. (Optional) **show ip rip** [**instance** *instance-tag*] **interface** [*interface-type slot/port*] [**vrf** *vrf-name*] [**detail**]
6. (Optional) **copy running-config startup-config**



**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>interface</b> <i>interface-type slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	<b>no switchport</b>  <b>Example:</b> switch(config-if)# no switchport	Configures the interface as a Layer 3 routed interface.
Step 4	<b>ip router rip</b> <i>instance-tag</i>  <b>Example:</b> switch(config-if)# ip router rip Enterprise	Associates this interface with a RIP instance.
Step 5	<b>show ip rip</b> [ <i>instance instance-tag</i> ] <b>interface</b> [ <i>interface-type slot/port</i> ] [ <i>vrf vrf-name</i> ] [ <i>detail</i> ]  <b>Example:</b> switch(config-if)# show ip rip Enterprise ethernet 1/2	(Optional) Displays RIP information for an interface.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to add the Ethernet 1/2 interface to a RIP instance:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip router rip Enterprise
switch(config)# copy running-config startup-config
```

## Configuring RIP Authentication

You can configure authentication for RIP packets on an interface.

### BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the “[Enabling the RIP Feature](#)” section on page 9-5).

Configure a key chain if necessary before enabling authentication. See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 5.x* for details on implementing key chains.

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

## SUMMARY STEPS

1. **configure terminal**
2. **interface** *interface-type slot/port*
3. **no switchport**
4. **ip rip authentication mode**{text | md5}
5. **ip rip authentication key-chain** *key*
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>interface</b> <i>interface-type slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	<b>no switchport</b>  <b>Example:</b> switch(config-if)# no switchport	Configures the interface as a Layer 3 routed interface.
Step 4	<b>ip rip authentication mode</b> {text   md5}  <b>Example:</b> switch(config-if)# ip rip authentication mode md5	Sets the authentication type for RIP on this interface as cleartext or MD5 authentication digest.
Step 5	<b>ip rip authentication key-chain</b> <i>key</i>  <b>Example:</b> switch(config-if)# ip rip authentication keychain RIPKey	Configures the authentication key used for RIP on this interface.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to create a key chain and configure MD5 authentication on a RIP interface:

```
switch# configure terminal
switch(config)# key chain RIPKey
switch(config)# key-string myrip
switch(config)# accept-lifetime 00:00:00 Jan 01 2000 infinite
switch(config)# send-lifetime 00:00:00 Jan 01 2000 infinite
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip rip authentication mode md5
switch(config-if)# ip rip authentication keychain RIPKey
switch(config-if)# copy running-config startup-config
```

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

## Configuring a Passive Interface

You can configure a RIP interface to receive routes but not send route updates by setting the interface to passive mode.

To configure a RIP interface in passive mode, use the following command in interface configuration mode:

Command	Purpose
<code>ip rip passive-interface</code>	Sets the interface into passive mode.
<b>Example:</b> switch(config-if)# ip rip passive-interface	

## Configuring Split Horizon with Poison Reverse

You can configure an interface to advertise routes learned by RIP as unreachable over the interface that learned the routes by enabling poison reverse.

To configure split horizon with poison reverse on an interface, use the following command in interface configuration mode:

Command	Purpose
<code>ip rip poison-reverse</code>	Enables split horizon with poison reverse. Split horizon with poison reverse is disabled by default.
<b>Example:</b> switch(config-if)# ip rip poison-reverse	

## Configuring Route Summarization

You can create aggregate addresses that are represented in the routing table by a summary address. Cisco NX-OS advertises the summary address metric that is the smallest metric of all the more-specific routes.

To configure a summary address on an interface, use the following command in interface configuration mode:

Command	Purpose
<code>ip rip summary-address ip-prefix/mask-len</code>	Configures a summary address for RIP for IPv4 addresses.
<b>Example:</b> switch(config-if)# ip router rip summary-address 192.0.2.0/24	

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

## Configuring Route Redistribution

You can configure RIP to accept routing information from another routing protocol and redistribute that information through the RIP network. Redistributed routes can optionally be assigned a default route.

### BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the “[Enabling the RIP Feature](#)” section on page 9-5). Configure a route map before configuring redistribution. See the “[Configuring Route Maps](#)” section on page 13-12 for details on configuring route maps.

### SUMMARY STEPS

1. **configure terminal**
2. **router rip** *instance-tag*
3. **address-family ipv4 unicast**
4. **redistribute** { **bgp** *as* | **direct** | **eigrp** | **ospf** | **ospfv3** | **rip** } *instance-tag* | **static** } **route-map** *map-name*
5. (Optional) **default-information originate** [**always**] [**route-map** *map-name*]
6. (Optional) **default-metric** *value*
7. (Optional) **show ip rip route** [{ *ip-prefix* [*longer-prefixes* | *shorter-prefixes*]}] [**vrf** *vrf-name*] [**summary**]
8. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>router rip</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# router rip Enterprise switch(config-router)#	Creates a new RIP instance with the configured <i>instance-tag</i> .
Step 3	<b>address-family ipv4 unicast</b>  <b>Example:</b> switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	<b>redistribute</b> { <b>bgp</b> <i>as</i>   <b>direct</b>   { <b>eigrp</b>   <b>ospf</b>   <b>ospfv3</b>   <b>rip</b> } <i>instance-tag</i>   <b>static</b> } <b>route-map</b> <i>map-name</i>  <b>Example:</b> switch(config-router-af)# redistribute eigrp 201 route-map RIPmap	Redistributes routes from other protocols into RIP. See the “ <a href="#">Configuring Route Maps</a> ” section on page 13-12 for more information about route maps.

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

	Command	Purpose
Step 5	<b>default-information originate</b> [always] [route-map <i>map-name</i> ]  <b>Example:</b> switch(config-router-af)# default-information originate always	(Optional) Generates a default route into RIP, optionally controlled by a route map.
Step 6	<b>default-metric</b> <i>value</i>  <b>Example:</b> switch(config-router-af)# default-metric 10	(Optional) Sets the default metric for all redistributed routes. The range is from 1 to 15. The default is 1.
Step 7	<b>show ip rip route</b> [ <i>ip-prefix</i> ] [longer-prefixes   shorter-prefixes] [vrf <i>vrf-name</i> ] [summary]  <b>Example:</b> switch(config-router-af)# show ip rip route	(Optional) Shows the routes in RIP.
Step 8	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to redistribute EIGRP into RIP:

```
switch# configure terminal
switch(config)# router rip Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map RIPmap
switch(config-router-af)# copy running-config startup-config
```

## Configuring Virtualization

You can create multiple VRFs and use the same or multiple RIP instances in each VRF. You assign a RIP interface to a VRF.



### Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

### BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 9-5).

### SUMMARY STEPS

1. **configure terminal**
2. **vrf** *vrf-name*
3. **exit**
4. **router rip** *instance-tag*

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

5. **vrf context** *vrf\_name*
6. (Optional) **address-family ipv4 unicast**
7. (Optional) **redistribute** { **bgp as** | **direct** | { **eigrp** | **ospf** | **ospfv3** | **rip** } *instance-tag* | **static** }  
**route-map** *map-name*
8. **interface ethernet** *slot/port*
9. **no switchport**
10. **vrf member** *vrf-name*
11. **ip-address** *ip-prefix/length*
12. **ip router rip** *instance-tag*
13. (Optional) **show ip rip** [**instance** *instance-tag*] **interface** [*interface-type slot/port*] [**vrf** *vrf-name*]
14. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	<b>vrf</b> <i>vrf-name</i>  <b>Example:</b> switch(config)# vrf RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF.
Step 3	<b>exit</b>  <b>Example:</b> switch(config-vrf)# exit switch(config)#	Exits VRF configuration mode.
Step 4	<b>router rip</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# router rip Enterprise switch(config-router)#	Creates a new RIP instance with the configured instance tag.
Step 5	<b>vrf context</b> <i>vrf-name</i>  <b>Example:</b> switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 6	<b>address-family ipv4 unicast</b>  <b>Example:</b> switch(config-router-vrf)# address-family ipv4 unicast switch(config-router-vrf-af)#	(Optional) Configures the VRF address family for this RIP instance.

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

	Command	Purpose
Step 7	<pre>redistribute {bgp as   direct   {eigrp   ospf   ospfv3   rip} instance-tag   static} route-map map-name</pre> <p><b>Example:</b>  switch(config-router-vrf-af)#  redistribute eigrp 201 route-map RIPmap</p>	(Optional) Redistributes routes from other protocols into RIP. See the “Configuring Route Maps” section on page 13-12 for more information about route maps.
Step 8	<pre>interface ethernet slot/port</pre> <p><b>Example:</b>  switch(config-router-vrf-af)# interface  ethernet 1/2  switch(config-if)#</p>	Enters interface configuration mode.
Step 9	<pre>no switchport</pre> <p><b>Example:</b>  switch(config-if)# no switchport</p>	Configures the interface as a Layer 3 routed interface.
Step 10	<pre>vrf member vrf-name</pre> <p><b>Example:</b>  switch(config-if)# vrf member  RemoteOfficeVRF</p>	Adds this interface to a VRF.
Step 11	<pre>ip address ip-prefix/length</pre> <p><b>Example:</b>  switch(config-if)# ip address  192.0.2.1/16</p>	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 12	<pre>ip router rip instance-tag</pre> <p><b>Example:</b>  switch(config-if)# ip router rip  Enterprise</p>	Associates this interface with a RIP instance.
Step 13	<pre>show ip rip [instance instance-tag] interface [interface-type slot/port] [vrf vrf-name]</pre> <p><b>Example:</b>  switch(config-if)# show ip rip  Enterprise ethernet 1/2</p>	(Optional) Displays RIP information for an interface in a VRF.
Step 14	<pre>copy running-config startup-config</pre> <p><b>Example:</b>  switch(config-if)# copy running-config  startup-config</p>	(Optional) Saves this configuration change.

**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

This example shows how to create a VRF and add an interface to the VRF:

```
switch# configure terminal
switch(config)# vrf context RemoteOfficeVRF
switch(config-vrf)# exit
switch(config)# router rip Enterprise
switch(config-router)# vrf RemoteOfficeVRF
switch(config-router-vrf)# address-family ipv4 unicast
switch(config-router-vrf-af)# redistribute eigrp 201 route-map RIPmap
switch(config-router-vrf-af)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router rip Enterprise
switch(config-if)# copy running-config startup-config
```

## Tuning RIP

You can tune RIP to match your network requirements. RIP uses several timers that determine the frequency of routing updates, the length of time before a route becomes invalid, and other parameters. You can adjust these timers to tune routing protocol performance to better suit your internetwork needs.



### Note

You must configure the same values for the RIP timers on all RIP-enabled routers in your network.

You can use the following optional commands in address-family configuration mode to tune RIP:

Command	Purpose
<p><b>timers basic</b> <i>update timeout holddown garbage-collection</i></p> <p><b>Example:</b></p> <pre>switch(config-router-af)# timers basic 40 120 120 100</pre>	<p>Sets the RIP timers in seconds. The parameters are as follows:</p> <ul style="list-style-type: none"> <li>• <b>update</b>—The range is from 5 to any positive integer. The default is 30.</li> <li>• <b>timeout</b>—The time that Cisco NX-OS waits before declaring a route as invalid. If Cisco NX-OS does not receive route update information for this route before the timeout interval ends, Cisco NX-OS declares the route as invalid. The range is from 1 to any positive integer. The default is 180.</li> <li>• <b>holddown</b>—The time during which Cisco NX-OS ignores better route information for an invalid route. The range is from 0 to any positive integer. The default is 180.</li> <li>• <b>garbage-collection</b>—The time from when Cisco NX-OS marks a route as invalid until Cisco NX-OS removes the route from the routing table. The range is from 1 to any positive integer. The default is 120.</li> </ul>

You can use the following optional commands in interface configuration mode to tune RIP:



**Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).**

Command	Purpose
<b>ip rip metric-offset</b> <i>value</i>  <b>Example:</b> switch(config-if)# ip rip metric-offset 10	Adds a value to the metric for every router received on this interface. The range is from 1 to 15. The default is 1.
<b>ip rip route-filter</b> { <b>prefix-list</b> <i>list-name</i>   <b>route-map</b> <i>map-name</i> } [ <b>in</b>   <b>out</b> ]  <b>Example:</b> switch(config-if)# ip rip route-filter route-map InputMap in	Specifies a route map to filter incoming or outgoing RIP updates.

## Verifying the RIP Configuration

To display the RIP configuration information, perform one of the following tasks:

Command	Purpose
<b>show ip rip instance</b> [ <i>instance-tag</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the status for an instance of RIP.
<b>show ip rip</b> [ <b>instance</b> <i>instance-tag</i> ] <b>interface</b> <i>slot/port detail</i> [ <b>vrf</b> <i>vrf-name</i> ]	Displays the RIP status for an interface.
<b>show ip rip</b> [ <b>instance</b> <i>instance-tag</i> ] <b>neighbor</b> [ <i>interface-type number</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the RIP neighbor table.
<b>show ip} rip</b> [ <b>instance</b> <i>instance-tag</i> ] <b>route</b> [ <i>ip-prefix/length</i> [ <b>longer-prefixes</b>   <b>shorter--prefixes</b> ]] [ <b>summary</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the RIP route table.
<b>show running-configuration rip</b>	Displays the current running RIP configuration.

## Displaying RIP Statistics

To display the RIP statistics, use the following commands:

Command	Purpose
<b>show ip rip</b> [ <b>instance</b> <i>instance-tag</i> ] <b>policy statistics redistribute</b> { <b>bgp as</b>   <b>direct</b>   { <b>eigrp</b>   <b>ospf</b>   <b>ospfv3</b>   <b>rip</b> } <i>instance-tag</i>   <b>static</b> } [ <b>vrf</b> <i>vrf-name</i> ]	Displays the RIP policy status.
<b>show ip rip</b> [ <b>instance</b> <i>instance-tag</i> ] <b>statistics</b> <i>interface-type number</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the RIP statistics.

Use the **clear ip rip policy** command to clear policy statistics.

Use the **clear ip rip statistics** command to clear RIP statistics.

*Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).*

## Configuration Examples for RIP

This example creates the Enterprise RIP instance in a VRF and adds Ethernet interface 1/2 to this RIP instance. The example also configures authentication for Ethernet interface 1/2 and redistributes EIGRP into this RIP domain.

```
vrf context NewVRF
!
feature rip
router rip Enterprise
vrf NewVRF
  address-family ip unicast
    redistribute eigrp 201 route-map RIPmap
    max-paths 10
!
interface ethernet 1/2
no switchport
vrf NewVRF
ip address 192.0.2.1/16
ip router rip Enterprise
ip rip authentication mode md5
ip rip authentication keychain RIPKey
```

## Related Topics

See [Chapter 13, “Configuring Route Policy Manager”](#) for more information on route maps.

## Additional References

For additional information related to implementing RIP, see the following sections:

- [Related Documents, page 9-19](#)
- [Standards, page 9-19](#)

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***

## Related Documents

Related Topic	Document Title
RIP CLI commands	<i>Cisco Nexus 3000 Series Command Reference,</i>

## Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

## Feature History for RIP

Table 9-2 lists the release history for this feature.

**Table 9-2**      ***Feature History for RIP***

Feature Name	Releases	Feature Information
RIP	5.0(3)U1(1)	This feature was introduced.

***Send document comments to [nexus3k-docfeedback@cisco.com](mailto:nexus3k-docfeedback@cisco.com).***