

Send comments to nexus5k-docfeedback@cisco.com



Show Commands

This chapter describes the Cisco NX-OS TrustSec **show** commands.

Send comments to nexus5k-docfeedback@cisco.com

show cts

To display the global Cisco TrustSec configuration, use the **show cts** command.

show cts

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec global configuration:

```
switch# show cts
CTS Global Configuration
=====
CTS support           : enabled
CTS device identity  : not configured
SGT                   : 0
CTS caching support  : disabled

Number of CTS interfaces in
  DOT1X mode : 0
  Manual mode : 1

switch#
```

| Related Commands | Command | Description |
|------------------|--------------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

Send comments to nexus5k-docfeedback@cisco.com

show cts credentials

To display the Cisco TrustSec device credentials configuration, use the **show cts credentials** command.

```
show cts credentials
```

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec credentials configuration:

```
switch# show cts credentials
```

| Related Commands | Command | Description |
|------------------|-------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

Send comments to nexus5k-docfeedback@cisco.com

show cts environment-data

To display the global Cisco TrustSec environment data, use the **show cts environment-data** command.

show cts environment-data

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines The Cisco NX-OS device downloads the Cisco TrustSec environment data from the ACS after you have configured the Cisco TrustSec credentials for the device and configured authentication, authorization, and accounting (AAA).

This command does not require a license.

Examples This example shows how to display the Cisco TrustSec environment data:

```
switch# show cts environment-data
CTS Environment Data
=====
Current State       : CTS_ENV_DNLD_ST_INIT_STATE
Last Status        : CTS_ENV_INCOMPLETE
Local Device SGT    : 0x0000
Transport Type     : CTS_ENV_TRANSPORT_DIRECT
Data loaded from cache : FALSE
Env Data Lifetime  :
Last Update Time   : Never
Server List        :
    AID: IP: Port:

switch#
```

| Related Commands | Command | Description |
|------------------|--------------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show cts interface

To display the Cisco TrustSec information for interfaces, use the **show cts interface** command.

```
show cts interface {all | ethernet slot/port | vethernet veth-num}
```

| Syntax Description | all | Displays Cisco TrustSec information for all interfaces. |
|--------------------|----------------------------------|--|
| | ethernet <i>slot/port</i> | Displays Cisco TrustSec information for the specific Ethernet interface. The slot number is from 1 to 255 and the port number is from 1 to 48. |
| | vethernet <i>veth-num</i> | Displays Cisco TrustSec information for the specific virtual Ethernet (vEthe) interface. The virtual Ethernet interface number is from 1 to 1048575. |

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines You must enable the Cisco Virtual Machine on the switch by using the **feature-set virtualization** command to see the **vethernet** keyword.

This command does not require a license.

Examples This example shows how to display the Cisco TrustSec configuration for a specific interface:

```
switch# show cts interface ethernet 1/5
CTS Information for Interface Ethernet1/5:
  CTS is enabled, mode:    CTS_MODE_MANUAL
  IFC state:              Unknown
  Authentication Status:  CTS_AUTHC_INIT
  Peer Identity:
  Peer is:                 Unknown in manual mode
  802.1X role:            CTS_ROLE_UNKNOWN
  Last Re-Authentication:
  Authorization Status:   CTS_AUTHZ_INIT
  PEER SGT:                3
  Peer SGT assignment:    Not Trusted
  SAP Status:              CTS_SAP_INIT
  Configured pairwise ciphers:
  Replay protection:
  Replay protection mode:
  Selected cipher:
  Current receive SPI:
  Current transmit SPI:
```

Send comments to nexus5k-docfeedback@cisco.com

```
Propagate SGT: Enabled
```

```
switch#
```

This example shows how to display the Cisco TrustSec configuration for all interfaces:

```
switch# show cts interface all
```

Related Commands

| Command | Description |
|-----------------------------------|---|
| feature cts | Enables the Cisco TrustSec feature. |
| feature-set virtualization | Enables the Cisco Virtual Machine features on the switch. |

Send comments to nexus5k-docfeedback@cisco.com

show cts pacs

To display the Cisco TrustSec protect access credentials (PACs) provisioned by EAP-FAST, use the **show cts pacs** command.

```
show cts pacs
```

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Release | Modification |
|-------------|------------------------------|
| 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec global configuration:

```
switch# show cts pacs
```

| Command | Description |
|--------------------|-------------------------------------|
| feature cts | Enables the Cisco TrustSec feature. |

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show cts role-based access-list

To display the global Cisco TrustSec security group access control list (SGACL) configuration, use the **show cts role-based access-list** command.

```
show cts role-based access-list [list-name]
```

| | |
|---------------------------|---|
| Syntax Description | <i>list-name</i> (Optional) SGACL name. |
|---------------------------|---|

| | |
|------------------------|------|
| Command Default | None |
|------------------------|------|

| | |
|----------------------|------------------|
| Command Modes | Any command mode |
|----------------------|------------------|

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

| | |
|-------------------------|--|
| Usage Guidelines | This command does not require a license. |
|-------------------------|--|

| | |
|-----------------|---|
| Examples | This example shows how to display the Cisco TrustSec SGACL configuration: switch# show cts role-based access-list |
|-----------------|---|

| Related Commands | Command | Description |
|-------------------------|--------------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show cts role-based counters

To display the configuration status of role-based access control list (RBACL) statistics and list the statistics for all RBACL policies, use the **show cts role-based counters** command.

show cts role-based counters

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines To use this command, you must enable the Cisco TrustSec feature using the **feature cts** command. You must also enable Cisco TrustSec counters using the **cts role-based counters enable** command. This command does not require a license.

Examples This example shows how to display the configuration status of RBACL statistics:

```
switch# show cts role-based counters

RBACL policy counters enabled
Counters last cleared: Never
rbacl:ACS_1101_15
    permit icmp log                [0]
    permit tcp log                 [0]
    deny udp log                   [0]

switch#
```

| Related Commands | Command | Description |
|------------------|---------------------------------------|--|
| | feature cts | Enables the Cisco TrustSec feature on the switch. |
| | clear cts role-based counters | Clears the RBACL statistics so that all counters are reset to 0. |
| | cts role-based counters enable | Enables the RBACL statistics. |

Send comments to nexus5k-docfeedback@cisco.com

show cts role-based enable

To display the Cisco TrustSec security group access control list (SGACL) enable status for VLANs, use the **show cts role-based enable** command.

show cts role-based enable

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec SGACL enforcement status:

```
switch# show cts role-based enable
vlan:102
switch#
```

| Related Commands | Command | Description |
|------------------|-----------------------------------|--|
| | feature cts | Enables the Cisco TrustSec feature. |
| | cts role-based enforcement | Enables role-based access control list (RBACL) enforcement on VLANs. |

Send comments to nexus5k-docfeedback@cisco.com

show cts role-based policy

To display the global Cisco TrustSec security group access control list (SGACL) policies, use the **show cts role-based policy** command.

show cts role-based policy

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec SGACL policies:

```
switch# show cts role-based policy
```

| Related Commands | Command | Description |
|-------------------------|--------------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

Send comments to nexus5k-docfeedback@cisco.com

show cts role-based sgt-map

To display the global Cisco TrustSec Security Group Tag (SGT) mapping configuration, use the **show cts role-based sgt-map** command.

show cts role-based sgt-map

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec SGT mapping configuration:

```
switch# show cts role-based sgt-map
```

| Related Commands | Command | Description |
|-------------------------|--------------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show cts sxp

To display the Cisco TrustSec Security Group Tag (SGT) Exchange Protocol (SXP) configuration, use the **show cts sxp** command.

show cts sxp

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec SXP configuration:

```
switch# show cts sxp
CTS SXP Configuration:
SXP enabled
SXP retry timeout:60
SXP reconcile timeout:120
switch#
```

| Related Commands | Command | Description |
|------------------|-------------|-------------------------------------|
| | feature cts | Enables the Cisco TrustSec feature. |

Send comments to nexus5k-docfeedback@cisco.com

show cts sxp connection

To display the Cisco TrustSec Security Group Tag (SGT) Exchange Protocol (SXP) connections information, use the **show cts sxp connection** command.

show cts sxp connection

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec Security Group Tag (SGT) Exchange Protocol (SXP) connections information:

```
switch# show cts sxp connection
PEER_IP_ADDR    VRF          PEER_SXP_MODE  SELF_SXP_MODE  CONNECTION STATE
192.0.2.1       default      listener        speaker        initializing
switch#
```

| Related Commands | Command | Description |
|------------------|--------------------------------|-------------------------------------|
| | cts sxp connection peer | Configures a SXP peer connection. |
| | feature cts | Enables the Cisco TrustSec feature. |

Send comments to nexus5k-docfeedback@cisco.com

show running-config cts

To display the Cisco TrustSec configuration in the running configuration, use the **show running-config cts** command.

show running-config cts

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec configuration in the running configuration:

```
switch# show running-config cts

!Command: show running-config cts
!Time: Thu Jan  1 05:33:03 2009

version 6.0(0)N1(1)
feature cts
cts role-based counters enable
cts sxp enable
cts sxp connection peer 192.0.2.1 password none mode listener

interface Ethernet1/5
  cts manual
  policy static sgt 0x3

switch#
```

| Related Commands | Command | Description |
|------------------|---|---|
| | copy running-config startup-config | Copies the running configuration information to the startup configuration file. |
| | feature cts | Enables the Cisco TrustSec feature. |

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show running-config dot1x

To display 802.1X configuration information in the running configuration, use the **show running-config dot1x** command.

```
show running-config dotx1 [all]
```

| | |
|---------------------------|--|
| Syntax Description | all (Optional) Displays configured and default information. |
|---------------------------|--|

| | |
|------------------------|------|
| Command Default | None |
|------------------------|------|

| | |
|----------------------|------------------|
| Command Modes | Any command mode |
|----------------------|------------------|

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

| | |
|-------------------------|--|
| Usage Guidelines | You must enable the 802.1X feature by using the feature dot1x command before using this command. This command does not require a license. |
|-------------------------|--|

| | |
|-----------------|---|
| Examples | This example shows how to display the configured 802.1X information in the running configuration: switch# show running-config dot1x |
|-----------------|---|

| Related Commands | Command | Description |
|-------------------------|---|--|
| | copy running-config startup-config | Copies the running system configuration information to the startup configuration file. |
| | feature cts | Enables the Cisco TrustSec feature on the switch. |
| | feature dot1x | Enables the 802.1X feature on the switch. |

Send comments to nexus5k-docfeedback@cisco.com

show startup-config cts

To display the Cisco TrustSec configuration information in the startup configuration, use the **show startup-config cts** command.

```
show startup-config cts
```

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines This command does not require a license.

Examples This example shows how to display the Cisco TrustSec information in the startup configuration:

```
switch# show startup-config cts
```

| Related Commands | Command | Description |
|------------------|---|---|
| | copy running-config startup-config | Copies the running configuration information to the startup configuration file. |

Send comments to nexus5k-docfeedback@cisco.com

show startup-config dot1x

To display 802.1X configuration information in the startup configuration, use the **show startup-config dot1x** command.

```
show startup-config dot1x
```

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

Command History

| Release | Modification |
|-------------|------------------------------|
| 5.1(3)N1(1) | This command was introduced. |

Usage Guidelines

You must enable the 802.1X feature by using the **feature dot1x** command before using this command. This command does not require a license.

Examples

This example shows how to display the 802.1X information in the startup configuration:

```
switch# show startup-config dot1x
```

Related Commands

| Command | Description |
|---|---|
| copy running-config startup-config | Copies the running configuration information to the startup configuration file. |