

Show Commands

This chapter describes the Cisco NX-OS object tracking **show** commands.

Send comments to nexus5k-docfeedback@cisco.com

show track

To show information about object tracking, use the show track command.

show track [object-id] [interface | ip route] [brief]

Syntax Description

object-id	(Optional) Tracking ID. The range can be from 1 to 500.
interface	(Optional) Displays information about tracked interfaces.
ip route	(Optional) Displays information about tracked IP routes.
brief	(Optional) Displays brief information about tracked objects.

Command Default

Display information for all tracked objects.

Command Modes

Any command mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Examples

This example shows how to display information about tracked interfaces:

switch# show track interface

This example shows how to display information about tracked IP routes:

switch# show track ip route

This example shows how to display brief information about tracked objects:

switch# show track brief

Related Commands

Command	Description
track interface	Tracks the state of an interface.
track ip route	Tracks the state of an IP route.