



Send comments to nexus5k-docfeedback@cisco.com

B Commands

This chapter describes the Cisco NX-OS commands that begin with B that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 5000 Series switch.

Send comments to nexus5k-docfeedback@cisco.com

beacon

To turn on the locator beacon LED of a Fabric Extender, use the **beacon** command. To turn off the locator beacon LED, use the **no** form of this command.

beacon

no beacon

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Fabric extender configuration mode

Command History	Release	Modification
	4.0(1a)N2(1)	This command was introduced.
	4.1(3)N1(1)	This command was deprecated, and the locator-led command was introduced.

Usage Guidelines Use the **beacon** command to toggle the locator beacon LED of a Fabric Extender, which allows you to easily identify the machine in a busy data center.

Examples This example shows how to turn on the locator beacon LED for a specific Fabric Extender chassis:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# beacon
```

This example shows how to turn off the locator beacon LED for a specific Fabric Extender chassis:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# no beacon
```

Related Commands	Command	Description
	fex	Creates a Fabric Extender and enters Fabric Extender configuration mode.
	show fex	Displays all configured Fabric Extender chassis connected to the switch.
