



F Commands

This chapter describes the Cisco NX-OS Border Gateway Protocol (BGP) commands that begin with F.

feature bgp

To enable the Border Gateway Protocol (BGP), use the **feature bgp** command. To disable BGP, use the **no** form of this command.

feature bgp

no feature bgp

Syntax Description This command has no arguments or keywords.

Command Default Disabled

Command Modes Global configuration mode

Command History	Release	Modified
	5.2(1)N1(1)	This command was introduced.

Usage Guidelines You must enable the BGP feature before you can configure BGP. This command requires the LAN Enterprise Services license.

Examples This example shows how to enable a BGP configuration:

```
switch# configure terminal
switch(config)# feature bgp
switch(config)#
```

This example shows how to disable the BGP feature:

```
switch# configure terminal
switch(config)# no feature bgp
switch(config)#
```

Related Commands	Command	Description
	router bgp	Creates a BGP instance.
	show bgp	Displays BGP configuration information.
	show feature	Displays the status of features on a switch.