



CHAPTER 4

System Messages Reference: Messages I to O

IKE Messages

IKE-3

Error Message IKE-3-CRYPTO_INIT_ERROR: IKEv2 crypto init error: [chars]

Explanation Crypto initialization error

Recommended Action No action is required.

Error Message IKE-3-ENABLE_ERROR: Unable to store enable flag in configuration (error-id [hex]).

Explanation Service failed to store the enable flag in configuration. As a result, it will exit

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IKE-3-FIPS_MODE_ERROR: Could not set FIPS mode

Explanation The FIPS mode could not be set by IKE

Recommended Action No action is required.

Error Message IKE-3-IKE_PROGRAM_EXIT: [chars]

Explanation IKE process did an abnormal exit

Recommended Action No action is required.

Error Message IKE-3-MAX_HALF_CONN_LIMIT_REACHED: IKEv1 : Exceeded the limit for number of half open Phase 1 connections

Explanation The number of half open connections has exceeded the maximum limit

Recommended Action No action is required.

Error Message IKE-3-PHASE1_NEGOTIATION_FAILED: IKEv1: Phase 1 negotiation failed for peer [chars]

Explanation IKE policy negotiation failed for peer [chars].

Recommended Action No action is required.

Error Message IKE-3-PHASE1_PROPOSAL_MISMATCH: IKEv1: No matching phase 1 proposal found for peer [chars]

Explanation There is a IKE policy mismatch for the peer.

Recommended Action No action is required.

Error Message IKE-3-PHASE2_NEGOTIATION_FAILED: IKEv1: Phase 2 negotiation failed for peer [chars]

Explanation IPsec policy negotiation failed for peer [chars].

Recommended Action No action is required.

Error Message IKE-3-PHASE2_PROPOSAL_MISMATCH: IKEv1: No matching phase 2 proposal found for peer [chars]

Explanation There is a IPsec policy mismatch for the peer.

Recommended Action No action is required.

Error Message IKE-3-UNSUPPORTED_EXCHANGE: IKEv1: Unsupported exchange [dec] received from [chars]

Explanation A unsupported IKE exchange type [digits] was received from [chars]

Recommended Action No action is required.

IKE-4

Error Message IKE-4-INVALID_PAYLOAD_APPEAR: IKEv2 received message (from [chars]) with payload ([chars]) appeared in [chars]([chars])

Explanation Received a payload in an inappropriate exchange

Recommended Action No action is required.

Error Message IKE-4-MESSAGE_ERROR: IKEv2 message (from [chars]) message error: [chars]

Explanation Received a malformed message which doesn't adhere to the protocol'

Recommended Action No action is required.

Error Message IKE-4-PARSING_ERROR: IKEv2 message (from [chars]) parsing error: [chars]

Explanation Received a malformed message which can not be parsed appropriately

Recommended Action No action is required.

Error Message IKE-4-UNKNOWN_PAYLOAD: IKEv2 received message (from [chars]) with un-recognized payload ([chars])

Explanation Received an invalid payload

Recommended Action No action is required.

Error Message IKE-4-UNSUPPORT: [chars] is not supported (message from [chars])

Explanation Received something unsupported

Recommended Action No action is required.

IKE-6

Error Message IKE-6-POLL_START_DONE: IKE is exiting since it is not enabled

Explanation IKE is exiting since it is not enabled in the configuration

Recommended Action No action is required.

Error Message ILC-SPAN-3-ERROR: [chars]

Explanation Ilc_span_mgr encountered an error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

ILC_HELPER Messages

ILC_HELPER-2

Error Message ILC_HELPER-2-NO_LICENSE_REBOOT: Linecard [dec] will reboot now.

Explanation SSE License has expired, hence the linecard will be rebooted.

Recommended Action Install appropriate SSE license to be able to use SSM features normally

ILC_HELPER-3

Error Message ILC_HELPER-3-INVALID_SSI: [chars]

Explanation The ssi boot variable is configured to an invalid image. So, the linecard will be brought online in basic mode instead of advanced SSI mode

Recommended Action Configure a proper image for the ssi boot variable

ILC_HELPER-6

Error Message ILC_HELPER-6-LICENSE_VALID: A valid license for linecard [dec] has been obtained

Explanation A valid license has been obtained for the SSM

Recommended Action No action is required.

Error Message ILC_HELPER-6-UPGRADE_DELAY: The SSI upgrade on slot [dec] is delayed by [dec] secs.

Explanation The SSI upgrade is delayed due to the configured ssm upgrade delay command

Recommended Action No action is required.

IMAGE_DNLD Messages

IMAGE_DNLD-SLOT#-2

Error Message IMAGE_DNLD-SLOT#-2-ADDON_IMG_DNLD_FAILED: Module image download process failed. [chars]

Explanation Addon image download to module failed. This module is not operational until an addon image has been successfully installed.

Recommended Action Verify the location and version of your module image. Use the install module cli command to download a new module image.

Error Message IMAGE_DNLD-SLOT#-2-IMG_DNLD_COMPLETE: Module image download process. [chars]

Explanation Image download completed. Module image is being installed.

Recommended Action No action is required.

Error Message IMAGE_DNLD-SLOT#-2-IMG_DNLD_FAILED: Module image download process. [chars]

Explanation Image download failed. Module may be inoperable.

Recommended Action Use show module cli command to verify the state of this module. Retry image download with install module cli command.

Error Message IMAGE_DNLD-SLOT#-2-IMG_DNLD_FILE_SYSTEM_CHECK_ERROR: File System check failed: [chars]

Explanation File system consistency check failed

Recommended Action File-system repair is needed using fsck

Error Message IMAGE_DNLD-SLOT#-2-IMG_DNLD_STARTED: Module image download process. [chars]

Explanation Image download started. Module image downloads are non-disruptive to module operation.

Recommended Action No action is required.

IMAGE_DNLD-SLOT#-4

Error Message IMAGE_DNLD-SLOT#-4-IMG_DNLD_FILE_SYSTEM_RECREATION: [chars].
Partition was erased and successfully recreated.

Explanation File system checking and recreation if necessary for /images.

Recommended Action No action is required.

IMAGE_DNLD-SLOT#-5

Error Message IMAGE_DNLD-SLOT#-5-ADDON_IMG_DNLD_COMPLETE: Addon module image
download process completed. [chars]

Explanation Addon image download to module has completed. The module should now be installing
this new image.

Recommended Action This message is informational only.

Error Message IMAGE_DNLD-SLOT#-5-ADDON_IMG_DNLD_STARTED: Addon module image
download process started. [chars]

Explanation Addon image download to module has started. This is a disruptive download and this
module will be inoperable until this download process is complete.

Recommended Action This message is informational only.

Error Message IMAGE_DNLD-SLOT#-5-ADDON_IMG_DNLD_SUCCESSFUL: Addon module image
download and install process successful. [chars]

Explanation Addon image download and install to module is successful.

Recommended Action Use the show module cli command to verify the modulesoperationalstatus.'

IMAGE_UPGRADE Messages

IMAGE_UPGRADE-SLOT#-2

Error Message IMAGE_UPGRADE-SLOT#-2-IMAGE_UPGRADE_ERROR: [chars]

Explanation Image Upgrade Error

Recommended Action No action is required.

IMAGE_UPGRADE-SLOT#-4

Error Message IMAGE_UPGRADE-SLOT#-4-IMAGE_UPGRADE_INFO: [chars]

Explanation Image Upgrade Info

Recommended Action No action is required.

IM Messages

IM-3

Error Message IM-3-IM_IF_FEATURE_BIND_FAILURE: Interface feature bind failed [chars]

Explanation Interface feature bind failed, so applications in that feature set may not behave correctly.

Recommended Action No action is required.

Error Message IM-3-IM_LC_OFFLINE_ERROR: LC Offline could not be sent to vdc:[dec]

Explanation LC Offline was not relayed to some vdc, so applications may not behave correctly.

Recommended Action No action is required.

Error Message IM-3-IM_RESP_ERROR: Component [chars] opcode:[chars] in vdc:[dec] returned error:[chars]

Explanation Some component returned an error.

Recommended Action No action is required.

Error Message IM-3-IM_SEQ_ERROR: Error ([chars]) while communicating with component [chars] opcode:[chars] (for:[chars])

Explanation Some component did not respond to a request in stipulated time.

Recommended Action No action is required.

IM-5

Error Message IM-5-IM_DEMUX_ERROR: [chars]

Explanation Demux function returned error

Recommended Action No action is required.

Error Message IM-5-IM_INTERNAL_ERROR: [chars]

Explanation Internal error occurred

Recommended Action No action is required.

Error Message IM-5-IM_INTF_STATE: [chars] [chars] in vdc [dec]

Explanation Management interface state changed.

Recommended Action No action is required.

Error Message IM-5-IM_UNKNOWN_INTERFACE: [chars]

Explanation Interface is not supported or not found

Recommended Action No action is required.

INTERFACE_VLAN Messages

INTERFACE_VLAN-4

Error Message INTERFACE_VLAN-4-SVI_VLAN_DOES_NOT_EXIST: Interface Vlan [dec] does not exist

Explanation Vlan not created before assignment

Recommended Action Interface-vlan

Error Message INTERFACE_VLAN-4-SVI_WARN_SVI_UP_IN_NON_ROUTABLE_VDC: Interface VLAN [dec] is being kept up in non-routable VDC. Reason: management configuration enabled. Please disable all the routing protocols

Explanation Keeping Interface VLAN up in non-routable VDC may cause potential traffic blackhole

Recommended Action No action is required.

INTERFACE_VLAN-5

Error Message INTERFACE_VLAN-5-IF_DOWN_ADMIN_DOWN: Interface [chars] is down (Administratively Down)

Explanation Interface has been configured to be administratively down

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-IF_DOWN_ERROR_DISABLED: Interface [chars] is down. Reason [dec]

Explanation The interface encountered an error while configuring it

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-IF_DOWN_INACTIVE: Interface [chars] is down (Inactive)

Explanation Interface VLAN has been suspended or deleted

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_DISABLED: SVI Disabled

Explanation SVI Service Disabled

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_ENABLED: SVI Enabled

Explanation SVI Service Enabled

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_GET_MAC_FAILED: Failed to acquire MAC address for SVI [hex]

Explanation SVI failed to acquire MAC address

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_INIT: SVI initialization failed with error [hex]

Explanation SVI initialization error

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_IOD_RELEASE_ERROR_RESPONSE: IM failed to release SVI IOD error [hex]

Explanation IM failed to release SVI IOD

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_MTS_SEND_FAILURE: MTS send failure for opcode [dec], error [hex]

Explanation SVI encountered an error in with MTS message

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_MTS_TIME_OUT: MTS send timed out

Explanation SVI did not receive response for mts message

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_RSRVD_VLAN_FAILED: Failed to get list of reserved vlans [hex]

Explanation SVI failed to get the list reserved vlans

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_SDB_UPDATE_FAILED: sdb update failed with ret_val [dec]

Explanation SDB updated failed for SVI

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-SVI_SEC_VLAN_FAILED: Failed to get list of secondary vlans [hex]

Explanation SVI failed to get the list of secondary vlans

Recommended Action No action is required.

Error Message INTERFACE_VLAN-5-UPDOWN: Line Protocol on Interface [chars], changed state to [chars]

Explanation Line protocol status changed for an interface

Recommended Action No action is required.

IOA_LC Messages

IOA_LC-5

Error Message IOA_LC-5-IOA_DISABLED: IOA Disabled

Explanation IOA Service Disabled

Recommended Action No action is required.

Error Message IOA_LC-5-IOA_ENABLED: IOA Enabled

Explanation IOA Service nabled

Recommended Action No action is required.

IPACL Messages

IPACL-0

Error Message IPACL-0-EMERG: [chars]

Explanation Ipacl caused a system failure

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPACL-1

Error Message IPACL-1-ALERT: [chars]

Explanation Ipacl caused failures in other services

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPACL-2

Error Message IPACL-2-CRIT: [chars]

Explanation Ipacl encountered a catastrophic error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPACL-3

Error Message IPACL-3-ERR: [chars]

Explanation Ipacl encountered an error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPACL-4

Error Message IPACL-4-WARN: [chars]

Explanation Ipacl ignored the unexpected condition

Recommended Action Please perform debugipaclall',thenrecreatetheoperationsscenario,tofindoutmoredetails.'

IPACL-5

Error Message IPACL-5-NOTE: [chars]

Explanation Ipacl does not support this operation

Recommended Action Please perform debugipaclall',thenrecreatetheoperationsscenario,tofindoutmoredetails.'

IPACL-6

Error Message IPACL-6-INFO: [chars]

Explanation Ipacl event occurred

Recommended Action No action is required.

IPFC Messages

IPFC-2

Error Message IPFC-2-ALLOC_MEMORY: Memory allocation failed

Explanation The service failed to allocate a block of dynamic memory.

Recommended Action No action is required.

IPFC-3

Error Message IPFC-3-INIT_FAILED: Initialization failed. Component [chars]

Explanation The service failed to start. The failure occurred while initializing the component [chars].

Recommended Action Show processes to check the status of the other processes, debug the specified component.

Error Message IPFC-3-IOCTL_FAILED: IOCTL failed

Explanation An IOCTL to the character device failed.

Recommended Action Show IPFC internal interface VSAN <number

Error Message IPFC-3-PSSERROR: [chars]

Explanation IPFC manager encountered a PSS error.

Recommended Action No action is required.

IPFC-5

Error Message IPFC-5-CONFIG_EVENT: VSAN interface [dec] [chars]

Explanation The specified VSAN Interface has been successfully [chars].

Recommended Action No action is required.

Error Message IPFC-5-STATE_CHANGE: VSAN interface [dec] [chars]

Explanation The specified VSAN Interface is [chars].

Recommended Action No action is required.

IPFC-6

Error Message IPFC-6-STARTING: IP Over Fiber Channel service started

Explanation The service has successfully started.

Recommended Action No action is required.

IPQOSMGR Messages

IPQOSMGR-2

Error Message IPQOSMGR-2-QOSMGR_DCBXP_PFC_CMP_FAIL_MSG: [chars] - qos config [chars] not compatible with the peer

Explanation Port_id [chars] has qos config [chars] which is incompatible with the peer.

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_HA_FAILURE: Failed to do high availability operation: [chars].

Explanation Failed to do high availability operation. [chars] is the reason.

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_INIT_FAILED: Initialization failed for QoS Manager: [chars], reason: [hex].

Explanation Initialization failed for QoS Manager due to [chars], reason: [hex].

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_MTS_FAILURE: Failed to do MTS operation: [chars].

Explanation Failed to do MTS operation. [chars] is the reason.

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_MTS_REGISTRATION_FAILED: MTS options setting to [hex] failed for opCode: [dec].

Explanation MTS options setting to [hex] failed for opCode: [dec].

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_NETWORK_QOS_POLICY_CHANGE: Policy [chars] is now active

Explanation [chars] is the new active network-qos policy

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_POLICER_EXCEEDED: [chars]. Policers have exceeded the maximum number allowed. Please remove policy and flap the error disabled ports

Explanation Policers have exceeded the maximum number

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_PSS_FAILURE: Failed to do PSS operation: [chars], reason: [hex].

Explanation Failed to do PSS operation [chars]. [hex] is the reason.

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_PSS_VER_FAIL: PSS file [chars] has version [dec].[dec].[dec], expected version [dec].[dec].[dec].

Explanation There was a mismatch in the PSS version. [chars] indicates the PSS service, [dec].[dec].[dec] its current version number and [dec].[dec].[dec] the expected version.

Recommended Action No action is required.

IPQOSMGR-3

Error Message IPQOSMGR-3-QOSMGR_CONFIG_ERROR: Configuration error: [chars].

Explanation Configuration error. [chars] is the reason.

Recommended Action No action is required.

Error Message IPQOSMGR-3-QOSMGR_NVDC_PPF_ERROR: PPF verify/commit failed in vdc [dec] error: [hex] for global qos command

Explanation For global qos command, PPF verify/commit failed in vdc [dec] with reason [hex].

Recommended Action No action is required.

Error Message IPQOSMGR-3-QOSMGR_PPF_ERROR: PPF library error: [chars].

Explanation PPF library errors. [chars] is the reason.

Recommended Action No action is required.

IPQOSMGR-4

Error Message IPQOSMGR-4-QOSMGR_LC_ERROR_MSG: Linecard [dec] returned an error: [chars]

Explanation Linecard [dec] returned an error message which is reported as [chars].

Recommended Action No action is required.

Error Message IPQOSMGR-4-QOSMGR_POLICIES_PRESENT_ON_DELETED_VLANS: Some VLANs (id: [chars]) which are getting deleted now are still having qos service-policy attached. These policies will be effective only when the VLANs get created again.

Explanation VLAN(s) [chars] is(are) getting deleted now. This is an informational message to notify that qos service-policies are present when the vlan is deleted. If the service-policies are not needed, please detach them from the vlans

Recommended Action No action is required.

Error Message IPQOSMGR-4-QOSMGR_PPF_WARNING: PPF library warning: [chars].

Explanation PPF library warning. [chars] is the reason.

Recommended Action No action is required.

Error Message IPQOSMGR-4-QOSMGR_WARNING_MSG: [chars] [dec]

Explanation QOSMGR warning messages is reported as [chars] [dec].

Recommended Action No action is required.

IPQOSMGR-5

Error Message IPQOSMGR-5-QOSMGR_LC_STAT_SESSION_ERROR_MSG: Linecard [dec] returned the following error for [chars] session: [chars].

Explanation Linecard [dec] returned an error message for session of type [chars] which is reported as [chars]. This message may be seen during linecard reload if there is an active session going on.

Recommended Action No action is required.

IPQOSMGR-6

Error Message IPQOSMGR-6-QOSMGR_DCBXP_CMP_FAIL_MSG: [chars] - qos config [chars] not compatible with the peer

Explanation Dcbxp warning: Port_id [chars] has qos config [chars] which is incompatible with the peer.

Recommended Action No action is required.

Error Message IPQOSMGR-6-QOSMGR_STATUS: QOSMGR Status: [chars].

Explanation QOSMGR status is reported as [chars].

Recommended Action No action is required.

IPQOSMGR-SLOT#-3

Error Message IPQOSMGR-SLOT#-3-QOSMGR_DPA_MSG: DPA returned error message - [chars]

Explanation An error occurred in the DPA [string] is the error message.

Recommended Action No action is required.

IPSEC Messages

IPSEC-2

Error Message IPSEC-2-IPSEC_INIT: IPsec initialization of [chars] [chars]

Explanation IPsec initialization failed

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPSEC-2-IPSEC_SPD_OVERFLOW_DUE_TO_ACL: SPD Overflow on interface due to IP ACL [chars] bound to crypto map [chars] [dec]

Explanation Modifying IP ACL caused Security Policy Database on the interface to overflow, IP ACL filter not applied to security policy database

Recommended Action Undo IP ACL change

IPSEC-3

Error Message IPSEC-3-14_2_MODULE_PACKETS_DROPPED: [chars]: packets were dropped in the module

Explanation Packets dropped in the 14/2 module. Please collect drop statistics using show ipsec internal crypto-acc interface gigabit <slot/port>

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPSEC-3-IPSEC_FIPS_TEST_FAILED: IPSEC FIPS compliance test failed

Explanation IPSEC FIPS compliance test failed

Recommended Action No action is required.

Error Message IPSEC-3-IPSEC_MSG_SEND_FAILURE: failed to send [chars] to sap [dec]: [chars]

Explanation Failed to send a message

Recommended Action No action is required.

IPSEC-5

Error Message IPSEC-5-IPSEC_CMS_IF_ACL_UPDATED: IP ACL [chars] updated while Crypto map [chars] [dec] bound to interface(s)

Explanation IP ACL updated while it is mapped to a crypto map that is bound to interface(s)

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_DISABLED_LIC_EXPIRED: IPsec Disabled due to License Expiry

Explanation IPsec Disabled due to License Expiry

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_DISABLED: IPsec Disabled

Explanation IPsec Disabled

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_ENABLED: IPsec Enabled

Explanation IPsec Enabled

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_SA_CREATED: [chars]: IPsec SA created: local_ip: [chars], peer_ip: [chars], [chars] SPI: [dec] ([hex])

Explanation IPsec SA created

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_SA_DELETED: [chars]: IPsec SA deleted: local_ip: [chars], peer_ip: [chars], [chars] SPI: [dec] ([hex]), reason: [chars]

Explanation IPsec SA deleted

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_SA_REKEYED: [chars]: IPsec SA rekeyed: local_ip: [chars], peer_ip: [chars], [chars] SPI: [dec] ([hex])

Explanation IPsec SA rekeyed

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_TUNNEL_CREATED: [chars]: IPsec tunnel created: local_ip: [chars], peer_ip: [chars], id: [dec], protocol: [chars], traffic:: local: [chars]/[chars], port: [chars], remote: [chars]/[chars], ports: [chars]

Explanation IPsec tunnel created

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_TUNNEL_DELETED: [chars]: IPsec tunnel deleted: local_ip: [chars], peer_ip: [chars], id: [dec], protocol: [chars], traffic:: local: [chars]/[chars], ports: [chars] remote: [chars]/[chars], ports: [chars]

Explanation IPsec tunnel deleted

Recommended Action No action is required.

Error Message IPSEC-5-IPSEC_TUNNEL_REKEYED: [chars]: IPsec tunnel rekeyed: local_ip: [chars], peer_ip: [chars], id: [dec], protocol: [chars] traffic:: local: [chars]/[chars], ports: [chars] remote: [chars]/[chars], ports: [chars]

Explanation IPsec tunnel rekeyed

Recommended Action No action is required.

IPS_SB_MGR Messages

IPS_SB_MGR-SLOT#-2

Error Message IPS_SB_MGR-SLOT#-2-NODE_CORE_NOT_RESPONDING: [Node [dec], Core [dec]]: Not responding to heartbeats, state=[hex]

Explanation Node is not incrementing heartbeats periodically

Recommended Action Potential node software issue. Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-2-NODE_NOT_RESPONDING: [Node [dec], Core [dec]] : Not responding to heartbeats

Explanation Node manager is not receiving heartbeat responses from the node

Recommended Action Potential node software issue. Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-2-NODE_REIMAGE_PREPARE_FAIL: [Node [dec]]: Disk formatting failed during node install

Explanation There was a problem during the partitioning of disk and creation of file systems during node install.

Recommended Action Potential node software issue. Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-2-PORT_SOFTWARE_FAILURE: Port software failure, module [dec] port [dec]

Explanation The software servicing the data path on the port has failed

Recommended Action No action is required.

IPS_SB_MGR-SLOT#-3

Error Message IPS_SB_MGR-SLOT#-3-COMP_FAILURE: Heartbeat failure in compression engine (error [hex])

Explanation The compression engine did not respond to heartbeats, due to some failure. SAN-OS will restart the compression engine to clear the problem.

Recommended Action No action is required.

Error Message IPS_SB_MGR-SLOT#-3-CRYPTO_FAILURE: Heartbeat failure in encryption engine (error [hex])

Explanation The encryption engine did not respond to heartbeats, due to some failure. SAN-OS will restart the encryption engine to clear the problem.

Recommended Action No action is required.

Error Message IPS_SB_MGR-SLOT#-3-FIPS_SELF_TEST_FAILURE: [chars] Restarting the octeon...

Explanation FIPS self test failed for the algorithm. Restarting the octeon.

Recommended Action No action is required.

IPS_SB_MGR-SLOT#-4

Error Message IPS_SB_MGR-SLOT#-4-NODE_NOT_COMPAT_WITH_ADD_ON: svc-node[dec] image is not compatible with svclc image

Explanation The svc image on the node is not compatible with the add on image running on the linecard.

Recommended Action Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-4-NODE_NOT_COMPAT_WITH_CURRENT: svc-node[dec] image is not compatible with current node image

Explanation The new svc image is not compatible with the svc image currently running on the node

Recommended Action Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-4-NODE_NOT_COMPAT_WITH_SUP: svc-node[dec] image is not compatible with system image

Explanation The svc image on the node is not compatible with the supervisor image.

Recommended Action Please contact your support representative

IPS_SB_MGR-SLOT#-6

Error Message IPS_SB_MGR-SLOT#-6-SBMGR_EVENT: Sbmgr event: [chars]

Explanation This is an event log of sb_mgr relating to a port/node

Recommended Action No action is required.

IPS Messages

IPS-2

Error Message IPS-2-ISCSI_IPS_INIT: IPS initialization of [chars] [chars]

Explanation IPS initialization failed

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPS-3

Error Message IPS-3-FCIP_FTA_ACCEL_CHAIN_ABORTED: Exch Aborted FC oxid [hex] My oxid [hex] State [chars] Event [chars] CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec] (Internal [hex]:[hex])

Explanation FTA Exch being aborted

Recommended Action Informational no action required

Error Message IPS-3-FCIP_FTA_DATA_SENSE: Sense data with ERA [hex] sent to CH FCID: [hex] CHI: [hex] from FCIP CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation Sense data with ERA sent

Recommended Action SYSLOGDOC_CONTACT_TAC

Error Message IPS-3-FCIP_FTA_ERA_35: ERA 0x35 presented to CH FCID: [hex] CHI: [hex] from FCIP CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP got an ERA 35

Recommended Action SYSLOGDOC_CONTACT_TAC

Error Message IPS-3-FCIP_FTA_ERA_38: ERA 0x38 received CH FCID: [hex] CHI: [hex] from FCIP CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec] at tape capacity: [dec] MB

Explanation FCIP got an ERA 38

Recommended Action SYSLOGDOC_CONTACT_TAC

Error Message IPS-3-FCIP_FTA_LOCATE_RBID_MISMATCH: Permanent Error due to Locate RBID Mismatch, CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP-FTA got a Permanent Error

Recommended Action Informational no action required

Error Message IPS-3-FCIP_FTA_PERM_ERR: Permanent Error, ERA [hex] rcvd CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec] sense_byte[2,6]: [[hex], [hex]]

Explanation FCIP-FTA got a Permanent Error

Recommended Action Informational no action required

Error Message IPS-3-FCIP_FTA_RETRY_ERROR: [chars] retries [dec] FC oxid [hex] My oxid [hex] State [chars] Event [chars] CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FTA Command timed out

Recommended Action Informational no action required

Error Message IPS-3-FCIP_LINK_STAT_LOSS_OF_SYNC: [chars]: Loss of Sync ([chars])

Explanation FCIP Link Failed with Loss of Sync.

Recommended Action No action is required.

Error Message IPS-3-IPS_CRYPTOP_FIPS_FAILED: IPS module [dec] has failed FIPS tests. FIPS info - [chars]

Explanation FIPS error occurred in the IPS module.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-IPS_EGRESS_PERR: Parity error on dma-bridge egress. Count: [dec]

Explanation Parity error occurred in dma-bridge egress direction.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-IPS_FIPS_MODE_ERROR: IPS FIPS error: [chars]

Explanation IPS module FIPS mode error

Recommended Action No action is required.

Error Message IPS-3-IPS_FIPS_TEST_FAILED: IPS FIPS compliance test failed

Explanation IPS FIPS compliance test failed

Recommended Action No action is required.

Error Message IPS-3-IPS_INGRESS_PERR: Parity error on dma-bridge ingress. Count: [dec]

Explanation Parity error occurred in dma-bridge ingress direction.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_CLEAR_FAILED: [chars]

Explanation An error occurred while clearing the CFS lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_COMMIT_FAILED: [chars]; [chars]

Explanation An error occurred while committing the cfs config data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_CONFIG_FAILED: [chars]; [chars]

Explanation An error occurred while distributing the CFS config data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_LOCK_FAILED: [chars]

Explanation An error occurred while acquiring the CFS lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_ACTIVATION_FAILED: [chars]; [chars]

Explanation An error occurred while activating merged configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_CLEARED: [chars]

Explanation Merge cleared, reason: [chars]

Recommended Action No action is required.

Error Message IPS-3-ISLB_CFS_MERGE_COMMIT_FAILED: [chars]; [chars]

Explanation An error occurred while committing the cfs merge config data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_CONFIG_FAILED: [chars]; [chars]

Explanation An error occurred while distributing the CFS merge config data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_FAILED: [chars]; [chars]

Explanation An error occurred while merging the iSLB CFS fabrics. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_PRECOMMIT_FAILED: [chars]; [chars]

Explanation An error occurred while precommitting merge data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_MERGE_REQ_REJECTED: [chars]

Explanation Merge requested rejected, reason: [chars]

Recommended Action No action is required.

Error Message IPS-3-ISLB_CFS_MERGING_CONFIG_DB_FAILED: [chars]; [chars]

Explanation An error occurred while merging the config data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_PRECOMMIT_FAILED: [chars]; [chars]

Explanation An error occurred while precommitting data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_PWWN_RESV_CLAIM_FAILED: [chars]

Explanation PWWN reservation claim failed. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_PWWN_RESV_RELEASE_FAILED: [chars]

Explanation PWWN reservation release failed. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_UNLOCK_FAILED: [chars]

Explanation An error occurred while releasing the CFS lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_CFS_VRRP_DIST_FAILED: [chars]

Explanation An error occurred while distributing the VRRP CFS runtime data. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_ZONE_ACTIVATION_FAILED: iSLB zoneset activation returned [hex] for VSAN [dec]

Explanation ISLB zoneset activation failed.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IPS-3-ISLB_ZONE_ACTIVATION_RETRY: iSLB zoneset activation returned [hex] for VSAN [dec]

Explanation ISLB zoneset activation failed. Zone server busy.

Recommended Action Retry the iSLB zonest activation.

Error Message IPS-3-ISLB_ZONE_NO_ACTIVE_ZONESET: iSLB zoneset activation returned [hex] for VSAN [dec]

Explanation ISLB zoneset activation failed. No active zoneset.

Recommended Action Activate a zoneset in the specified VSAN and retry

Error Message IPS-3-RED_PACKET_DROPS: Congestion detected on GigabitEthernet port (buffer pool size: [dec])

Explanation Congestion detected on GigabitEthernet port due to RED threshold limit

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IPS-4

Error Message IPS-4-FCIP_FTA_CFG_MISMATCH: [chars]: Mismatch in FCIP Ficon Tape Acceleration configuration with peer

Explanation The FCIP Ficon Tape Acceleration configuration does not match with peersconfiguration'

Recommended Action Fix the FCIP Ficon Tape Acceleration configuration to be consistent with the peer

Error Message IPS-4-FCIP_FTA_VSAN_UPDATE_WARNING: FCIP FICON tape acceleration VSAN update had an error ([chars]) on interface [chars] causing a flap of the interface

Explanation The FCIP FICON tape acceleration VSAN configuration experienced an error when disabling and enabling the VSAN over the FCIP tunnel. The FCIP tunnel was disabled and re-enabled as a result of this error to ensure data integrity.

Recommended Action No action is required.

Error Message IPS-4-FCIP_LICENSE_BIND_FAILED: Bind failed for [chars] due to [chars] for license failure; configuration accepted but bind failed

Explanation The FCIP configuration was accepted, but the FCIP interface did not bind to a physical interface because the appropriate license was not available. If a license becomes available in the future, this FCIP interface will bind to a physical interface automatically.

Recommended Action Check the license state with "show license usage" and acquire the necessary FCIP license

Error Message IPS-4-FCIP_XRCE_LICENSE_FAILED: XRC Acceleration deactivated due to license failure

Explanation The XRC Acceleration configuration was accepted, but will remain inactive until a valid license is available. When the appropriate license is installed, XRC acceleration will be activated.

Recommended Action Check the license state with "show license usage" and acquire the necessary XRC_ACCL license

Error Message IPS-4-FCIP_XRCE_LICENSE_INSTALLED: XRC Acceleration activated due to valid license

Explanation The XRC Acceleration configuration is activated as a valid license has been installed.

Recommended Action No action is required.

IPS-5

Error Message IPS-5-FCIP_BIND_FAILED: Bind failed for [chars] due to [chars] for [chars]

Explanation FCIP/ISCSI Interface bind to Ethernet port failed

Recommended Action No action is required.

Error Message IPS-5-FCIP_BPORT_KEEPAIVES_NOT_SUPPORTED: Bport Keepalives not supported for FCIP [chars]

Explanation Bport Keepalives not supported in this release

Recommended Action Informational no action required

Error Message IPS-5-FCIP_BPORT_NOT_SUPPORTED: Bport not supported for FCIP [chars]

Explanation Bport not supported in this release

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_ALREADY_OFF: FTA Already Off, [chars] VSAN: [dec]

Explanation FTA Already Off

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_ALREADY_ON: FTA Already ON, [chars] VSAN: [dec]

Explanation FTA Already ON

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_CB_DOWN: FTA [chars] is DOWN

Explanation FTA is DOWN

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_CB_UP: FTA [chars], is UP

Explanation FTA is UP

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_DISBAND_GRP_CMD: Disband Group message processed
PGID: [chars] CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN:
[dec]

Explanation FCIP Disbanded a Group

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_EST_GRP_CMD: Path Group established for PGID: [chars]
CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP established a Path Group

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_NPORT_PATH_RSCN_CLNUP_PASS1: RSCN Cleanup Pass1
[chars] FCID1: [hex] FCID2: [hex] VSAN: [dec]

Explanation Doing RSCN Cleanup, Pass 1

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_NPORT_PATH_RSCN_CLNUP_PASS2: RSCN Cleanup Pass2
[chars] FCID1: [hex] FCID2: [hex] VSAN: [dec]

Explanation Doing RSCN Cleanup, Pass 2

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_RESIGN_GRP_CMD: Resign group processed for PGID:
[chars] CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP Resigned a Group

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_RESP_3490: 3490 device discovered by FCIP CH FCID:
[hex] CHI: [hex] device at CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation Device type discovered is 3490

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_RESP_3590: 3590 device discovered by FCIP CH FCID:
[hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation Device type discovered is 3590

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_RESP_NOT_TAPE: Non-tape device discovered by FCIP CH
FCID: [hex] CHI: [hex] device at CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP discovered a non-tape device

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_TURN_OFF_LAST_VSAN: FTA turned off for the Last VSAN,
[chars] VSAN: [dec]

Explanation FTA turned off for the Last Vsan

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_TURN_OFF_NONLAST_VSAN: FTA turned off for the
Non-Last VSAN, [chars] VSAN: [dec]

Explanation FTA turned off for the Non-Last Vsan

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_TURN_ON: Turn ON FTA, [chars] VSAN: [dec]

Explanation FTA turned ON

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTA_WARNING: FTA Warning :[chars]

Explanation Generic FTA Warning

Recommended Action Informational no action required

Error Message IPS-5-FCIP_FTRA_CFG_MISMATCH: [chars]: Mismatch in FCIP FICON Tape Read Accelerator configuration with peer

Explanation The FCIP FICON Tape Read Accelerator configuration does not match with peersconfiguration'

Recommended Action Fix the FCIP FICON Tape Read Accelerator configuration to be consistent with the peer

Error Message IPS-5-FCIP_IF_CR_DEL: Interface [chars] [chars]

Explanation FCIP Interface was Created or Deleted

Recommended Action No action is required.

Error Message IPS-5-FCIP_MODE1_CHANGED_TO_MODE2: Changing mode1 compression to mode2 for [chars], on a MSM/SSN-16 linecard

Explanation Change mode1 compression to mode2 on a MSM/SSN-16 linecard

Recommended Action Informational no action required

Error Message IPS-5-FCIP_NUM_TCP_CONNS_MISMATCH: [chars]: configured for 2 tcp connections but currently operating with 1 connection

Explanation Number of configured tcp connections dontmatchnumberofconnectionscurrentlyup'

Recommended Action No action is required.

Error Message IPS-5-FCIP_PEER_CAVIUM: Peer FCIP [chars] is a MSM/SSN-16 linecard

Explanation Peer linecard is a MSM/SSN-16

Recommended Action Informational no action required

Error Message IPS-5-FCIP_PEER_NON_CAVIUM: Peer FCIP [chars] is a non MSM/SSN-16 linecard

Explanation Peer linecard is non MSM/SSN-16

Recommended Action Informational no action required

Error Message IPS-5-FCIP_RA_CFG_MISMATCH: [chars]: Mismatch in FCIP Tape Read Acceleration capability with peer

Explanation The FCIP Tape Read Acceleration capability does not match with peersconfiguration'

Recommended Action Fix the FCIP Tape Read Acceleration capability to be consistent with the peer

Error Message IPS-5-FCIP_SF_NOT_SUPPORTED: Special-Frame not supported for FCIP [chars]

Explanation Spl-Frame not supported in this release

Recommended Action Informational no action required

Error Message IPS-5-FCIP_TA_CFG_MISMATCH: [chars]: Mismatch in FCIP Tape Acceleration configuration with peer

Explanation The FCIP Tape Acceleration configuration does not match with peersconfiguration'

Recommended Action Fix the FCIP Tape Acceleration configuration to be consistent with the peer

Error Message IPS-5-FCIP_TA_ITL_MISMATCH: [chars]: Mismatch in FCIP Write/Tape Acceleration software capability with peer

Explanation The FCIP Write/Tape Acceleration software capability does not match with peerssoftwarecapability'

Recommended Action Fix the FCIP software to be consistent with the peer

Error Message IPS-5-FCIP_TSTAMP_CHK_FAILED: [chars]: Timestamp check failed on ingress frames

Explanation Timestamp between local and remote side exceeds the configured tolerance

Recommended Action No action is required.

Error Message IPS-5-FCIP_UNBIND_FAILED: UNBIND failed for [chars] due to [chars] for [chars]

Explanation FCIP/ISCSI Interface UNBIND from Ethernet port failed

Recommended Action No action is required.

Error Message IPS-5-FCIP_WA_CFG_MISMATCH: [chars]: Mismatch in FCIP Write Acceleration configuration with peer

Explanation The FCIP Write Acceleration configuration does not match with peersconfiguration'

Recommended Action Fix the FCIP Write Acceleration configuration to be consistent with the peer

Error Message IPS-5-FCIP_WA_XFER_RDY_ERR: [chars]: FCIP Write Acceleration received XFER-RDY after exhchange cleanup. Host [hex] Target [hex]

Explanation FCIP Write/Tape Acceleration received XFER-RDY after exchange cleanup

Recommended Action No action is required.

Error Message IPS-5-FCIP_XRCE_CFG_MISMATCH: [chars]: Mismatch in FCIP XRC Emulator configuration with peer

Explanation The FCIP XRC Emulator configuration does not match with peersconfiguration'

Recommended Action Fix the FCIP XRC Emulator configuration to be consistent with the peer

Error Message IPS-5-IPS_IPACL_LOG_MSG: [chars]

Explanation Details of the packet dropped due to ACLs

Recommended Action No action is required.

Error Message IPS-5-IPS_MGR_FEATURE_ENABLE: ips:[dec] iscsi:[dec] fcip:[dec] iscsi-intf-vsan:[dec] ips-lc:[dec]

Explanation IPS Manager feature enabled/disabled

Recommended Action No action is required.

Error Message IPS-5-IPS_TCP_PORT_IN_USE: Cannot bringup interface [chars], local port already in use

Explanation FCIP and iSCSI interface are trying to use the same local port, please use different ports

Recommended Action No action is required.

Error Message IPS-5-ISCSI_BAD_DATA_DIGEST_CRC: iSCSI ingress data digest error from initiator [chars] alias [chars] S_ID [hex] to D_ID [hex]

Explanation iSCSI Ingress Data Digest CRC failed

Recommended Action No action is required.

Error Message IPS-5-ISCSI_CONN_DOWN_BATCH: [chars]: [dec] iSCSI sessions failed in last [chars], reason: [chars]

Explanation Number of iSCSI session down during the last time interval

Recommended Action No action is required.

Error Message IPS-5-ISCSI_CONN_DOWN: [chars]: iSCSI session down from initiator [chars] alias [chars] ip [chars] to target [chars], reason: [chars]

Explanation ISCSI session goes down

Recommended Action No action is required.

Error Message IPS-5-ISCSI_CONN_UP: [chars]: iSCSI session up from initiator [chars] alias [chars] ip [chars] to target [chars]

Explanation ISCSI session comes up and reaches Full-Feature phase

Recommended Action No action is required.

Error Message IPS-5-ISCSI_PORT_FAILOVER: [chars]: iSCSI initiator [chars] alias [chars] ip [chars] target [chars]. FC session failed over to port [chars]

Explanation FC session for the iSCSI session failed over to newly active port

Recommended Action No action is required.

Error Message IPS-5-ISCSI_SB_GET_TGT: iSCSI SB get [dec] targets, initiator [chars] alias [chars] ip [chars]

Explanation ISCSI FCNS query response

Recommended Action No action is required.

Error Message IPS-5-ISCSI_SESSION_CREATE_FAILURE: [chars]: iSCSI Session initiator [chars] target [chars] create failed. [chars]

Explanation ISCSI Session Create failed

Recommended Action No action is required.

Error Message IPS-5-ISCSI_SESSION_CREATE_REDIRECT: [chars]: iSCSI Session initiator [chars] target [chars] redirected to [chars]/[chars]

Explanation ISCSI Session Create redirected

Recommended Action No action is required.

Error Message IPS-5-ISCSI_SESSION_REDIRECT_TIMEOUT: iSCSI Session initiator [chars] to [chars] redirected to [chars] timeout

Explanation iSCSI Session Redirect timeout

Recommended Action No action is required.

Error Message IPS-5-ISLB_CFS_SESSION_CLEARED: CFS Session Cleared

Explanation CFS Session Cleared by user

Recommended Action No action is required.

Error Message IPS-5-LRTP_HDR_FCID_MISMATCH: LRTP header s_id([hex]) d_id([hex]) do not match Inner header s_id([hex]) d_id([hex]) Initiator ([chars]) Target([chars])

Explanation The s_id and/or the d_id field in the framesLRTPheaderdoesnotmatchthes_idord_idfieldintheinnerheader'

Recommended Action No action is required.

Error Message IPS-5-PORT_IPCFG_FAILED: Cannot configure IP address for interface [chars]

Explanation Cannot configure IPS port IP address

Recommended Action No action is required.

Error Message IPS-5-SB_MGR_CORE_FAILED: Ethernet Processing core [chars] failed due to [chars]

Explanation Ethernet Processing Core failed

Recommended Action No action is required.

Error Message IPS-5-SFRAME_ENTITY_ID_MISMATCH: [chars]: special frame profile ID mismatch

Explanation Special frame received and destination profile ID does not match local profile ID

Recommended Action No action is required.

Error Message IPS-5-SFRAME_FABRIC_WWN_MISMATCH: [chars]: special frame fabric wwn mismatch

Explanation Special frame received and source/destination fabric wwn does not match local destination/ source fabric wwn

Recommended Action No action is required.

Error Message IPS-5-SFRAME_IF_ADMIN_DOWN: [chars]: special frame received if down

Explanation Special frame received and interface is admin down

Recommended Action No action is required.

Error Message IPS-5-SFRAME_IF_NOT_ENABLED: [chars]: special frame not enabled

Explanation Special frame received and interface special frame configuration is disabled

Recommended Action No action is required.

Error Message IPS-5-SFRAME_INVALID_NONCE: [chars]: special frame response has invalid nonce for FCIP

Explanation Special frame response has a different nonce than was originally sent in the special frame

Recommended Action No action is required.

Error Message IPS-5-SFRAME_NOT_RECV: [chars]: special frame was not received by passive-side FCIP

Explanation Special frame was not received by the passive-side of the FCIP TCP tunnel within given time period

Recommended Action No action is required.

Error Message IPS-5-SFRAME_RESP_MISMATCH: [chars]: special frame response has byte mismatch for FCIP

Explanation Special frame response has a mismatch in one of the bytes from what was sent from the FCIP special frame sender

Recommended Action No action is required.

Error Message IPS-5-SFRAME_RESP_NOT_RECV: [chars]: special frame response was not received by active-side FCIP

Explanation Special frame response was not received by the active-side of the FCIP TCP tunnel within given time period

Recommended Action No action is required.

IPS-6

Error Message IPS-6-FCIP_FTA_READ_ACCEL_STARTED: Read Acceleration started for CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP-FTA Read Acceleration started

Recommended Action Informational no action required

Error Message IPS-6-FCIP_FTA_READ_ACCEL_STOPPED: Read Acceleration stopped for CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec] due to [chars] after [dec] MB reads

Explanation FCIP-FTA Read Acceleration stopped

Recommended Action Informational no action required

Error Message IPS-6-FCIP_FTA_WRITE_ACCEL_STARTED: Write Acceleration started for CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec]

Explanation FCIP-FTA Write Acceleration started

Recommended Action Informational no action required

Error Message IPS-6-FCIP_FTA_WRITE_ACCEL_STOPPED: Write Acceleration stopped for CH FCID: [hex] CHI: [hex] CU FCID [hex] CUI: [hex] DA [hex] VSAN: [dec] due to [chars] after [dec] MB writes

Explanation FCIP-FTA Write Acceleration stopped

Recommended Action Informational no action required

IPS-7

Error Message IPS-7-ISCSI_FCNS_QUERY_REQ: return [hex], wait [dec], VSAN [dec], Init: [chars]

Explanation ISCSI FCNS query

Recommended Action No action is required.

Error Message IPS-7-ISCSI_FCNS_QUERY_RESP: result [hex], [dec] targets, wait [dec], Init: [chars]

Explanation ISCSI FCNS query response

Recommended Action No action is required.

Error Message IPS-7-ISCSI_NEW_FCNS_QUERY_REQ: return [hex], VSANS [chars], Init: [chars]

Explanation ISCSI FCNS query

Recommended Action No action is required.

Error Message IPS-7-ISCSI_NEW_FCNS_QUERY_RESP: result [hex], [dec] entries, [dec] targets, [dec] total targets Init: [chars]

Explanation ISCSI FCNS query response

Recommended Action No action is required.

Error Message IPS-7-ISNS_SVR_ERR_RESPONSE: iSNS server returned following error code on iSNS request for interface [chars] : [dec]

Explanation ISNS server returned an error for register/deregister request. For select error codes iSNS client would retry and re-register all target nodes corresponding to the interface

Recommended Action No action is required.

IPV6 Messages

IPV6-2

Error Message IPV6-2-ALLOC_MEMORY: Memory allocation failed

Explanation The IP Configuration Manager failed to allocate a block of dynamic memory.

Recommended Action No action is required.

IPV6-3

Error Message IPV6-3-FILE_WRITE_FAILED: Writing to file [chars] failed - error: [chars]

Explanation Writing to a file failed probably due to no space.

Recommended Action Ipv6

Error Message IPV6-3-INIT_FAILED: Initialization failed. Component [chars]

Explanation The service failed to start. The failure occurred while initializing the component [chars].

Recommended Action Show processes to check the status of the other processes, debug the specified component.

IPV6-4

Error Message IPV6-4-DAD_FAILED_EVENT: Duplicate address detection failed for [chars] on [chars]

Explanation Duplicate address detection for IP address failed.

Recommended Action Ipv6

IPV6-6

Error Message IPV6-6-CONFIG_EVENT: IP Configuration Msg: [chars]

Explanation Configuration message that needs to be logged.

Recommended Action No action is required.

Error Message IPV6-6-INTERFACE_DELETED: The interface [chars] has been deleted

Explanation The specified interface has been deleted. The service will delete all the configuration on that interface.

Recommended Action No action is required.

Error Message IPV6-6-INTERFACE_EVENT: IP address [chars] [chars] on interface [chars]

Explanation The IP address [chars] has been successfully [chars] on the interface [chars].

Recommended Action No action is required.

Error Message IPV6-6-ROUTE_NOT_ACTIVE: The [chars] is not active

Explanation The specified route is successfully configured but currently is not active.

Recommended Action Check that the route is correct and the outgoing interface is operationally up.

Error Message IPV6-6-STARTING: IP configuration Manager started

Explanation The IP Configuration Manager service has successfully started.

Recommended Action No action is required.

IP Messages

IP-1

Error Message IP-1-DHCP_CLIENT_FAILED: dhcp-client failed to get the ip address

Explanation Dhcp-client failed to get the ip from server, probably due to server lease unavailability or cable disconnectivity .

Recommended Action Ip

IP-2

Error Message IP-2-ALLOC_MEMORY: Memory allocation failed

Explanation The IP Configuration Manager failed to allocate a block of dynamic memory.

Recommended Action No action is required.

IP-3

Error Message IP-3-FILE_WRITE_FAILED: Writing to file [chars] failed - error: [chars]

Explanation Writing to a file failed probably due to no space.

Recommended Action Ip

Error Message IP-3-INIT_FAILED: Initialization failed. Component [chars]

Explanation The service failed to start. The failure occurred while initializing the component [chars].

Recommended Action Show processes to check the status of the other processes, debug the specified component.

IP-4

Error Message IP-4-DAD_FAILED_EVENT: Duplicate address detected for [chars] on [chars]

Explanation Duplicate address detected for IP address.

Recommended Action Ip

IP-6

Error Message IP-6-CONFIG_EVENT: IP Configuration Msg: [chars]

Explanation Configuration message that needs to be logged.

Recommended Action No action is required.

Error Message IP-6-DHCP_CLIENT_SUCCESS: dhcp_client got ip address:[chars],netmask:[chars] for mgmt interface, got from server:[chars]

Explanation Dhcp-client is able to get the ip address from server,

Recommended Action No action is required.

Error Message IP-6-INTERFACE_DELETED: The interface [chars] has been deleted

Explanation The specified interface has been deleted. The service will delete all the configuration on that interface.

Recommended Action No action is required.

Error Message IP-6-INTERFACE_EVENT: IP address [chars] [chars] on interface [chars]

Explanation The IP address [chars] has been successfully [chars] on the interface [chars].

Recommended Action No action is required.

Error Message IP-6-ROUTE_NOT_ACTIVE: The [chars] is not active

Explanation The specified route is successfully configured but currently is not active.

Recommended Action Check that the route is correct and the outgoing interface is operationally up.

Error Message IP-6-STARTING: IP configuration Manager started

Explanation The IP Configuration Manager service has successfully started.

Recommended Action No action is required.

ISAPI Messages

ISAPI-SLOT#-0

Error Message ISAPI-SLOT#-0-INVISTA_EMERG: [chars]

Explanation Isapi-invista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-0-MSM_EMERG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-0-NSP_EMERG: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-0-SSM_EMERG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-0-SSN_EMERG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-1

Error Message ISAPI-SLOT#-1-INVISTA_ALERT: [chars]

Explanation Isapi-invista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-1-MSM_ALERT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-1-NSP_ALERT: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-1-SSM_ALERT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-1-SSN_ALERT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-2

Error Message ISAPI-SLOT#-2-INVISTA_CRIT: [chars]

Explanation Isapi-invista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-2-MSM_CRIT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-2-NSP_CRIT: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-2-SSM_CRIT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-2-SSN_CRIT: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-3

Error Message ISAPI-SLOT#-3-INVISTA_ERROR: [chars]

Explanation Isapi-invista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-3-MSM_ERROR: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-3-NSP_ERROR: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-3-SSM_ERROR: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-3-SSN_ERROR: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-4

Error Message ISAPI-SLOT#-4-INVISTA_WARN: [chars]

Explanation Isapi-ivista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-4-MSM_WARN: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-4-NSP_WARN: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-4-SSM_WARN: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-4-SSN_WARN: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-5

Error Message ISAPI-SLOT#-5-INVISTA_NOTICE: [chars]

Explanation Isapi-ivista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-5-MSM_NOTICE: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-5-NSP_NOTICE: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-5-SSM_NOTICE: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-5-SSN_NOTICE: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-6

Error Message ISAPI-SLOT#-6-INVISTA_INFO: [chars]

Explanation Isapi-invista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-6-MSM_INFO: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-6-NSP_INFO: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-6-SSM_INFO: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-6-SSN_INFO: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISAPI-SLOT#-7

Error Message ISAPI-SLOT#-7-INVISTA_DEBUG: [chars]

Explanation Isapi-ivista software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-7-MSM_DEBUG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-7-NSP_DEBUG: [chars]

Explanation Isapi-nsp software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-7-SSM_DEBUG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

Error Message ISAPI-SLOT#-7-SSN_DEBUG: [chars]

Explanation Isapi software messages

Recommended Action No action is required.

ISNS Messages

ISNS-2

Error Message ISNS-2-ISNS_CFS_OPERATION_FAILED: isns CFS [chars] failed

Explanation ISNS CFS operation failed

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message ISNS-2-ISNS_INIT: isns initialization of [chars] [chars]

Explanation ISNS initialization failed

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

IVR Messages

IVR-2

Error Message IVR-2-AUTOLEARN_ACTION_FAIL: Virtual Pfcid autolearn Failed due to failure happens during constructing virtual dynamic pfcid table

Explanation This can happen if failure happens during building, distributing or committing the virtual dynamic pfcid table

Recommended Action Please 1. check the fabric connection or 2. check current virtual user-configured pfcid entries and internally assigned virtual fcid entries for possible conflict

Error Message IVR-2-AUTOLEARN_FEATURE_NOT_SUPPORT: Virtual Pfcid Autolearn Failed due to some switches:[chars] dontsupportautolearn'

Explanation This can happen if some switches doesntupportthevirtualpfcidautolearnfeature'

Recommended Action Please upgrade the unsupported switches

Error Message IVR-2-CFS_PEER_LOST_WITHIN_SESSION: CFS peer with switch wwn [chars] was lost in the middle of an active CFS session. Abort the CFS session and re-enter the configuration changes

Explanation Due to port flaps, link outages, switch restart etc. a CFS peer switch of IVR was lost. The current configuration changes would not be applied to this peer until the peer merges with this switch. The CFS merge may fail if the configuration at the lost peer conflicts with the changes made

in this session. Also, IVR auto topology could be out of sync. with this peer. It is recommended that the user abort this CFS session using `ivr abort` command and then re-enter the configuration changes.

Recommended Action No action is required.

Error Message `IVR-2-DEVICE_FCID_REWRITE_FAILURE: Failure while programming FCID rewrite entries for pWWN [chars] on incoming VSAN [dec]. Device may not be able to communicate with its peer devices, failure reason code: [hex]`

Explanation Failed to program FCID rewrite entries probably because the hardware ran out of FCID rewrite entries. This can happen if there are too many devices in Inter-VSAN zone or too many local VSANs in VSAN topology

Recommended Action Reduce the number of devices involved in IVR in the active IVR zoneset. Also, reduce the number of redundant transit VSANs, if any

Error Message `IVR-2-DEVICE_STATE_INCOMPATIBLE_WITH_NAT_MODE: State for device with port WWN [chars] could not be restored because it was incompatible with the current NAT mode([dec]). This probably happened because NAT mode was modified without completely deactivating the active IVR zoneset`

Explanation This probably happened because NAT mode was modified without completely deactivating the active IVR zoneset

Recommended Action The switch needs to be rebooted

Error Message `IVR-2-DEVICE_VSAN_REWRITE_FAILURE: Failure while programming VSAN rewrite entries for pWWN [chars] on incoming VSAN [dec]. Device may not be able to communicate with its peer devices`

Explanation Failed to program VSAN rewrite entries probably because the hardware ran out of VSAN rewrite entries. This can happen if there are too many devices in Inter-VSAN zone or too many local VSANs in VSAN topology

Recommended Action Reduce the number of domains involved in IVR by moving the members of active IVR zoneset to fewer switches. Also, reduce the number of redundant transit VSANs, if any

Error Message `IVR-2-INTEROP_MODE_2_OR_3_BF_FAILED: [chars] VSAN [dec] Virtual Domain [chars]`

Explanation Build Fabric (BF) failed in VSAN [dec]. The BF was initiated in order to remove an unused virtual domain [dec] from the `fcdomain` list in that VSAN. The virtual domain still remains in the `fcdomain` list and hence it would not be available in that VSAN for assignment.

Recommended Action Perform a manual build fabric using `fcdomainsinterfaceifyouwouldliketoremovetheunusedvirtualdomain(s)fromthefcdomainlist.'`

Error Message IVR-2-INTEROP_MODE_2_OR_3_RDI_FAILED: VSAN [dec], requested domain [chars], received domain [chars] sWNN [chars]. Return Code [chars]

Explanation Request Domain Identifier (RDI) command to allocate virtual domain [dec] failed in VSAN [dec]. Received another domain [chars] instead. IVR-members connected to third-party switch may not participate in IVR communications. It is likely that the domain requested in the RDI command is already in use.

Recommended Action Reassign the domains so that the domain requested via RDI does not overlap with any existing domain in that VSAN.

Error Message IVR-2-IVR_DISABLE_FAILED: Inter-VSAN Routing disable failed for reason: [chars]

Explanation Inter-VSAN Routing disable failed for reason: [chars]. Cleanup might not have completed

Recommended Action Deactivate ivr zoneset and disable ivr again. If that fails, then the ivr process would terminate itself in 5 minutes

Error Message IVR-2-IVZS_ACTIVATION_FAILED_RETRYING: Inter-VSAN zoneset activation failed in VSAN [dec] : [chars]. retrying after [dec] seconds

Explanation Inter-VSAN zoneset activation failed in VSAN [dec] : [chars]. This could be an intermittent regular zoneset activation error. The activation will be retried in [dec] seconds.

Recommended Action No action is required.

Error Message IVR-2-NO_LICENSE_SHUTDOWN: Inter-VSAN Routing is shutting down.

Explanation License required for continued IVR operation is not available. Hence IVR is shutting down

Recommended Action Install appropriate license for IVR services and then enable IVR again.

Error Message IVR-2-NO_LICENSE_WARNING: Inter-VSAN Routing would shutdown in [dec] seconds.

Explanation License required for continued IVR operation is not available. Unless the required license is installed IVR would shutdown in [dec] seconds. IVR configurations would be lost.

Recommended Action Install appropriate license for IVR services to continue to operate uninterrupted within [dec] seconds

Error Message IVR-2-PERSISTENT_VIRTUAL_FCID_CONFLICT_WITH_AUTOLEARN: Conflicting happens between user-configured Persistent virtual fcid and dynamic pfcid entries

Explanation This can happen if conflict happens during persistent virtual domain, or virtual fcid entry configuration.

Recommended Action Please assign a non-conflict persistent virtual domain or fcid entry with current dynamic entries

Error Message IVR-2-PERSISTENT_VIRTUAL_FCID_UNAVAILABLE: Device with port WWN [chars] could not be exported to vsan [dec] because the configured persistent virtual domain/fcid could not be assigned

Explanation This can happen if the virtual domain/fcid configured by the user is - a) Already in use (either by IVR or a real switch) b) Not allowed due to interop mode or allowed domain list

Recommended Action Please make sure that the configured virtual domain/fcid is allowed and available for use

Error Message IVR-2-VIRTUAL_DOMAIN_CONFLICT: In VSAN [dec] virtual domain [dec] from native VSAN [dec] conflicts with native VSAN [dec] for the same virtual domain

Explanation Currently advertised virtual domain [dec] in VSAN [dec] is native to VSAN [dec]. This switch has learned of a device that is member of active IVR zone and has the same domain ID, but belongs to a different native VSAN. This device would not be advertised in that VSAN until the domain conflict is resolved.

Recommended Action No action is required.

Error Message IVR-2-VIRTUAL_FCID_UNAVAILABLE: Device with port WWN [chars] could not be exported to vsan [dec] because the internally generated FCID conflicts with fcid assigned to WWN [chars]. Please configure fcid for WWN [chars] too

Explanation This can happen if the virtual domain/fcid internally configured is already in use by another active device

Recommended Action Please assign a different persistent virtual fcid by CLI command

IVR-3

Error Message IVR-3-AAM_MODE_CANNOT_CHANGE: AAM mode cannot be changed. Might cause the fabric NAT mode inconsistency

Explanation Could be caused by ivr NAT is not enable

Recommended Action No action is required.

Error Message IVR-3-AAM_MODE_DEREGISTERED_FAILED: Abstract ACL Manager (AAM) mode deregister failed. Error code is [chars].

Explanation Abstract ACL Manager (AAM) mode deregister failed

Recommended Action No action is required.

Error Message IVR-3-AAM_MODE_REGISTERED_FAILED: Abstract ACL Manager (AAM) register failed. Error code is [chars].

Explanation Abstract ACL Manager (AAM) register failed

Recommended Action No action is required.

Error Message IVR-3-ACL_ERROR: ACL API, [chars], failed with error [chars]

Explanation IVR invoked ACL API and received the error code. [chars] describes the API and [chars] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-ACL_PERMIT_ENTRY_ERROR: ACL permit entry update on interface [chars] failed for reason: [chars]

Explanation ACL could not program permit entries for IVR traffic. [chars] describes the interface named and [chars] describes the system error message from ACL. IVR traffic coming from the interface may be dropped.

Recommended Action If the problem persists, please contact TAC, or your reseller for support.

Error Message IVR-3-ACL_PLOGI_ENTRY_ERROR: PLOGI capture entry update in slot [dec] failed for reason: [chars]

Explanation ACL could not program IVR PLOGI could not be programmed. slot[dec] describes the line card slot number and [chars] describes the system error message. PLOGI and its response may be dropped because ivr process cannot capture those frames.

Recommended Action No action is required.

Error Message IVR-3-AFID_CONFLICT: [chars]

Explanation AFID configuration is different at different ivr-enabled switches in the same VSAN. Change AFID configuration (auto mode) or vsan topology configuration (user mode) to make it consistent

Recommended Action No action is required.

Error Message IVR-3-CFS_INVALID_PAYLOAD_RECEIVED: Inter-VSAN process received invalid payload from CFS

Explanation Inter-VSAN process received invalid payload from CFS.

Recommended Action No action is required.

Error Message IVR-3-CLEAR_FAILED: [chars]

Explanation An error occurred while clearing the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-COMMIT_FAILED: [chars]

Explanation An error occurred while committing configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-COMMIT_PARTIALLY_FAILED: [chars]

Explanation An error occurred while committing configuration. Configuration could not be committed on some switches. The reason for the failure : [chars]. Configuration can be inconsistent in the fabric.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-COMMIT_REJECTED: [chars]

Explanation Commit request received from remote switch is rejected. The reason for the failure: [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-DDAS_LOCK_TIMER_EXPIRED: IVR database lock is released, as device-alias commit/abort notification is not received in the expected time frame.

Explanation When device-alias sends the validation request, IVR database is locked and a timer is started. For any reason, if device-alias commit/abort notification is not received within the expected time frame, the lock timer gets expired and the lock is released. If device-alias commit notification is received after the lock is released, the changes are not applied and this could cause inconsistency between IVR and device-alias.

Recommended Action No action is required.

Error Message IVR-3-DEVICE_NOT_PRESENT_IN_FB_DB_FICON: Device with port WWN [chars] could not be exported to VSANs [chars] because its native switch is not present in the current active fabric binding database of those VSANs.

Explanation This happens if ficon is enabled on VSANs [chars] and native switch of device with port WWN [chars] is not present in the current active fabric binding database of those VSANs. This is a requirement for ficon compliance.

Recommended Action No action is required.

Error Message IVR-3-DEVICE_ON_WRONG_NATIVE_AFID_VSAN: Device with port WWN [chars] (FCID:[chars], native VSAN [dec] native AFID [dec]) may not be exported to other VSANs (for Inter-VSAN zoning) because it has come online in VSAN [dec] AFID [dec]

Explanation Device has come online on a AFID/VSAN different from the configured native AFID/VSAN

Recommended Action No action is required.

Error Message IVR-3-DEVICE_ON_WRONG_NATIVE_VSAN: Device with port WWN [chars] (FCID:[chars], native VSAN [dec]) may not be exported to other VSANs (for Inter-VSAN zoning) because domain [hex] exists in VSAN [dec]

Explanation Device has come online on a VSAN different from the configured native VSAN or the device does not satisfy unique domain criteria.

Recommended Action No action is required.

Error Message IVR-3-DM_ERROR: Domain Manager API, [chars], failed with error [hex]

Explanation IVR invoked DM API and received the error code. [chars] describes the API and 0x[hex] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-DOMAIN_DISALLOWED_IN_INTEROP: Device with port WWN [chars] and FCID [chars] may not be able to participate in Inter-VSAN zone since domain [dec] is disallowed in the interop mode for VSAN [dec]

Explanation VSAN interop modes place restrictions on what domain ranges are allowed. This domain is out of the range allowed for this interop mode. See the Cisco MDS 9000 Family Configuration Guide for details on the domain range limitations.

Recommended Action Change the domain of the switch to which this IVR zone member is connected to so that it is within the allowed domain list for the interop mode. The domain identifier can be statically assigned using fcdomain interface. You can also configure a range of domains allowed in a VSAN using the fcdomains'allowed-domains'interface.'

Error Message IVR-3-DOMAIN_UNAVAILABLE: Device with port WWN [chars] and FCID [chars] may not be able to participate in Inter-VSAN zone since domain [dec] is already assigned in VSAN [dec]

Explanation Device with port WWN [chars] and FCID [dec] may not be able to participate in Inter-VSAN zone since domain [dec] is already assigned in VSAN [dec].

Recommended Action No action is required.

Error Message IVR-3-FC2_ERROR: FC2 API [chars] failed with error [hex] for [chars]

Explanation IVR invoked FC2 API for [chars] socket and received the error code. [chars] describes the API and 0x[hex] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-FCID_NAT_MODE_CANNOT_CHANGE: IVR NAT mode cannot be changed. Might cause the fabric NAT mode inconsistency

Explanation Could be caused by active zoneset, pending activation /deactivation or non-empty device list

Recommended Action No action is required.

Error Message IVR-3-FCID_REWRITE_REQUEST_TO_ACL_FAILED: fcid rewrite [chars] request vsan [dec] did [chars] sid [chars] failed:[chars]([hex]).

Explanation This happens when either after IVR retried the request few times or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-3-INTERNAL_ERROR: Internal error: [chars]

Explanation IVR process encountered a general error, one that does not fall in any of the categories. [chars] describes the error and its context.

Recommended Action No action is required.

Error Message IVR-3-INVALID_ZONE_MEMBER_PROP_INTEROP_MODE_2_3: unsupported member/zone properties in interop mode 2 or 3 [chars]

Explanation Inter-VSAN member properties incompatible with interop mode vsan

Recommended Action No action is required.

Error Message IVR-3-IVR_NAT_OFF_IS_SAB: Fcid-nat must be enabled before IVR zoneset activation for Sabre platform.

Explanation Fcid-nat must be enabled before IVR zoneset activation for Sabre platform.

Recommended Action No action is required.

Error Message IVR-3-IVZ_ACTIVATION_FAILED_VSAN: Inter-VSAN zoneset [chars] activation failed in VSAN [dec]

Explanation Inter-VSAN zoneset activation failed failed in VSAN.

Recommended Action No action is required.

Error Message IVR-3-IVZ_ACTIVATION_FAILED: Inter-VSAN zoneset [chars] activation failed

Explanation Inter-VSAN zoneset activation failed.

Recommended Action No action is required.

Error Message IVR-3-IVZ_DEACTIVATION_FAILED_VSAN: Inter-VSAN zoneset [chars] deactivation failed in VSAN [dec]

Explanation Inter-VSAN zoneset deactivation failed in VSAN.

Recommended Action No action is required.

Error Message IVR-3-IVZ_DEACTIVATION_FAILED: Inter-VSAN zoneset [chars] deactivation failed

Explanation Inter-VSAN zoneset deactivation failed.

Recommended Action No action is required.

Error Message IVR-3-LOCK_FAILED: [chars]

Explanation An error occurred while acquiring the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-MERGE_ACTIVATION_FAILED: [chars]

Explanation An error occurred while activating merged configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-MERGE_FAILED: IVR merge failed and the reason is [chars]

Explanation An error occurred while merging configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-MTS_ERROR: MTS message transmission failed with error [dec]

Explanation IVR process unsuccessfully tried to send a MTS message. MTS error number is specified in [dec].

Recommended Action No action is required.

Error Message IVR-3-NS_ERROR: FCNS API, [chars], failed with error [hex]

Explanation IVR invoked FCNS API and received the error code. [chars] describes the API and 0x[hex] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-PSS_CFG_RESTORE_ERROR: Configuration restoration for [chars] failed with error [hex]

Explanation IVR read the saved configuration and encountered an error while rebuilding the runtime configuration. [chars] describes the configuration which the process tried to restore and 0x[hex] is the system err code.

Recommended Action No action is required.

Error Message IVR-3-PSS_ERROR: PSS operation [chars] returned error: [hex]

Explanation [chars] specifies the context where the failure occurred and 0x[hex] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-PSS_RTDB_RESTORE_ERROR: Runtime database restoration for [chars] failed with error [hex]

Explanation IVR read the saved runtime database and encountered an error while rebuilding the runtime database. [chars] describes the runtime database which the process tried to restore and 0x[hex] is the system error code.

Recommended Action No action is required.

Error Message IVR-3-QOS_IOD_UNDROP_REQUEST_TO_ACL_FAILED: qos iod undrop request vsan [dec] did [chars] failed:[chars].

Explanation This happens when either after IVR retried the request few times or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-3-RIB_ERROR: RIB API, [chars], failed with error [hex]

Explanation IVR invoked RIB API and received the error code. [chars] describes the API and 0x[hex] specifies the error.

Recommended Action No action is required.

Error Message IVR-3-ROUTE_REQUEST_TO_ACL_FAILED: route [chars] request vsan [dec] domain [dec] failed:[chars].

Explanation This happens when either after IVR retried the request few times or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-3-TOPOLOGY_COMPUTATION_FAILED: Inter-VSAN Topology computation has failed due to: [chars]

Explanation Inter-VSAN Topology has failed due to [chars]. Possible reasons are (a) Number of AFID/VSAN combination is more than the maximum supported value of 128, or (b) Number of ivr-enabled switches is more than the maximum supported value of 128

Recommended Action No action is required.

Error Message IVR-3-UNEXPECTED_MTS_MSG: Unexpected MTS message, opcode [dec], is received

Explanation IVR process received unexpected MTS event. MTS opcode is specified in [dec].

Recommended Action No action is required.

Error Message IVR-3-UNLOCK_FAILED: [chars]

Explanation An error occurred while releasing the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-VSAN_SEGMENTED: [chars]

Explanation VSAN is segmented. VSAN is removed from the topology graph and hence no Inter-VSAN traffic can flow through this VSAN.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message IVR-3-ZS_POLICY_IS_DENY_NO_ACTIVE_ZS: Default zone behavior policy is deny on VSAN [dec] and there is no active zoneset

Explanation Default zone behavior is deny and there is no active zoneset. Inter-VSAN zone members may not be able communicate in this VSAN.

Recommended Action No action is required.

Error Message IVR-3-ZS_POLICY_IS_PERMIT_NO_FORCE: Default zone behavior policy is permit on VSAN [dec] and the force option is off

Explanation Default zone behavior is permit and the force option is off. Inter-VSAN zoneset activation on this VSAN has failed.

Recommended Action No action is required.

Error Message IVR-3-ZS_POLICY_IS_PERMIT_ZS_DEACTIVATED: Default zone behavior policy is permit on VSAN [dec] and regular zoneset deactivated

Explanation Default zone behavior is permit and regular zoneset is deactivated. Inter-VSAN zone members may not be able to communicate.

Recommended Action No action is required.

IVR-4

Error Message IVR-4-AUTO_TOPOLOGY_UPDATE_DISCARDED: [chars]

Explanation Received auto topology update is discarded due to conflicts

Recommended Action No action is required.

Error Message IVR-4-FCID_REWRITE_REQUEST_TO_ACL_FAILED_AND_RETRYING: fcid rewrite [chars] request vsan [dec] did [chars] sid [chars] failed:[chars]([hex]). Retrying the request again.

Explanation This happens when either any of the linecards being upgraded or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-4-IVR_REMOVED_PENDING_CFG: IVR was removed while there were still pending IVR configurations. Forceful cleanup was triggered and the pending configurations were not saved.

Explanation IVR was removed from an N7K switch via VDC delete/reload, which triggered a forceful cleanup. The pending IVR configurations were not saved.

Recommended Action No action is required.

Error Message IVR-4-IVR_VDC_FORCEFUL_CLEANUP: IVR was removed with VDC delete/reload/suspend, Forceful cleanup was triggered.

Explanation IVR was removed from an N7K switch via VDC delete/reload, which triggered a forceful cleanup.

Recommended Action No action is required.

Error Message IVR-4-PERSISTENT_VIRTUAL_DOMAIN_MERGE_CONFLICT: [chars]

Explanation Merge failed due to conflict in the persistent virtual domain configuration

Recommended Action No action is required.

Error Message IVR-4-PERSISTENT_VIRTUAL_FCID_MERGE_CONFLICT: [chars]

Explanation Merge failed due to conflict in the persistent virtual fcid configuration

Recommended Action No action is required.

Error Message IVR-4-QOS_IOD_UNDROP_REQUEST_TO_ACL_FAILED_AND_RETRYING: qos iod undrop request vsan [dec] did [chars] failed:[chars]. Retrying the request again.

Explanation This happens when either any of the linecards being upgraded or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-4-ROUTE_REQUEST_TO_ACL_FAILED_AND_RETRYING: route [chars] request vsan [dec] domain [dec] failed:[chars]. Retrying the request again.

Explanation This happens when either any of the linecards being upgraded or ACL experienced error while processing the request.

Recommended Action No action is required.

Error Message IVR-4-UNKNOWN_NATIVE_VSAN: Unknown native VSAN for the virtual domain [dec] in VSAN [dec] local native VSAN for the same virtual domain is [dec]

Explanation Could not determine native VSAN of the currently advertised virtual domain [dec] in VSAN [dec]. This switch has learned of a device that is member of active IVR zone has the same domain ID, and belongs to native VSAN [dec]. This device would not be advertised in that VSAN until the native VSAN information is resolved.

Recommended Action No action is required.

IVR-5

Error Message IVR-5-AAM_MODE_DEREGISTERED: Abstract ACL Manager (AAM) mode has been deregistered

Explanation Abstract ACL Manager (AAM) mode has been deregistered

Recommended Action No action is required.

Error Message IVR-5-AAM_MODE_REGISTERED: Abstract ACL Manager (AAM) mode has been registered

Explanation Abstract ACL Manager (AAM) mode has been registered

Recommended Action No action is required.

Error Message IVR-5-FCID_NAT_MODE_ACTIVATED: FCID network address translation (NAT) mode has been activated

Explanation FCID network address translation (NAT) mode has been activated

Recommended Action No action is required.

Error Message IVR-5-FCID_NAT_MODE_DEACTIVATED: FCID network address translation (NAT) mode has been deactivated

Explanation FCID network address translation (NAT) mode has been deactivated

Recommended Action No action is required.

Error Message IVR-5-IVR_ASSERTION_FAILED: Unexpected assertion failure in File [chars] at Line [dec]

Explanation An assertion failed in IVR code

Recommended Action No action is required.

Error Message IVR-5-IVZS_ACTIVATION_RETRYING: Inter-VSAN zoneset activation did not go through because of [chars], retrying in VSAN [dec] after [dec] seconds

Explanation Inter-VSAN zoneset activation failed because of [chars] in VSAN [dec]. This could be an intermittent regular zoneset activation error. The activation will be retried in [dec] seconds.

Recommended Action No action is required.

Error Message IVR-5-IVZS_WAITING_FOR_LOWEST_SWWN: Waiting for lowest switch WWN Inter-VSAN enabled switch in VSAN [dec]

Explanation Only lowest switch WWN Inter-VSAN enabled switch adds the Inter-VSAN zones to the regular active zoneset in a VSAN. This local switch is not the lowest sWWN switch in VSAN [dec]

Recommended Action No action is required.

Error Message IVR-5-IVZ_ACTIVATED_VSAN: Inter-VSAN zoneset [chars] activated in VSAN [dec]

Explanation Inter-VSAN zoneset activated in VSAN[dec].

Recommended Action No action is required.

Error Message IVR-5-IVZ_ACTIVATED: Inter-VSAN zoneset [chars] activated

Explanation Inter-VSAN zoneset activated[dec].

Recommended Action No action is required.

Error Message IVR-5-IVZ_CLEANUP_DONE_BY_TIMER: Inter-VSAN clean-up is not done after waiting for 5 minutes

Explanation Inter-VSAN related configuration might not be cleaned up before the ivr process is terminated

Recommended Action If the problem persists, you may have to reboot your switch to clean up the old IVR configuration

Error Message IVR-5-IVZ_CLEANUP_DONE: Inter-VSAN clean-up is done

Explanation Inter-VSAN related configuration is cleaned up before exiting.

Recommended Action No action is required.

Error Message IVR-5-IVZ_DEACTIVATED_VSAN: Inter-VSAN zoneset [chars] deactivated in VSAN [dec]

Explanation Inter-VSAN zoneset deactivated in VSAN[dec].

Recommended Action No action is required.

Error Message IVR-5-IVZ_DEACTIVATED: Inter-VSAN zoneset [chars] deactivated

Explanation Inter-VSAN zoneset deactivated[dec].

Recommended Action No action is required.

Error Message IVR-5-IVZ_PARTIALLY_ACTIVATED: Inter-VSAN zoneset [chars] partially activated

Explanation Inter-VSAN zoneset activated[dec].

Recommended Action Check if it is successful in all VSANs by doing show IVR zoneset status.

Error Message IVR-5-IVZ_PARTIALLY_DEACTIVATED: Inter-VSAN zoneset [chars] partially deactivated

Explanation Inter-VSAN zoneset deactivated[dec].

Recommended Action Check if it is successful in all VSANs by doing show IVR zoneset status.

Error Message IVR-5-LICENSE_CHECKIN_FAILED: Failed to checkin [chars] license: Err=[chars]

Explanation Failed to checkin [chars] license

Recommended Action No action is required.

Error Message IVR-5-SERVICE_GROUP_ACTIVATED: Inter-VSAN Service Group has been activated

Explanation Inter-VSAN Service Group has been activated.

Recommended Action No action is required.

Error Message IVR-5-SERVICE_GROUP_DEACTIVATED: Inter-VSAN Service Group has been deactivated

Explanation Inter-VSAN Service Group has been deactivated.

Recommended Action No action is required.

Error Message IVR-5-VSAN_NO_LONGER_SEGMENTED: [chars]

Explanation VSAN is no longer segmented. VSAN is added back to the topology graph and hence Inter-VSAN traffic can now flow through this VSAN.

Recommended Action No action is required.

Error Message IVR-5-VSAN_TOPOLOGY_ACTIVATED: Inter-VSAN Topology has been activated

Explanation Inter-VSAN Topology has been activated.

Recommended Action No action is required.

IVR-6

Error Message IVR-6-DRAV_ASYNC_DOMAIN_RELEASE: [chars]

Explanation DRAV FSM has unconditionally released a domain due to conflict after a fabric merge. The details are in [chars]

Recommended Action No action is required.

Error Message IVR-6-DRAV_CRITICAL_RETRY_EXCEED: [chars]

Explanation DRAV FSM frames are attempted to be resent. The details are in [chars]

Recommended Action No action is required.

Error Message IVR-6-DRAV_DOMAIN_ALLOC: Virtual domain [dec] for Native AFID: [dec] Native VSAN [dec]

Explanation A virtual domain indicated by [dec] has been reserved for a device with native AFID [dec] and native VSAN [dec]

Recommended Action No action is required.

Error Message IVR-6-DRAV_DOMAIN_RELEASE: Virtual domain [dec] for Native AFID: [dec] Native VSAN [dec]

Explanation A virtual domain indicated by [dec] has been released used by devices with native AFID [dec] and native VSAN [dec]

Recommended Action No action is required.

Error Message IVR-6-DRAV_TOPO_UPDATE: [chars]

Explanation DRAV FSM Topology has been updated as indicated by [chars]

Recommended Action No action is required.

Error Message IVR-6-LICENSE_VALID: A valid license for Inter-VSAN Routing has been obtained

Explanation A valid license for Inter-VSAN Routing has been obtained

Recommended Action No action is required.

IVR-7

Error Message IVR-7-CFS_REQ_RCVD: [chars]

Explanation CFS request is received. The WWN of the switch originated this request and the rr-token of the request are provided in the syslog message.

Recommended Action No action is required.

Error Message IVR-7-CFS_RESP_SENT: [chars]

Explanation CFS response is sent. The rr-token of the corresponding request and the status are provided in the syslog message

Recommended Action No action is required.

L2FMC Messages

L2FMC-SLOT#-0

Error Message L2FMC-SLOT#-0-L2FMC_CLI_INIT_FAILED: CLI library initialization failed!

Explanation L2FMC failed to initialize CLI infrastructure's backend library. This is a fatal error.

Recommended Action No action is required.

Error Message L2FMC-SLOT#-0-L2FMC_TIMER_INIT_FAILED: Timer subsystem initialization failed!

Explanation L2FMC failed to initialize timer library. This is a fatal error.

Recommended Action No action is required.

L2FMC-SLOT#-2

Error Message L2FMC-SLOT#-2-L2FMC_MEM_ALLOC: Memory allocation failed. [chars]

Explanation Memory allocation failed. This is a critical failure

Recommended Action No action is required.

Error Message L2FMC-SLOT#-2-L2FMC_VLAN_NOT_FOUND: VLAN [dec] not found in L2FMC database!

Explanation L2FMC failed to find VLAN [dec] in its database. L2 MAC learning & aging on VLAN [dec] may be affected.

Recommended Action No action is required.

L2FMC-SLOT#-5

Error Message L2FMC-SLOT#-5-L2FMC_GLBL_AGE_CONFIG_FAIL: Global age value configuration to [dec] seconds failed!

Explanation L2FMC failed to configure global default age to [dec] seconds.

Recommended Action No action is required.

Error Message L2FMC-SLOT#-5-L2FMC_VLAN_AGE_CONFIG_FAIL: VLAN Age configuration to [dec] seconds failed!

Explanation L2FMC failed to configure age for VLAN [dec] to [dec] seconds.

Recommended Action No action is required.

L2FMC-SLOT#-6

Error Message L2FMC-SLOT#-6-L2FMC_GLBL_AGE_CONFIGURED: Global age value configured to [dec] seconds.

Explanation L2FMC has successfully configured global default age to [dec] seconds.

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_INITIALIZED: Internal state created [chars]

Explanation L2FMC has created its internal state stateless/stateful [chars].

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_VDC_CREATED: VDC [dec] created

Explanation Request to create VDC [dec] in L2FMC was successful.

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_VDC_REMOVED: VDC [dec] Removed

Explanation L2FMC has successfully removed VDC [dec] from its databases.

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_VDC_VLAN_CREATED: VLAN [dec] created

Explanation L2FMC has added VLAN [dec].

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_VDC_VLAN_REMOVED: VLAN [dec] removed from VDC [dec]

Explanation L2FMC has successfully removed VLAN [dec] from VDC [dec].

Recommended Action No action is required.

Error Message L2FMC-SLOT#-6-L2FMC_VLAN_AGE_CONFIGURED: Age configured for VLAN [dec] to [dec] seconds.

Explanation L2FMC has successfully configured age for VLAN [dec] to [dec] seconds.

Recommended Action No action is required.

L2FM Messages

L2FM-0

Error Message L2FM-0-L2FM_CLI_INITIALIZATION_FAILED: CLI library initialization failed!

Explanation Failed to initialize CLI infrastructure's backend library. This is a fatal error.

Recommended Action No action is required.

Error Message L2FM-0-L2FM_VDC_GWMAC_GET_FAILED: Failed to get gwmac for VDC

Explanation Failed to get gwmac for VDC.

Recommended Action No action is required.

Error Message L2FM-0-L2FM_WRITE_TO_PSS_FAILED_IN_PREVIOUS_INCARNATION: PSS Write Failed in pervious incarnation. Stateful restart not possible

Explanation PSS Write Failed in pervious incarnation. Stateful restart not possible

Recommended Action No action is required.

L2FM-1

Error Message L2FM-1-L2FM_ORIB_SENDS_INCORRECT_IFIDX: Incorrect ifidx received from Orib. Please check mac [chars] vlan [dec]

Explanation L2fm has received a mac insert/delete from Orib with incorrect ifidx. Please check otv mac entries

Recommended Action No action is required.

Error Message L2FM-1-L2FM_OWNER_NOT_FOUND: Error : fe owner not found for mac entry [chars] in age notif sent from slot = [dec], fe = [dec]

Explanation L2fm has received an age notification from the linecard but does not have the mac owner in its database

Recommended Action No action is required.

Error Message L2FM-1-L2FM_SDB_NOT_FLUSHED: Error : [dec] mac entries have not flushed from l2fm sdb

Explanation Due to an internal error l2fm has not written mac entries to its sdb

Recommended Action No action is required.

Error Message L2FM-1-L2FM_SMAC_DUP_FOUND: Duplicate static mac found in secondary vlan. P-VLAN:[dec] S-VLAN:[dec] MAC:[chars]

Explanation Duplicate static mac found in secondary vlan. P-VLAN:[dec] S-VLAN:[dec] MAC:[chars]

Recommended Action No action is required.

Error Message L2FM-1-L2FM_WRITE_TO_PSS_FAILED: Failed to write to PSS err [chars]

Explanation Failed to write to PSS err [chars]

Recommended Action No action is required.

L2FM-2

Error Message L2FM-2-L2FM_AGING_TIME_SET_FAILED: Failed to set age time [dec] for vlan [dec]

Explanation Failed to set age time [dec] for vlan [dec].

Recommended Action No action is required.

Error Message L2FM-2-L2FM_GLBL_AGING_TIME_SET_FAILED: Failed to set global age time [dec]

Explanation Failed to set global age time [dec]

Recommended Action No action is required.

Error Message L2FM-2-L2FM_UPDATE_LOST_HINTS: mac [hex]:[hex]:[hex]:[hex]:[hex]:[hex] updated by slot [dec] fe_index [dec], from [hex] to [hex], with [hex] new hints and loosing %08 old_hints. stack trace: [chars]

Explanation An update from MTM looks inconsistent with the previous state

Recommended Action No action is required.

L2FM-4

Error Message L2FM-4-L2FM_MAC_MOVE: Mac [chars] in vlan [dec] has moved from [chars] to [chars]

Explanation Mac [string] in vlan [dec] has moved from [string] to [string]

Recommended Action No action is required.

L2FM-5

Error Message L2FM-5-L2FM_VLAN_MODE_CHANGE_TO_NON_CONV: Vlan [dec] has been internally changed to non conversational mode on SVI CREATE

Explanation Change vlan learning mode to non conversational mode on SVI CREATE

Recommended Action No action is required.

Error Message L2FM-5-L2FM_VLAN_MODE_REVERTED_BACK: Vlan [dec] has been internally changed to user configured learning mode on SVI DELETE. Mac entries installed non-optimally due to SVI up will get removed from all FEs once ages out

Explanation Change vlan learning mode to user configured value on SVI DELETE

Recommended Action No action is required.

L2FM-6

Error Message L2FM-6-L2FM_DYN_MAC_INS_FAILED: Dynamic mac insertion failure!fail_cnt: [dec] Slot:[dec]

Explanation Failed to insert dynamic macs fail_cnt:[dec] for Slot:[Slot]

Recommended Action No action is required.

L2MCAST Messages

L2MCAST-SLOT#-0

Error Message L2MCAST-SLOT#-0-L2MCAST_CLI_INIT_FAILED: CLI library initialization failed!

Explanation L2MCAST failed to initialize CLI infrastructure's backend library. This is a fatal error.

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-0-L2MCAST_TIMER_INIT_FAILED: Timer subsystem initialization failed!

Explanation L2MCAST failed to initialize timer library. This is a fatal error.

Recommended Action No action is required.

L2MCAST-SLOT#-2

Error Message L2MCAST-SLOT#-2-L2MCAST_MAC_FULL_LC: Failed to insert entry in MAC table for FE [dec] swidx [dec] ([hex]) with err ([chars]). To avoid possible multicast traffic loss, disable OMF. Use the configuration CLI: "no ip igmp snooping optimise-multicast-flood"

Explanation Failed to program the MAC table. MAC table line full for this entry

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-2-L2MCAST_VLAN_NOT_FOUND: VLAN [dec] not found in L2MCAST database!

Explanation L2MCAST failed to find VLAN [dec] in its database. L2 MAC learning & aging on VLAN [dec] may be affected.

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-2-L2MCAST: Memory allocation failed. [chars]

Explanation Memory allocation failed. This is a critical failure

Recommended Action No action is required.

L2MCAST-SLOT#-6

Error Message L2MCAST-SLOT#-6-L2MCAST_HW_INSTALL_FAIL: Hw install failed for vlan [dec] ([dec], [chars], [chars]) entry!

Explanation L2MCAST failed to insert bd, g, s entry in hardware. Igmp snooping may not be effective on vlan for that group and source

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-6-L2MCAST_INITIALIZED: Internal state created [chars]

Explanation L2MCAST has created its internal state stateless/stateful [chars].

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-6-L2MCAST_VDC_CREATED: VDC [dec] created

Explanation Request to create VDC [dec] in L2MCAST was successful.

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-6-L2MCAST_VDC_REMOVED: VDC [dec] Removed

Explanation L2MCAST has successfully removed VDC [dec] from its databases.

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-6-L2MCAST_VDC_VLAN_CREATED: VLAN [dec] created

Explanation L2MCAST has added VLAN [dec].

Recommended Action No action is required.

Error Message L2MCAST-SLOT#-6-L2MCAST_VDC_VLAN_REMOVED: VLAN [dec] removed from VDC [dec]

Explanation L2MCAST has successfully removed VLAN [dec] from VDC [dec].

Recommended Action No action is required.

L3VM Messages

L3VM-5

Error Message L3VM-5-FP_TPG_CREATE: Fabricpath topology [dec] created

Explanation FP-Topology created

Recommended Action No action is required.

Error Message L3VM-5-FP_TPG_DELETE: Fabricpath topology [dec] deleted

Explanation FP-Topology deleted

Recommended Action No action is required.

Error Message L3VM-5-FP_TPG_INTF_DOWN: Interface [chars] down in fabricpath topology [dec] [chars]

Explanation Interface in a FP-Topology went down

Recommended Action No action is required.

Error Message L3VM-5-FP_TPG_INTF_UP: Interface [chars] up in fabricpath topology [dec]

Explanation Interface in a FP-Topology is up

Recommended Action No action is required.

LACP Messages

LACP-3

Error Message LACP-3-GENERAL_ERROR: [chars]

Explanation General error

Recommended Action No action is required.

Error Message LACP-3-LACP_MEM_PC_MISCFG: LACP misconfiguration detected on [chars]: ([chars] [dec]-[dec][chars] [dec]-[dec])

Explanation There was an LACP misconfiguration

Recommended Action No action is required.

Error Message LACP-3-LACP_MISCFG: LACP misconfiguration detected on [chars]: ([chars])

Explanation There was an LACP misconfiguration

Recommended Action No action is required.

Error Message LACP-3-LACP_SUSPEND_HALF_DUPLEX_PORT: Port [chars] is in half duplex mode. suspend port

Explanation LACP is not supported in half duplex mode. Suspend port

Recommended Action No action is required.

Error Message LACP-3-LACP_SUSPEND_MINLINK: LACP port [chars] of port-channel [chars] is suspended as min-link requirement not met.

Explanation LACP suspend ports due to min-link

Recommended Action No action is required.

Error Message LACP-3-LACP_UPGRADE_READY_FAILED: Upgrade ready was returned failure.

Explanation Upgrade ready event was returned failure since one of the ports in port channels were found to be in intermediate state.

Recommended Action No action is required.

Error Message LACP-3-PACKET_TRANSMIT_ERR: [chars]: Could not send LACP packet err=[dec]

Explanation There was an error in sending LACP packet

Recommended Action No action is required.

Error Message LACP-3-SYN_COLL_DIS_EN: [chars] [[chars]]: SYNC, COLLECT and DISTRIBUTE flags enabled too early by partner

Explanation Potential interop issue. Partner system seems to have enabled sync as well collecting or distributing flags too early even before actor has selected an aggregator

Recommended Action No action is required.

Error Message LACP-3-SYSTEM_MAC_ERR: [chars]: Could not get system mac[[chars]]

Explanation There was an error in acquiring system mac from VDC Mgr

Recommended Action No action is required.

LACP-5

Error Message LACP-5-LACP_DISABLED: LACP Disabled

Explanation LACP Service Disabled

Recommended Action No action is required.

Error Message LACP-5-LACP_DOES_NOT_MEET_MINLINK_REQ: LACP port-channel [chars] is brought down as min-link requirement not met.

Explanation LACP port-channel down as min-link requirement not met

Recommended Action No action is required.

Error Message LACP-5-LACP_ENABLED: LACP Enabled

Explanation LACP Service Enabled

Recommended Action No action is required.

Error Message LACP-5-LACP_MEETS_MINLINK_REQ: LACP port-channel [chars] meets min-link requirement. Reint port-channel

Explanation LACP port-channel meets min-link requirement

Recommended Action No action is required.

Error Message LACP-5-LACP_REMOTE_NOTIFY_SUCCESS: Remote notify event.

Explanation Remote notify event was returned success.

Recommended Action No action is required.

Error Message LACP-5-LACP_SUSPEND_INDIVIDUAL: LACP port [chars] of port-channel [chars] not receiving any LACP BPDUs suspending (individual) port

Explanation LACP suspend individual ports

Recommended Action No action is required.

Error Message LACP-5-LACP_UPGRADE_READY_SUCCESS: Upgrade ready was returned success.

Explanation Upgrade ready event was returned success since all ports in port channels were found in steady state.

Recommended Action No action is required.

Error Message LACP-5-PORT_PRIORITY_CHANGED: [chars]: LACP port priority changed from [dec] to [dec]

Explanation LACP port priority has been changed

Recommended Action No action is required.

Error Message LACP-5-SYSTEM_PRIORITY_CHANGED: LACP system priority changed from [hex] to [hex]

Explanation LACP system priority has been changed

Recommended Action No action is required.

Error Message LC-FCFWD-3-ERROR: [chars]

Explanation Lc_fcfwd encountered an error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LC-SPAN-3-ERROR: [chars]

Explanation Lc_span_mgr encountered an error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

LC_CFG Messages

LC_CFG-SLOT#-2

Error Message LC_CFG-SLOT#-2-LC2_CPU_ERRORS: [chars], Total IC [dec], DC [dec], Tag [dec], MBit [dec], SBit [dec], I30 [dec]

Explanation LC CPU Cache errors.

Recommended Action No action is required.

Error Message LC_CFG-SLOT#-2-LC_CFG_ABORT: registration aborted with code [dec]

Explanation Process lc_cfg_mgr aborted registration

Recommended Action No action is required.

Error Message LC_CFG-SLOT#-2-LC_CFG_EXITED: exited with code [dec]

Explanation Process lc_cfg_mgr exited

Recommended Action No action is required.

LC_PORT_CHANNEL Messages

LC_PORT_CHANNEL-SLOT#-0

Error Message LC_PORT_CHANNEL-SLOT#-0-HW_FAILURE: fatal error in configureing [chars]: [chars]

Explanation Fatal hardware error in port-channel configuration

Recommended Action Reset the module

Error Message LC_PORT_CHANNEL-SLOT#-0-IDX_FULL: D_IDX table full (current [dec], new [dec], total [dec])

Explanation Programming error in port-channel configuration

Recommended Action Reset the module

LC_PORT_CHANNEL-SLOT#-3

Error Message LC_PORT_CHANNEL-SLOT#-3-LC_PORT_CHANNEL_ERROR: [chars]

Explanation General error

Recommended Action No action is required.

Error Message LC_PORT_CHANNEL-SLOT#-3-LC_PORT_CHANNEL_IDXMAP_FAILURE: could not lookup port index for interface [chars]

Explanation Could not look up port index

Recommended Action No action is required.

LC_PORT_MGR Messages

LC_PORT_MGR-SLOT#-2

Error Message LC_PORT_MGR-SLOT#-2-LC_MTS_ERROR: An MTS error has occurred in ([chars]) with the following conditions: opc=[dec] ssap=[hex] dsap=[hex] syserr=[hex]

Explanation This is a software error in message communication between two applications.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

LC_RDL Messages

LC_RDL-3

Error Message LC_RDL-3-SYSLOG_ALLOC_FAIL: : [chars]

Explanation RDL malloc failed : [chars]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_CONTEXT_ERR: : [chars] [dec]

Explanation RDL context error: [chars] [dec]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_ERR: : [chars]

Explanation RDL syslog errors : [chars]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_EXIT: : [chars]

Explanation RDL exiting on errors : [chars]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_INIT_FAIL: : [chars] [chars]

Explanation RDL Init Failed: [chars] [chars]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_MTS_ERR: : [chars]

Explanation RDL MTS errors : [chars]

Recommended Action No action is required.

Error Message LC_RDL-3-SYSLOG_MTS_REG_FAILED: : [dec] [dec]

Explanation RDL context error: [dec] [dec]

Recommended Action No action is required.

LC_RDL-6

Error Message LC_RDL-6-SYSLOG_DEBUG_1: : [chars] [hex]

Explanation RDL Debug logs: [chars] [dec]

Recommended Action No action is required.

Error Message LC_RDL-6-SYSLOG_DEBUG_2: : [chars] [hex]

Explanation RDL Debug logs: [chars] [dec]

Recommended Action No action is required.

Error Message LC_RDL-6-SYSLOG_INFO: : [chars]

Explanation RDL Debug logs: [chars]

Recommended Action No action is required.

Error Message LC_RDL-6-SYSLOG_RESP_RCVD: : [chars] [dec]

Explanation RDL context error: [chars] [dec]

Recommended Action No action is required.

LDAP Messages

LDAP-2

Error Message LDAP-2-LDAP_PROGRAM_EXIT: LDAP daemon exiting: [chars]

Explanation LDAP daemon is exiting.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

LDAP-3

Error Message LDAP-3-LDAP_ERROR_MESSAGE: [chars]

Explanation LDAP Error Message

Recommended Action No action is required.

LDAP-5

Error Message LDAP-5-LDAP_MONITOR_STATUS: [chars] [chars]

Explanation Notifying Ldap server monitor status change

Recommended Action No action is required.

Error Message LDAP-5-LDAP_SERVER_STATUS: [chars] server [chars] with port [dec] status has changed from [chars] to [chars]. Server was in previous-state for [chars], and total dead time of the server is [chars]

Explanation Notifying Ldap server status change

Recommended Action No action is required.

LDAP-6

Error Message LDAP-6-LDAP_MESSAGE: [chars]

Explanation LDAP Message

Recommended Action No action is required.

LDP Messages

LDP-5

Error Message LDP-5-LDP_DISABLED: LDP Disabled

Explanation MPLS_LDP Service Disabled

Recommended Action No action is required.

Error Message LDP-5-LDP_ENABLED: LDP Enabled

Explanation MPLS_LDP Service nabled

Recommended Action No action is required.

LIBBASE_SVC Messages

LIBBASE_SVC-2

Error Message LIBBASE_SVC-2-IT_NEXUS_MAX_INTERFACE_LIMIT_REACHED: [chars] cannot be bound for site [chars], as the interfaces reached the maximum flow limit

Explanation IT Load Balancing failed

Recommended Action No action is required.

Error Message LIBBASE_SVC-2-LOG_ERR_BASE_SVC_TOM_ABORTED: SME Cluster [chars] Message Id: [hex] aborted

Explanation An SME Cluster Message was aborted by the Cluster process

Recommended Action No action is required.

LIBBASE_SVC-4

Error Message LIBBASE_SVC-4-FCR_VER2_NOT_ENABLED: FCR Version2 is not enabled. May affect flows. Please enable fc-redirect version2

Explanation FCR Version2 not enabled

Recommended Action No action is required.

LIBBASE_SVC-5

Error Message LIBBASE_SVC-5-FLOW_NOT_ALLOWED: Flow [chars] <-

Explanation Flow creation failed

Recommended Action No action is required.

Error Message LIBBASE_SVC-5-IT_NEXUS_FAILURE: [chars]. [chars] bind failure.
Reason: [chars]: [hex]

Explanation IT Nexus bind failed

Recommended Action No action is required.

Error Message LIBBASE_SVC-5-IT_NEXUS_OPTIMUM_INTERFACE_LIMIT_REACHED: Interface [chars] exceeded the optimum flow limit

Explanation Interface Flow Limit

Recommended Action No action is required.

LIBGD Messages

LIBGD-2

Error Message LIBGD-2-GD_ACCESS_FAILED: Guardian Failed to access reg for [chars]

Explanation Guardian Access failed

Recommended Action No action is required.

Error Message LIBGD-2-GD_CATASTROPHIC: Guardian catastrophic failure: [chars]

Explanation Guardian catastrophic error

Recommended Action No action is required.

Error Message LIBGD-2-GD_INTR: Guardian Interrupt occurred: [chars]

Explanation Interrupt occurred on the Guardian

Recommended Action No action is required.

Error Message LIBGD-2-SHUTDOWN: Guardian software process exiting: [chars]

Explanation Guardian shutting down

Recommended Action No action is required.

LIBGD-3

Error Message LIBGD-3-EN_DATA_FAILED: Guardian enable port failed for inst:[dec] port:[dec]

Explanation Guardian Enable port failed for the guardian

Recommended Action No action is required.

LIBGD-5

Error Message LIBGD-5-STARTING: Guardian process starting

Explanation Guardian process is being started

Recommended Action No action is required.

LIBGD-6

Error Message LIBGD-6-DIS_DATA: Guardian disable port done for inst:[dec] port:[dec]

Explanation Disabled port successfully for guardian

Recommended Action No action is required.

Error Message LIBGD-6-EN_PORT: Guardian enable port done for inst:[dec] port:[dec]

Explanation Enabled port for the Guardian

Recommended Action No action is required.

Error Message LIBGD-6-HW_INIT: GuardianHW initialization has been done for inst:[dec] port:[dec]

Explanation Guardian HW initialization has been called[dec]

Recommended Action No action is required.

LICMGR Messages

LICMGR-0

Error Message LICMGR-0-LOG_LIC_GRACE_EXPIRED: Grace period expired for feature [chars].

Explanation Unlicensed feature [chars] has exceeded itsgracetimeperiod.Applicationsusingwillbeshutdownimmediately.'

Recommended Action Please install the license file to continue using the feature.

LICMGR-1

Error Message LICMGR-1-LOG_LIC_LICENSE_EXPIRED: Evaluation license expired for feature [chars].

Explanation The named feature has exceeded itsevaluationtimeperiod.Applicationsusingthelicensewillbeshutdownaftergraceperiod.'

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-1-LOG_LIC_LICENSE_EXPIRY_WARNING_ALERT: Evaluation license for feature [chars] will expire in [dec] days.

Explanation Feature [chars] has very limited time for expiry. Feature will expire in [dec] days and will be shut down.

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-1-LOG_LIC_NO_LIC_ALERT: No license(s) present for feature [chars]. Application(s) running in grace-period and will be shut down in [dec] days.

Explanation Feature [chars] has not been licensed. The feature will work for a grace period of [dec] days after which application(s) using the feature will be shut down.

Recommended Action Please install the license file to continue using the feature.

LICMGR-2

Error Message LICMGR-2-LOG_LICAPP_EXPIRY_WARNING: Application [chars] evaluation license [chars] expiry in [dec] days.

Explanation Application [chars1] will exceed its evaluation time period in [dec] days and will be shut down after a grace period unless a permanent license for feature [chars2] is installed.'

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-2-LOG_LICAPP_NO_LIC: Application [chars] running without [chars] license, shut down in [dec] days.

Explanation Application [chars1] has not been licensed. The application will work for a grace period of [dec] days after which it will be shut down unless a license file for feature [chars2] is installed.

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-2-LOG_LIC_EXIT: License manager exiting: [chars]

Explanation License manager exiting.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LICMGR-2-LOG_LIC_INVALID_SERVER_LINE: License file [chars] contains invalid "SERVER" line. Contact TAC

Explanation Invalid SERVER line in license file.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LICMGR-2-LOG_LIC_NO_LIC: No license(s) present for feature [chars]. Application(s) shut down in [dec] days.

Explanation Feature [chars] has not been licensed. The feature will work for a grace period of [dec] days after which application(s) using the feature will be shut down.

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-2-LOG_LIC_NVRAM_DISABLED: Licensing NVRAM is not available. Grace period will be disabled: [chars]

Explanation The Supervisor NVRAM block may have a hardware problem and may need to be replaced

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LICMGR-2-LOG_LIC_USAGE: Feature [chars] is using [dec] licenses, only [dec] licenses are installed. Please make sure enough licenses are installed for the VEMs

Explanation Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Recommended Action Licensing

Error Message LICMGR-2-LOG_LIC_VENDOR_DOWN: License file contains invalid "SERVER" line. Vendor daemon down

Explanation Vendor daemon is down

Recommended Action Licensing

LICMGR-3

Error Message LICMGR-3-LOG_LIC_CHECKOUT_FAIL_BAD_CLOCK: License checkout failed for feature [chars]([chars]) because system clock has been set back. Please set the clock to the correct value.

Explanation License checkout failed for feature [chars]([chars]) because system clock has been set back. Please set the clock to the correct value.

Recommended Action No action is required.

Error Message LICMGR-3-LOG_LIC_FILE_MISSING: License file(s) missing for feature [chars].

Explanation One or more license files for feature [chars] are missing and must be reinstalled.

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-3-LOG_LIC_INVALID_HOSTID: Invalid license hostid VDH=[chars] for feature [chars].

Explanation Feature [chars2] has a license with an invalid license hostid VDH=[chars1]. This can occur if a supervisor card with licensed features for one switch is installed on another switch.

Recommended Action No action is required.

Error Message LICMGR-3-LOG_LIC_MESSAGE_ERROR: could not handle message: [chars] of type [dec] from addr [dec]:[dec].

Explanation Could not handle a IPC message [chars] of type [dec1] sent by a component running on node [dec2] with sap [dec3].

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LICMGR-3-LOG_LIC_SERVER_DOWN: License Server Down [dec]

Explanation A connection to the license server was lost.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message LICMGR-3-LOG_LIC_SPROM_LIC: Feature [chars] issued [dec] licenses without a valid license file.

Explanation Feature [chars] has been licensed [dec] times without a valid license file. This means one or more license files are missing for feature [chars] and must be reinstalled.

Recommended Action Please install the license file to continue using the feature.

Error Message LICMGR-3-LOG_LIC_TOO_MANY_LIC: Only [dec] licenses are supported for [chars] feature, where as [dec] licenses are installed.

Explanation More licenses are installed than allowed.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

LICMGR-4

Error Message LICMGR-4-LOG_LIC_LICENSE_EXPIRY_WARNING: Evaluation license for feature [chars] will expire in [dec] days.

Explanation Feature [chars] will exceed itsevaluationtimeperiodin[dec]daysandwillbeshutdown.'

Recommended Action Please install the license file to continue using the feature.

LICMGR-6

Error Message LICMGR-6-LOG_CHECKPOINT_CREATED: auto checkpoint [chars] created during license expiry.

Explanation When a license expires, auto checkpoint is created to prevent configuration loss.

Recommended Action Rollback can be done to the created checkpoint when a new license is installed.

Error Message LICMGR-6-LOG_LIC_FEATURE_CLEARED: Cleared [dec] license(s) for feature [chars].

Explanation Uninstalled [dec] license(s) for feature [chars].

Recommended Action Use the showlicenseusage'commandtoverifythislicensefeatureremoval.'

Error Message LICMGR-6-LOG_LIC_FEATURE_INSTALLED: Installed [dec] license(s) for feature [chars].

Explanation Installed [dec] license(s) for feature [chars].

Recommended Action Use the showlicenseusage'commandtoverifythislicensefeatureinstallation.'

Error Message LICMGR-6-LOG_LIC_LICENSE_CLEARED_ALL: Cleared all licenses.

Explanation Cleared all license files.

Recommended Action No action is required.

Error Message LICMGR-6-LOG_LIC_LICENSE_CLEARED: Cleared license file [chars].

Explanation Uninstalled the named license file.

Recommended Action Use the showlicense'commandtoverifythislicenseremoval.'

Error Message LICMGR-6-LOG_LIC_LICENSE_INSTALLED: Installed license file [chars].

Explanation Installed the named license file.

Recommended Action Use the showlicense'commandtoverifythislicenseinstallation.'

LIM Messages

LIM-2

Error Message LIM-2-IF_CRITICAL_FAILURE: (Debug syslog)Critical failure: [chars], [chars]

Explanation There was a critical failure in the component.

Recommended Action Please follow instructions on the syslog.

Error Message LIM-2-IF_DOWN_ERROR_DISABLED: Interface [chars] is down (Error disabled. Reason:[chars])

Explanation The interface encountered an error while configuring it

Recommended Action Collect more information about failed interface using command `showportinternalallinterface[char]`. In most cases, you can recover using a `shutdown` followed a `noshutdown` on the interface or removing and re-inserting the fibre optic cable.

Error Message LIM-2-IF_DOWN_LINK_FAILURE_CRIT: Interface [chars] is down (Link failure)

Explanation The physical link has gone down

Recommended Action Ensure that the cable is connected and the remote end is not shut down

Error Message LIM-2-SEQ_TIMEOUT: Component [chars] timed out on response to opcode [chars] ([chars])

Explanation Some component did not respond to a request in stipulated time.

Recommended Action None

Error Message LIM-2-SYSLOG_LIM_CRITICAL: Critical failure: [chars]

Explanation There was a critical failure in the component.

Recommended Action Please collect system tech-support

LIM-3

Error Message LIM-3-IF_DOWN_CHANNEL_ERR_DISABLED: Interface [chars] is down (Channel error disabled)

Explanation This interface belongs to a PortChannel and the PortChannel is error disabled

Recommended Action Perform `shut` and `noshutdown` on the PortChannel interface that it belongs to

Error Message LIM-3-IF_ERROR_VLANS_REMOVED: VLANs [chars] on Interface [chars] are removed from suspended state.

Explanation The VLANs on an interface are being removed from the suspended state

Recommended Action No action is required.

Error Message LIM-3-IF_ERROR_VLANS_SUSPENDED: VLANs [chars] on Interface [chars] are being suspended. (Reason: [chars])

Explanation The VLANs on an interface are being suspended due to some protocol action

Recommended Action No action is required.

Error Message LIM-3-IF_SFP_ALARM: Interface [chars], [chars]

Explanation There was an alarm on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

Error Message LIM-3-IF_SFP_ERROR: Interface [chars], [chars]

Explanation There was an error on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

Error Message LIM-3-IF_UNSUPPORTED_TRANSCEIVER: Transceiver on interface [chars] is not supported

Explanation The transceiver for the interface specified in the error message is not a Cisco supported module

Recommended Action Replace the module with a compatible transceiver. If the transceiver was purchased from Cisco, please contact Cisco TAC to get the transceiver replaced

Error Message LIM-3-IF_XCVR_ALARM: Interface [chars], [chars]

Explanation There was an alarm on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

Error Message LIM-3-IF_XCVR_ERROR: Interface [chars], [chars]

Explanation There was an error on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

LIM-4

Error Message LIM-4-IF_NON_QUALIFIED_TRANSCEIVER: Non-qualified transceiver on interface [chars] was detected

Explanation The transceiver for the interface specified has not been qualified on this platform for this software release

Recommended Action Replace the module with a supported transceiver. Contact Cisco TAC to get platform transceiver qualification details

Error Message LIM-4-IF_SFP_WARNING: Interface [chars], [chars]

Explanation There was a warning on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

Error Message LIM-4-IF_XCVR_WARNING: Interface [chars], [chars]

Explanation There was a warning on the transceiver module

Recommended Action Please do show interface transceiver details to obtain more information

LIM-5

Error Message LIM-5-IF_ADMIN_UP: Interface [chars] is admin up [chars]

Explanation Interface is admin up

Recommended Action No action is required.

Error Message LIM-5-IF_BANDWIDTH_CHANGE: Interface [chars], bandwidth changed to [chars] Kbit

Explanation Bandwidth of the interface (port channel) has changed and this change is updated

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_ADMIN_DOWN: Interface [chars] is down (Administratively down)

Explanation Interface has been configured to be administratively down

Recommended Action Perform noshutdown"

Error Message LIM-5-IF_DOWN_CFG_CHANGE: Interface [chars] is down(Config change)

Explanation FCIP interface temporarily down due to reconfiguration

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_CHANNEL_ADMIN_DOWN: Interface [chars] is down (Channel admin down)

Explanation This interface belongs to a PortChannel and the PortChannel is configured to be administratively down

Recommended Action Perform noshutdown'onthePortChannelinterfacethatitbelongsto'

Error Message LIM-5-IF_DOWN_CHANNEL_MEMBERSHIP_UPDATE_IN_PROGRESS: Interface [chars] is down (Channel membership update in progress)

Explanation The interface belongs to a PortChannel and a configuration is being attempted on the interface while there is a configuration in progress on the PortChannel

Recommended Action Retry the configuration again

Error Message LIM-5-IF_DOWN_DOMAIN_ADDR_ASSIGN_FAILURE_ISOLATION: Interface [chars] is down (Isolation due to domain id assignment failure)

Explanation Isolated due to a failure while assigning a domain

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_DOMAIN_INVALID_RCF_RECEIVED: Interface [chars] is down (Isolation due to invalid fabric reconfiguration)

Explanation Invalid RCF received

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_DOMAIN_MANAGER_DISABLED: Interface [chars] is down (Isolation due to domain manager disabled)

Explanation Isolated due to domain manager being disabled

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_DOMAIN_MAX_RETRANSMISSION_FAILURE: Interface [chars] is down (Isolation due to domain manager other side not responding)

Explanation Remote end domain manager not responding

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_DOMAIN_OTHER_SIDE_EPORT_ISOLATED: Interface [chars] is down (Isolation due to domain other side eport isolated)

Explanation Isolating this interface due to the remote end being isolated

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_DOMAIN_OVERLAP_ISOLATION: Interface [chars] is down (Isolation due to domain overlap)

Explanation Isolated due to domain overlap

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_ELP_FAILURE_ISOLATION: Interface [chars] is down (Isolation due to ELP failure)

Explanation ELP failed on the interface

Recommended Action Check the output of showportinternalinfo'inthe'ELPfailurereason'field'

Error Message LIM-5-IF_DOWN_EPP_FAILURE: Interface [chars] is down (Error Disabled - EPP Failure)

Explanation Trunk protocol failed

Recommended Action showportinternalevent-historymsgs'willindicatehetrunkprotocolexchangestodeterminewhyitfailed'

Error Message LIM-5-IF_DOWN_ESC_FAILURE_ISOLATION: Interface [chars] is down (Isolation due to ESC failure)

Explanation ESC failed on the interface

Recommended Action Check the output of showportinternalevent-history'todeterminetheESCprotocolexchangestodeterminehowitfailed'

Error Message LIM-5-IF_DOWN_ETH_IF_DOWN: Interface [chars] is down(Tunnel port src interface down)

Explanation Ethernet link to which the FCIP interface is bound is down

Recommended Action Ensure that the ethernet cable is connected, the interface is administratively enabled

Error Message LIM-5-IF_DOWN_ETH_LINK_DOWN: Interface [chars] is down(Tunnel port src interface link down)

Explanation Ethernet link to which the FCIP interface is bound is down

Recommended Action Ensure that the ethernet cable is connected and the remote end is also active

Error Message LIM-5-IF_DOWN_FCOT_NOT_PRESENT: Interface [chars] is down (FCOT not present)

Explanation The FCOT has been removed

Recommended Action Insert an FCOT

Error Message LIM-5-IF_DOWN_FCOT_VENDOR_NOT_SUPPORTED: Interface [chars] is down (Error disabled - Fcot vendor not supported)

Explanation Fcot inserted is not a supported one

Recommended Action Please contact customer support for a list of authorized transceiver vendors

Error Message LIM-5-IF_DOWN_HW_FAILURE: Interface [chars] is down (Hardware Failure)

Explanation The module hardware has failed'

Recommended Action Collect more information about failed module using command showmoduleinternalallmodule"

Error Message LIM-5-IF_DOWN_INACTIVE: Interface [chars] is down (Inactive)

Explanation The port VSAN has been suspended or deleted

Recommended Action Assign a new active port VSAN to the interface

Error Message LIM-5-IF_DOWN_INCOMPATIBLE_ADMIN_MODE: Interface [chars] is down (Error disabled - Incompatible admin port mode)

Explanation The configured mode is not supported on this interface

Recommended Action Perform a showportinternalinfo'todeterminethelistofmodessupportedonthisinterface'

Error Message LIM-5-IF_DOWN_INCOMPATIBLE_ADMIN_RXBBCREDIT: Interface [chars] is down (Error disabled - Incompatible admin port rxbbcredit)

Explanation The configured receive B2B credit size is not supported

Recommended Action Get the allowed receive B2B credit size from showportinternalinfo"

Error Message LIM-5-IF_DOWN_INCOMPATIBLE_ADMIN_RXBUFSIZE: Interface [chars] is down (Error disabled - Incompatible admin port rxbufsize)

Explanation The configured receive buffer size is not supported

Recommended Action Get the allowed receive buffer size from showportinternalinfo"

Error Message LIM-5-IF_DOWN_INCOMPATIBLE_ADMIN_SPEED: Interface [chars] is down (Error disabled - Incompatible admin port speed)

Explanation The configured speed is not supported on this interface

Recommended Action Perform a showportinternalinfo'todeterminetherangeofspeedsupportedonthisinterface'

Error Message LIM-5-IF_DOWN_INITIALIZING: Interface [chars] is down (Initializing)

Explanation The interface is in the process of coming up

Recommended Action If the interface is stuck in this state for a while, check the output of showportinternalevent-history'todeterminewhatitiswaitingfor'

Error Message LIM-5-IF_DOWN_INTERFACE_REMOVED: Interface [chars] is down (Interface removed)

Explanation Interface removed

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_LINK_FAILURE: Interface [chars] is down (Link failure)

Explanation The physical link has gone down

Recommended Action Ensure that the cable is connected and the remote end is not shut down

Error Message LIM-5-IF_DOWN_LOOPBACK_DIAG_FAILURE: Interface [chars] is down (Diag failure)

Explanation Diag failed on the interface

Recommended Action Collect more information about failed interface using command attachmodule'toconnecttomodule'

Error Message LIM-5-IF_DOWN_LOOPBACK_ISOLATION: Interface [chars] is down (Isolation due to port loopback to same switch)

Explanation The interface is looped back to another interface on the same switch

Recommended Action Check the connectivity of this interface and ensure that it is connected to another switch

Error Message LIM-5-IF_DOWN_MODULE_REMOVED: Interface [chars] is down (module removed)

Explanation Interface is down because the module was removed

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_NONE: Interface [chars] is down ([chars])

Explanation Interface is down with a possible reason.

Recommended Action Collect more information about port using command `show port internal info/event-history` to determine why it went down'

Error Message LIM-5-IF_DOWN_NON_PARTICIPATING: Interface [chars] is down (Non participating)

Explanation The loop port has been put into non participating mode

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_OFFLINE: Interface [chars] is down (Offline)

Explanation The interface has been placed into the offline state

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_PARENT_ADMIN_DOWN: Interface [chars] is down (Parent interface down)

Explanation Parent interface is down

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_PEER_CLOSE: Interface [chars] is down (TCP conn. closed by peer)

Explanation The FCIP peer connected to this interface closed the TCP connection

Recommended Action This command will provide the peer IP address of this FCIP interface: `show interface`. Check to see why the peer closed the TCP connection

Error Message LIM-5-IF_DOWN_PEER_RESET: Interface [chars] is down (TCP conn. reset by peer)

Explanation TCP connection to the FCIP peer got reset

Recommended Action The following commands will provide the IP address of the peer and the route used connect to this FCIP peer: `show interface`, `show ip route`. Check to see why the peer reset the TCP connection

Error Message LIM-5-IF_DOWN_PORT_CHANNEL_MEMBERS_DOWN: Interface [chars] is down (No operational members)

Explanation This is a PortChannel interface and all its members are operationally down

Recommended Action Enable at least one of the PortChannelmembers'

Error Message LIM-5-IF_DOWN_PORT_VSAN_MISMATCH_ISOLATION: Interface [chars] is down (Isolation due to port vsan mismatch)

Explanation Isolated due to a mismatch in the configured port VSAN of the local and remote ends

Recommended Action Configure the port VSAN of the local and remote interfaces to be the same and perform a shutdown'anda'noshutdown"

Error Message LIM-5-IF_DOWN_RCF_IN_PROGRESS: Interface [chars] is down (RCF in progress)

Explanation There is an RCF in progress

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_SOFTWARE_FAILURE: Interface [chars] is down (Port software failure)

Explanation The software servicing the data path on the port has failed

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_SRC_MOD_NOT_ONLINE: Interface [chars] is down(Tunnel source module not online)

Explanation Module that has the tunnel source port of this FCIP interface is not fully online

Recommended Action The module that has the tunnel src port is coming online. Please use show mod to find module status

Error Message LIM-5-IF_DOWN_SRC_PORT_NOT_BOUND: Interface [chars] is down (Tunnel port src interface unbound)

Explanation Tunnel port source interface unbound

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_SRC_PORT_REMOVED: Interface [chars] is down(Tunnel src port removed)

Explanation Tunnel source port of this FCIP interface has been removed

Recommended Action The src interface with ip address that matches the ip address of the bound entity is removed. This happens normally due to the module on which the src interface exists is removed

Error Message LIM-5-IF_DOWN_SUSPENDED_BY_MODE: Interface [chars] is down (Suspended due to incompatible mode)

Explanation This interface belongs to a PortChannel and operational mode of the interface is different from that of the PortChannel

Recommended Action Change the mode and the trunking mode of the PortChannel from auto'andchecktoensurethattheremoteendoftheinterfacealsobelongstothesamePortChannel'

Error Message LIM-5-IF_DOWN_SUSPENDED_BY_SPEED: Interface [chars] is down (Suspended due to incompatible speed)

Explanation This interface belongs to a PortChannel and operational speed of the interface is different from that of the PortChannel

Recommended Action Change the speed of the PortChannel from auto'andchecktoensurethattheremoteendoftheinterfacealsobelongstothesamePortChannel'

Error Message LIM-5-IF_DOWN_SUSPENDED_BY_WWN: Interface [chars] is down (Suspended due to incompatible remote switch WWN)

Explanation This interface belongs to a PortChannel and remote switch WWN of the interface is different from that of the PortChannel

Recommended Action Ensure that this interface is connected to the same remote switch as all the other interfaces in the PortChannel

Error Message LIM-5-IF_DOWN_SUSPENDED: Interface [chars] is down (Suspended)

Explanation This interface belongs to a PortChannel and has been suspended due to an error while bringing it up

Recommended Action Perform a shutdown'anda'noshutdown'.Ifthishappensagainobtainoutputof'showportinternalinfo/event-history' ontheinterface'

Error Message LIM-5-IF_DOWN_TCP_KEEP_ALIVE_EXPIRED: Interface [chars] is down(TCP conn. closed - Keep alive expired)

Explanation TCP session to the FCIP peer got closed due to loss of TCP keep alive

Recommended Action This may be due to loss of IP connectivity. The following commands will provide the IP address of the peer and the route used connect to this FCIP peer: show interface, show ip route. Please do a trace route to check the connectivity to the peer using command:traceroute ipaddr

Error Message LIM-5-IF_DOWN_TCP_MAX_RETRANSMIT: Interface [chars] is down(TCP conn. closed - retransmit failure)

Explanation Interface is down due to maximum retransmission failure

Recommended Action This may be due to loss of IP connectivity. The following commands will provide the IP address of the peer and the route used connect to this FCIP peer: show interface, show ip route. Please do a trace route to check the connectivity to the peer using command:traceroute ipaddr

Error Message LIM-5-IF_DOWN_TCP_PERSIST_TIMER_EXPIRED: Interface [chars] is down(TCP conn. closed - Persist timer expired)

Explanation TCP session to the FCIP peer closed because TCP persist timer expired

Recommended Action This may be due to loss of IP connectivity. The following commands will provide the IP address of the peer and the route used connect to this FCIP peer: show interface, show ip route. Please do a trace route to check the connectivity to the peer using command:traceroute ipaddr

Error Message LIM-5-IF_DOWN_UPGRADE_IN_PROGRESS: Interface [chars] is down (Linecard upgrade in progress)

Explanation Upgrade of the linecard software is in progress

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_VRF_UNUSABLE: Interface [chars] is down (Vrf down)

Explanation The vrf for which this interface is a member is removed

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_VSAN_MISMATCH_ISOLATION: Interface [chars] is down (Isolation due to vsan mismatch)

Explanation This is a trunking interface and the VSANs configured do not match with the VSANs configured on the remote end

Recommended Action Check the VSANs configured on the local end with the remote end

Error Message LIM-5-IF_DOWN_ZONE_MERGE_FAILURE_ISOLATION: Interface [chars] is down (Isolation due to zone merge failure)

Explanation Isolated due to a failure during zone merge

Recommended Action No action is required.

Error Message LIM-5-IF_DOWN_ZONE_REMOTE_NO_RESP_ISOLATION: Interface [chars] is down (Isolation due to remote zone server not responding)

Explanation Isolated due to remote zone server not responding

Recommended Action No action is required.

Error Message LIM-5-IF_DUPLEX: Interface [chars], operational duplex mode changed to [chars]

Explanation Operational duplex mode has changed when link came up

Recommended Action No action is required.

Error Message LIM-5-IF_ERRDIS_RECOVERY: Interface [chars] is being recovered from error disabled state (Last Reason:[chars])

Explanation Interface is being recovered from error disabled state

Recommended Action No action is required.

Error Message LIM-5-IF_HARDWARE: Interface [chars], hardware type changed to [chars]

Explanation There was a change in the hardware characteristic of an interface, such as a transceiver module plugged in or removed

Recommended Action No action is required.

Error Message LIM-5-IF_L2MP_MODE: Interface [chars], l2mp-mode changed to [chars]

Explanation The l2mp-mode on the port has changed

Recommended Action No action is required.

Error Message LIM-5-IF_RX_FLOW_CONTROL: Interface [chars], operational Receive Flow Control state changed to [chars]

Explanation Operational receive flow control has changed when link came up

Recommended Action No action is required.

Error Message LIM-5-IF_TRUNK_DOWN: Interface [chars], vlan [chars] down

Explanation Interface [chars] is trunking, VLANs [chars] are down

Recommended Action The following commands will help determine why this VSAN is down on this interface: show interface, show port internal info interface VSAN, show port internal event-history interface vsan

Error Message LIM-5-IF_TRUNK_UP: Interface [chars], vlan [chars] up

Explanation Interface [chars] is trunking, VLANs [chars] are up

Recommended Action No action is required.

Error Message LIM-5-IF_TX_FLOW_CONTROL: Interface [chars], operational Transmit Flow Control state changed to [chars]

Explanation Operational transmit flow control has changed when link came up

Recommended Action No action is required.

Error Message LIM-5-IF_UP: Interface [chars] is up [chars]

Explanation Interface is up in mode specified, if applicable

Recommended Action No action is required.

Error Message LIM-5-SPEED: Interface [chars], operational speed changed to [chars]

Explanation Operational speed has changed when link came up

Recommended Action No action is required.

Error Message LIM-5-STORM_CONTROL_ABOVE_THRESHOLD: Traffic in port [chars] exceeds the configured threshold [chars]

Explanation Traffic on specified port is beyond the configured storm-control threshold, and the excess traffic is being dropped

Recommended Action Identify source of traffic storm

Error Message LIM-5-STORM_CONTROL_BELOW_THRESHOLD: Traffic in port [chars] has fallen below the configured threshold [chars]

Explanation Traffic on specified port has returned to within configured storm-control threshold

Recommended Action No action is required.

LIT Messages

LIT-6

Error Message LIT-6-LIT_DEBUG_MSG: [chars]

Explanation Debug log message

Recommended Action No action is required.

LLDP Messages

LLDP-1

Error Message LLDP-1-NO_DCBX_ACKS_RECV_FOR_LAST_10_PDUs: No Acks have been received on Interface [chars] for last [dec] DCBX PDUs

Explanation No Acks Received

Recommended Action No action is required.

LLDP-3

Error Message LLDP-3-DETECT_MULTIPLE_PEERS: Multiple peers detected on [chars]

Explanation Multiple peers detected on an interface

Recommended Action No action is required.

Error Message LLDP-3-INVALID_DCBXP_RECEIVED: Received an invalid DCBXP on [chars]

Explanation Received an invalid DCBXP on an interface

Recommended Action No action is required.

Error Message LLDP-3-INVALID_LLDP_RECEIVED: Received an invalid LLDP on [chars]

Explanation Received an invalid LLDP on an interface

Recommended Action No action is required.

Error Message LLDP-3-LLDP_INTERNAL_ERROR: LLDP internal error: [chars]

Explanation Internal error is encountered

Recommended Action No action is required.

LLDP-5

Error Message LLDP-5-LLDP_DISABLED: LLDP Disabled

Explanation LLDP Service Disabled

Recommended Action No action is required.

Error Message LLDP-5-LLDP_ENABLED: LLDP Enabled

Explanation LLDP Service Enabled

Recommended Action No action is required.

Error Message LLDP-5-SERVER_ADDED: Server with Chassis ID [chars] Port ID [chars] management address [chars] discovered on local port [chars] in vlan [dec] with enabled capability [chars]

Explanation A new peer is discovered

Recommended Action No action is required.

Error Message LLDP-5-SERVER_REMOVED: Server with Chassis ID [chars] Port ID [chars] on local port [chars] has been removed

Explanation A peer is removed

Recommended Action No action is required.

LLDP-6

Error Message LLDP-6-DETECT_REMOTE_CHANGE: Remote change detected on [chars]

Explanation Remote change detected on an interface

Recommended Action No action is required.

Error Message LLDP-6-DETECT_REMOTE_DCBXP_CHANGE: Remote DCBXP change detected on [chars]

Explanation Remote DCBXP change detected on an interface

Recommended Action No action is required.

MAC Messages

MAC-SLOT#-2

Error Message MAC-SLOT#-2-MAC_INFO: [chars]

Explanation MAC Informational message

Recommended Action No action is required.

MCAST Messages

MCAST-2

Error Message MCAST-2-SHUTDOWN: Process shutting down: [chars]

Explanation Mcast is shutting down

Recommended Action The action depends on the situation. The multicast process can shut down gracefully because of a system restart (in which case no action needs to take place) or because of a failure. The message associated with the syslog should be self explanatory to understand the reason for the shutdown. If the process is able to restart properly, there is no immediate harm for the system stability and the suggested action is to report the syslog event together with an explanation of the operations most recently performed on the system.

MCAST-4

Error Message MCAST-4-ERROR: [chars]

Explanation Mcast encountered a generic error

Recommended Action No action is required.

MCAST-5

Error Message MCAST-5-BAD_MSG: Received bad message: [chars]

Explanation Mcast has received a malformed/unrecognized message

Recommended Action No action is required.

Error Message MCAST-5-START: Process has been started

Explanation Mcast has been started

Recommended Action No action is required.

MCECTEST Messages

MCECTEST-3

Error Message MCECTEST-3-ASSERTION_FAILED: [chars]

Explanation MCECTEST has hit an assert condition at file [chars]

Recommended Action No action is required.

Error Message MCECTEST-3-INIT_FAIL: [chars]

Explanation MCECTEST Initialization failed. due to [chars]

Recommended Action No action is required.

Error Message MCECTEST-3-INTERNAL_ERR: [chars]

Explanation MCECTEST encountered an internal error due to [chars]

Recommended Action No action is required.

Error Message MCECTEST-3-MTS_ERR: [chars]

Explanation MCECTEST encountered an MTS error due to [chars]

Recommended Action No action is required.

MCECTEST-5

Error Message MCECTEST-5-MCECTEST_DISABLED: MCECTEST Disabled

Explanation MCECTEST Service Disabled

Recommended Action No action is required.

Error Message MCECTEST-5-MCECTEST_ENABLED: MCECTEST Enabled

Explanation MCECTEST Service enabled

Recommended Action No action is required.

MCECTEST-6

Error Message MCECTEST-6-INTERNAL_INFO: [chars]

Explanation MCECTEST got an internal info [chars]

Recommended Action No action is required.

MCM Messages

MCM-2

Error Message MCM-2-MCM_CRITICAL_ERROR: Internal Critical Error

Explanation Some critical error

Recommended Action No action is required.

Error Message MCM-2-MCM_REPLICATION_DISABLED: Proxy layer-3 modules are not available for replication. Proxy layer-3 multicast replication is disabled.

Explanation Replication is disabled

Recommended Action No action is required.

Error Message MCM-2-MCM_REQ_RESP_ERROR: Error ([hex]: [chars]) while communicating with component :[chars], opcode: [chars] (for: [chars])

Explanation Error in request-response handshake

Recommended Action No action is required.

Error Message MCM-2-MCM_ROUTING_DISABLED: Proxy layer-3 modules are not available for routing. Proxy layer-3 forwarding is disabled.

Explanation Routing is disabled

Recommended Action No action is required.

MCM-5

Error Message MCM-5-MCM_SDB_UPDATE_FAILED: sdb update failed with ret_val [dec]

Explanation SDB updated failed for MCM

Recommended Action No action is required.

MCM-6

Error Message MCM-6-MCM_REPLICATION_ENABLED: Proxy layer-3 modules are UP and available for replication. Proxy layer-3 multicast replication is enabled.

Explanation Replication is enabled

Recommended Action No action is required.

Error Message MCM-6-MCM_ROUTING_ENABLED: Proxy layer-3 modules are UP and available for routing. Proxy layer-3 forwarding is enabled.

Explanation Routing is enabled

Recommended Action No action is required.

MFDM Messages

MFDM-2

Error Message MFDM-2-DI_REUSE: LTL node exists with DI [dec] oiflist_index [dec] type [dec] and same DI returned for oiflist_index [dec] type [dec] Please collect show tech-support forwarding distribution l2/l3 multicast and show tech-support pixm.

Explanation PIXM returned duplicate DI.

Recommended Action No action is required.

Error Message MFDM-2-DOWNLOAD_TIMEOUT: Download of L2/L3 route databases timed out : download_in_progress_slots [hex] for database [chars] [chars] [chars]

Explanation Download of L2/L3 route databases timed out. Download triggered by VMM insert request.

Recommended Action No action is required.

Error Message MFDM-2-INTERNAL_ERROR: MFDM-[chars] Internal error : show system internal mfdm errors for more information

Explanation MFDM PD hit a internal error. show system internal mfdm errors for futher analysis.

Recommended Action No action is required.

Error Message MFDM-2-REF_OUTOFSYNC: In Decrement ltl_node ref_count: [dec] is less than count: [dec] passed in for DI: [hex], oiflist_index: [dec], type: [dec]. Possible PI/PD refcount out-of-sync. Please collect show tech-support forwarding distribution l2/l3 multicast and show tech-support pixm.

Explanation MFDM PI/PD refcount out-of-sync

Recommended Action No action is required.

Error Message MFDM-2-XID_TAMPERED: Correcting xid in resp - rrtoken:[hex], req(xid:[dec], rt_cnt:[dec], msg_len:[dec], flag:[dec]), resp(xid:[dec], rt_cnt:[dec], msg_len:[dec], flag:[dec])

Explanation MFDM tampered xid in OTV response payload

Recommended Action No action is required.

MODULE Messages

MODULE-2

Error Message MODULE-2-LCM_PRE_UPGRADE_GENERAL_FAIL: Pre upgrade message fails seq [dec]

Explanation Pre upgrade message failed.

Recommended Action No action is required.

Error Message MODULE-2-LCM_UPGRADE_DONE_GENERAL_FAIL: Upgrade done message fails SAP [chars]

Explanation Upgrade ready message failed.

Recommended Action No action is required.

Error Message MODULE-2-LCM_UPGRADE_OVER_FAIL: Upgrade over message returned [dec] [hex] for SAP [dec]

Explanation Upgrade done message failed.

Recommended Action No action is required.

Error Message MODULE-2-LCM_UPGRADE_READY_FAIL: Upgrade ready message returned [dec] [hex] for SAP [dec]

Explanation Upgrade ready message failed.

Recommended Action No action is required.

Error Message MODULE-2-LCM_UPGRADE_READY_GENERAL_FAIL: Upgrade ready message fails SAP [chars]

Explanation Upgrade ready message failed.

Recommended Action No action is required.

Error Message MODULE-2-MOD_DIAG_FAIL: Module [dec] (Serial number: [chars]) reported failure [chars] due to [chars] in device [chars] (device error [hex])

Explanation The module in slot [decimal digit] reported a failure in the runtime diagnostic. Module manager is going to power cycle the module.

Recommended Action Collect information about the module by issuing the command `showmoduleinternalallmodule[decimaldigit]'`.

Error Message MODULE-2-MOD_DNLD_FAIL: Image download failed for module [dec] (Serial number: [chars])

Explanation Module [decimal digit] failed to download a new image from the supervisor.

Recommended Action Collect information about the module by issuing the command `showmoduleinternalallmodule[decimaldigit]'`.

Error Message MODULE-2-MOD_FAILURE: Re-initializing module [dec] (Serial number: [chars]) failed. Received lc_failed from sap [hex] failure reason [hex]

Explanation Module [decimal digit] reported a failure during the initialization phase and will be rebooted.

Recommended Action Collect information about the module by issuing the commands `showmodule_internalallmodule<modulenum>`

Error Message MODULE-2-MOD_FAIL: Initialization of module [dec] (Serial number: [chars]) failed

Explanation Module [decimal digit] reported a failure during the initialization phase and will be powered down.

Recommended Action Collect information about the module by issuing the commands
showmodule_internalallmodule<modulenum>

Error Message MODULE-2-MOD_MAJORSWFFAIL: Module [dec] (Serial number: [chars]) reported a critical failure in service [chars]

Explanation A critical failure in service [string] happened at module [decimal digit] is going to reset the module [decimal digit].

Recommended Action Collect information about the module by issuing the command
showmoduleinternalallmodule[decimaldigit].'

Error Message MODULE-2-MOD_MINORSWFFAIL: Module [dec] (Serial number: [chars]) reported a failure in service [chars]

Explanation A non-critical failure in service [string] happened at module [decimal digit] is not going to reset the module [decimal digit].

Recommended Action Collect information about the module by issuing the command
showmoduleinternalallmodule[decimaldigit].'

Error Message MODULE-2-MOD_NOT_ALIVE: Module [dec] not responding... resetting (Serial number: [chars])

Explanation Module [decimal digit] is not replying to the hello message: module manager is then going to reset the module.

Recommended Action No action is required.

Error Message MODULE-2-MOD_REGFAILED: Registration failed for module [dec]

Explanation Module [decimal digit] sent the registration message notifying a failure.

Recommended Action Collect module internal information by issuing the command
showmoduleinternalallmodule[decimaldigit].'

Error Message MODULE-2-MOD_SOMEPORTS_FAILED: Module [dec] (Serial number: [chars]) reported failure on ports [dec]/[dec]-[dec]/[dec] ([chars]) due to [chars] in device [chars] (error [hex])

Explanation Module [decimal digit] reported a failure in the runtime diagnostic due to failure in some of the ports.

Recommended Action Collect information about the module by issuing the command
showmoduleinternalallmodule[decimaldigit].'

Error Message MODULE-2-MOD_UNKNOWN: Module type [[dec]] in slot [dec] is not supported

Explanation The software card id of module [decimal digit] is not supported by the supervisor.

Recommended Action Collect information about the module by issuing the commands showmoduleinternalallmodule[decimaldigit]"

Error Message MODULE-2-XBAR_DIAG_FAIL: Xbar [dec] (Serial number: [chars]) reported failure [chars] due to [chars] in device [chars] (device error [hex])

Explanation The xbar in slot [decimal digit] reported a failure in the runtime diagnostic. Module manager is going to power cycle the module.

Recommended Action Collect information about the module by issuing the command showmoduleinternalallxbar[decimaldigit]'.

Error Message MODULE-2-XBAR_FAILURE: Re-initializing xbar [dec] (Serial number: [chars]) failed. Received lc_failed from sap [hex] failure reason [hex]

Explanation Xbar [decimal digit] reported a failure during the initialization phase and will be rebooted.

Recommended Action Collect information about the module by issuing the commands showmodule_internalallxbar<modulenumber

Error Message MODULE-2-XBAR_FAIL: Initialization of xbar [dec] (Serial number: [chars]) failed

Explanation Xbar [decimal digit] reported a failure during the initialization phase and will be powered down.

Recommended Action Collect information about the module by issuing the commands showmodule_internalallxbar<modulenumber

Error Message MODULE-2-XBAR_SOMEPORTS_FAILED: Xbar [dec] (Serial number: [chars]) reported failure on ports [dec]/[dec]-[dec]/[dec] ([chars]) due to [chars] in device [chars] (error [hex])

Explanation Xbar [decimal digit] reported a failure in the runtime diagnostic due to failure in some of the ports.

Recommended Action Collect information about the module by issuing the command showmoduleinternalallxbar[decimaldigit]'.

Error Message MODULE-2-XBAR_UNKNOWN: Xbar type [[dec]] in slot [dec] is not supported

Explanation The software card id of xbar [decimal digit] is not supported by the supervisor.

Recommended Action Collect information about the module by issuing the commands showmoduleinternalallxbar[decimaldigit]"

MODULE-3

Error Message MODULE-3-LCM_SEQ_ERROR: Error ([chars]) for slot:[dec] while communicating with component [chars] opcode:[chars] (for:[dec])

Explanation LCM encountered an error while executing a sequence for a module.

Recommended Action No action is required.

Error Message MODULE-3-LCM_SYSLOG_ERR: [chars]

Explanation LCM encountered an error while processing a message for module.

Recommended Action No action is required.

Error Message MODULE-3-MOD_SRG_NOT_COMPATIBLE: Module [dec] (Serial number: [chars]) firmware is not compatible with supervisor, downloading new image

Explanation The software version of module [decimal digit] is not supported by the supervisor.

Recommended Action Collect information about the module by issuing the command showmoduleinternalallmodule[decimaldigit]'

MODULE-4

Error Message MODULE-4-MOD_WARNING: Module [dec] (Serial number: [chars]) reported warning [chars] due to [chars] in device [chars] (device error [hex])

Explanation Module [decimal digit] reported a warning in the runtime diagnostic due to failure in some of the ports.

Recommended Action Collect information about the module by issuing the command showmoduleinternalallmodule[decimaldigit]'

Error Message MODULE-4-XBAR_WARNING: Xbar [dec] (Serial number: [chars]) reported warning [chars] due to [chars] in device [chars] (device error [hex])

Explanation Xbar [decimal digit] reported a warning in the runtime diagnostic due to failure in some of the ports.

Recommended Action Collect information about the module by issuing the command `showmoduleinternalallxbar[decimaldigit]'`.

MODULE-5

Error Message MODULE-5-ACTIVE_SUP_OK: Supervisor [dec] is active (Serial number: [chars])

Explanation Module [decimal digit] is ready to be configured and be able to switch traffic.

Recommended Action No action is required.

Error Message MODULE-5-LCM_MODULE_UPGRADE_END: Upgrade of module [dec] ended

Explanation Upgrade of the module has ended.

Recommended Action No action is required.

Error Message MODULE-5-LCM_MODULE_UPGRADE_START: Upgrade of module [dec] started

Explanation Upgrade of the module has been started by installer

Recommended Action No action is required.

Error Message MODULE-5-MOD_OK: Module [dec] is online (Serial number: [chars])

Explanation Module [decimal digit] is ready to be configured and be able to switch traffic.

Recommended Action No action is required.

Error Message MODULE-5-MOD_REINIT: Re-initializing module [dec] (Serial number: [chars])

Explanation Module [decimal digit] reported a failure during the initialization phase and will be rebooted.

Recommended Action Collect information about the module by issuing the commands `showmodule_internalallmodule<modulenum>`

Error Message MODULE-5-MOD_RESTART: Module [dec] is restarting after image download

Explanation Module [decimal digit] completed image download and is restarting.

Recommended Action No action is required.

Error Message MODULE-5-MOD_STARTUP_CFG_MISMATCH: The startup configuration cannot be applied to a different module type for module [dec] (Serial number: [chars]). [chars] module is replacing [chars].

Explanation The startup configuration for module [decimal digit] contains information about a different type of module instead of containing information about the current one.

Recommended Action No action is required.

Error Message MODULE-5-STANDBY_SUP_OK: Supervisor [dec] is standby

Explanation Module [decimal digit] is ready to be configured and be able to switch traffic.

Recommended Action No action is required.

Error Message MODULE-5-XBAR_OK: Xbar [dec] is online (Serial number: [chars])

Explanation Xbar [decimal digit] is ready to be configured and be able to switch traffic.

Recommended Action No action is required.

Error Message MODULE-5-XBAR_REINIT: Re-initializing xbar [dec] (Serial number: [chars])

Explanation Xbar [decimal digit] reported a failure during the initialization phase and will be rebooted.

Recommended Action Collect information about the module by issuing the commands `showmodule_internalallxbar<modulenum>`

MODULE-6

Error Message MODULE-6-MOD_PURGE_CONFIG: Purging the configuration for module [dec]

Explanation Notification is being sent to remove the module configurations.

Recommended Action No action is required.

Error Message MODULE-6-MOD_REG_OK: Registration succeeded for module [dec]

Explanation Module [decimal digit] sent a successful registration message.

Recommended Action No action is required.

MONITOR Messages

MONITOR-3

Error Message MONITOR-3-ETH_SPAN_CFG_DEST_IF_MEMBER_SRC_PROFILE: ERROR: Interface [[chars]] configured in session [[dec]] and being inherited by port profile [[chars]] in another session

Explanation An interface is configured as destination and source at the same time (one as being inherited by a port-profile and the other as being directly configured as a source/destination of a session. This may result of monitor traffic loss in the interface. Please remove the interface from the port profile or from the monitor session.

Recommended Action No action is required.

MONITOR-5

Error Message MONITOR-5-ETH_SPAN_SESSION_CREATED: Session [dec] created

Explanation A new span session has been created.

Recommended Action No action is required.

Error Message MONITOR-5-ETH_SPAN_SESSION_DELETED: Session [dec] deleted

Explanation Session has been deleted.

Recommended Action No action is required.

Error Message MONITOR-5-ETH_SPAN_SESSION_DOWN: Session [dec] is down. Reason "[chars]"

Explanation Session is down, no further traffic will be spanned.

Recommended Action No action is required.

Error Message MONITOR-5-ETH_SPAN_SESSION_ERROR: Session [dec] is having error.
Reason "[chars]"

Explanation The session is experiencing a problem.

Recommended Action Delete the session and try to reconfigure it

Error Message MONITOR-5-ETH_SPAN_SESSION_UP: Session [dec] is up.

Explanation Session is up now. You can monitor Spanned traffic at the destination ports

Recommended Action No action is required.

NFM Messages

NFM-2

Error Message NFM-2-COMMIT_FAIL: Commit failed: client [hex], [chars]

Explanation The DDB commit failed

Recommended Action No action is required.

Error Message NFM-2-DDB_FAILURE: DDB failure: [chars]

Explanation A DDB generated failure

Recommended Action No action is required.

Error Message NFM-2-EXITING: Exit reason: [chars]

Explanation The NFM service process has exited due to [char]. The process has probably been restarted automatically.

Recommended Action No action is required.

Error Message NFM-2-INIT_FAIL: NFM Service Init failed: [chars] error [hex]

Explanation NFM Service initialization failed. [chars] explains the reason for the failure.

Recommended Action No action is required.

Error Message NFM-2-MALLOC_ERROR: Function [chars]: Size [dec] bytes

Explanation The NFM service could not allocate memory.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NFM-2-PSS_ERROR: [chars]: PSS ret. val=[dec]

Explanation The NFM service encountered error while operating on a persistent storage database.

Recommended Action No action is required.

Error Message NFM-2-VERIFY_FAIL: Verify failed - Client [hex], Reason: [chars], Interface: [chars]

Explanation The DDB Verify failed

Recommended Action No action is required.

NFM-3

Error Message NFM-3-DDB_ERROR: DDB error: [chars]

Explanation The DDB generated error

Recommended Action No action is required.

Error Message NFM-3-FEATURE_MANAGER_ERROR: [chars]: An error occurred processing a Feature Manager msg - error [chars]

Explanation An error occurred while processing a message from FEATURE Manager

Recommended Action No action is required.

Error Message NFM-3-HANDLE_IN_USE: [chars]: name: [chars]

Explanation The NFM service encountered a handle that was in use while reading a persistent storage database.

Recommended Action No action is required.

Error Message NFM-3-INVALID_HANDLE: [chars]: handle =[hex]

Explanation The NFM service encountered an invalid handle in a persistent storage database.

Recommended Action No action is required.

Error Message NFM-3-MONITOR_NOT_FOUND: Monitor with handle [hex] from source [hex]

Explanation An Export Msg from a Linecard contained an invalid Monitor handle

Recommended Action No action is required.

Error Message NFM-3-MTS_ERROR: NFM encountered the following MTS error: [chars]

Explanation NFM Service encountered an MTS error. [chars] specifies the context where the error occurred.

Recommended Action No action is required.

Error Message NFM-3-NFM_CONFIG_ERROR: [chars]

Explanation L2 Netflow config is applied on Port-channel with F1 Line Cards only - error

Recommended Action No action is required.

Error Message NFM-3-NFM_DDB_ERROR: DDB error: [chars]

Explanation The DDB generated error

Recommended Action No action is required.

Error Message NFM-3-PSS_CORRUPTED: [chars] PSS found corrupted

Explanation The NFM service has detected corruption in one of its persistent information database. The database would be recreated.

Recommended Action No action is required.

Error Message NFM-3-VLAN_PARSE_ERROR: [chars]: An error occurred processing a VLAN Mgr Parse msg [hex]

Explanation An error occurred while processing a message from VLAN Manager

Recommended Action No action is required.

NFM-4

Error Message NFM-4-DDB_WARNING: DDB warning: [chars]

Explanation The DDB generated warning

Recommended Action No action is required.

Error Message NFM-4-LICENSE_EXPIRED: The License has expired.

Explanation The NFM service requires a License to run and exits when the License expires.

Recommended Action No action is required.

Error Message NFM-4-NFM_DDB_WARNING: DDB warning: [chars]

Explanation The DDB generated warning

Recommended Action No action is required.

Error Message NFM-4-PSS_VERSION_MISMATCH: PSS [dec] Code [dec]

Explanation There was a version mismatch between the NFM service and one of its persistent storage databases. The persistent information has been translated to the new format.

Recommended Action No action is required.

NFM-5

Error Message NFM-5-FEATURE_DISABLED: NetFlow Disabled.

Explanation NetFlow Feature Disabled.

Recommended Action No action is required.

Error Message NFM-5-FEATURE_ENABLED: NetFlow Enabled.

Explanation NetFlow Feature Enabled.

Recommended Action No action is required.

NFM-6

Error Message NFM-6-BECAME_ACTIVE: Became ACTIVE from standby mode

Explanation The NFM service on the standby supervisor became active and it is ready to serve client requests.

Recommended Action No action is required.

Error Message NFM-6-BECAME_STDBY: Became STANDBY from active mode

Explanation The NFM service became standby from active mode.

Recommended Action No action is required.

Error Message NFM-6-DDB_NOTIF: DDB notification: [chars]

Explanation The DDB generated notification

Recommended Action No action is required.

Error Message NFM-6-FAILED_TO_SEND_HEARTBEAT: Failed to send heartbeat to system manager: Reason=[chars]

Explanation The NFM service was unable to send heartbeat to the system manger

Recommended Action No action is required.

Error Message NFM-6-NFM_DDB_NOTIF: DDB notification: [chars]

Explanation The DDB generated notification

Recommended Action No action is required.

Error Message NFM-6-SERVICE_UP: Initialized [chars]

Explanation The NFM service is up and ready The service was initialized in [char] mode.

Recommended Action No action is required.

Error Message NFM-6-SRV_EXIT: NFM Service shutting down gracefully

Explanation NFM Service is shutting down gracefully. This is an informational message.

Recommended Action No action is required.

Error Message NFM-6-SWITCH_OVER: Switching Over to other Sup.

Explanation The NFM service has successfully switched over to the standby supervisor card.

Recommended Action No action is required.

NFM-7

Error Message NFM-7-DEBUG: [chars]

Explanation Debug information is being sent to syslog

Recommended Action No action is required.

NFP Messages

NFP-SLOT#-2

Error Message NFP-SLOT#-2-NF_ACL_ERR: [chars]([dec]): acl error. [chars]

Explanation Acl error

Recommended Action No DDTS.

Error Message NFP-SLOT#-2-NF_DDB_ERR: [chars]([dec]): ddb error.[chars] [hex]

Explanation Ddb error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NFP-SLOT#-2-NF_ERR: [chars]([dec]): nfp error. [chars]

Explanation Nfp error ocured

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NFP-SLOT#-2-NF_FIB_ERR: [chars]([dec]): fib error. [chars]

Explanation Fib error

Recommended Action No DDTS.

Error Message NFP-SLOT#-2-NF_NDE_ERR: [chars]([dec]): nde error. [chars]

Explanation Nde error

Recommended Action No DDTS.

Error Message NFP-SLOT#-2-NF_NFM_ERR: [chars]([dec]): nfm error. [chars]

Explanation Nfm error

Recommended Action No DDTS.

Error Message NFP-SLOT#-2-NF_QOS_ERR: [chars]([dec]): qos error. [chars]

Explanation Qos error

Recommended Action No DDTS.

NFP-SLOT#-5

Error Message NFP-SLOT#-5-NF_INFO: [chars]

Explanation Info

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

NPC Messages

NPC-SLOT#-3

Error Message NPC-SLOT#-3-LOG_NPC_ERR: Nonrecoverable error: [chars]

Explanation Errors which cause program to exit occurred

Recommended Action No action is required.

NPC-SLOT#-4

Error Message NPC-SLOT#-4-LOG_NPC_WARNING: Serious error: [chars]

Explanation Serious errors which affect all normal operations occurred

Recommended Action No action is required.

NPC-SLOT#-5

Error Message NPC-SLOT#-5-LOG_NPC_DEBUG: Unexpected error: [chars]

Explanation Unexpected errors which affect some normal operations occurred

Recommended Action No action is required.

Error Message NPC-SLOT#-5-LOG_NPC_NVP_FSM: Illegal event received: [chars]

Explanation Illegal event received in NPC_NVP FSM

Recommended Action No action is required.

Error Message NPC-SLOT#-5-LOG_NPC_VSAN_FSM: Illegal event received: [chars]

Explanation Illegal event received in NPC_VSAN FSM

Recommended Action No action is required.

NPV Messages

NPV-2

Error Message NPV-2-CFS_PEER_LOST_WITHIN_SESSION: CFS peer with switch wwn [chars] was lost in the middle of an active CFS session. Abort the CFS session and re-enter the configuration changes

Explanation Due to port flaps, link outages, switch restart etc. a CFS peer switch of NPV was lost. The current configuration changes would not be applied to this peer until the peer merges with this switch. The CFS merge may fail if the configuration at the lost peer conflicts with the changes made in this session. It is recommended that the user abort this CFS session using ivr abort command and then re-enter the configuration changes.

Recommended Action No action is required.

Error Message NPV-2-NPV_DISABLE_FAILED: NPV could not disabled : [chars] [chars]

Explanation NPM could not disabled due to the reason specified. Please try again.

Recommended Action No action is required.

Error Message NPV-2-NPV_ENABLE_FAILED: NPV could not enabled : [chars] [chars]

Explanation NPM could not enabled due to the reason specified. Please try again.

Recommended Action No action is required.

Error Message NPV-2-NPV_EXITED: NPV process exited in file [chars] at Line [chars]:[chars]

Explanation NPM process encountered a critical error as specified, and so NPV process cannot continue.

Recommended Action No action is required.

NPV-3

Error Message NPV-3-ACL_UPDATE_FAILED: [chars]

Explanation ACL update request initiated by the NPV process has failed

Recommended Action No action is required.

Error Message NPV-3-CFS_INVALID_PAYLOAD_RECEIVED: NPV received invalid payload from CFS

Explanation NPV process received invalid payload from CFS.

Recommended Action No action is required.

Error Message NPV-3-CLEAR_FAILED: [chars]

Explanation An error occurred while clearing the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-COMMIT_FAILED: [chars]

Explanation An error occurred while committing configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-COMMIT_PARTIALLY_FAILED: [chars]

Explanation An error occurred while committing configuration. Configuration could not be committed on some switches. The reason for the failure : [chars]. Configuration can be inconsistent in the fabric.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-COMMIT_REJECTED: [chars]

Explanation Commit request received from remote switch is rejected. The reason for the failure: [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-FC2_SEND_FAILED: [chars]

Explanation NPV process could send an FC2 message.

Recommended Action No action is required.

Error Message NPV-3-F_RJT_SENT: [chars]

Explanation NPV process sent an F_RJT frame.

Recommended Action No action is required.

Error Message NPV-3-INTERNAL_ERROR: Internal error: [chars]

Explanation NPV process encountered a general error, one that does not fall in any of the categories. [chars] describes the error and its context.

Recommended Action No action is required.

Error Message NPV-3-LCP_PROGRAMMING_FAILED: [chars]

Explanation LCP programming request initiated by the NPV process has failed

Recommended Action No action is required.

Error Message NPV-3-LOCK_FAILED: [chars]

Explanation An error occurred while acquiring the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-LS_RJT_RCVD: [chars]

Explanation NPV process received an LS_RJT frame.

Recommended Action No action is required.

Error Message NPV-3-LS_RJT_SENT: [chars]

Explanation NPV process sent an LS_RJT frame.

Recommended Action No action is required.

Error Message NPV-3-MALLOC_FAILED: [chars]

Explanation NPV process could not allocate memory

Recommended Action No action is required.

Error Message NPV-3-MERGE_ACTIVATION_FAILED: [chars]

Explanation An error occurred while activating merged configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-MERGE_FAILED: [chars]

Explanation An error occurred while merging configuration. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message NPV-3-MTS_SEND_FAILED: [chars]

Explanation NPV process could not send an MTS message.

Recommended Action No action is required.

Error Message NPV-3-NPIV_DISABLE_FAILED: [chars]

Explanation NPIV feature could not be disabled.

Recommended Action No action is required.

Error Message NPV-3-NPV_CFS_IPV4_ENABLE_FAILED: CFS IPv4 distribution enable failed because [chars]

Explanation NPV CFS distribution might not work. Try enabling it again on the command line. Make sure cfs distribution is enabled.

Recommended Action No action is required.

Error Message NPV-3-PORT_BRINGUP_FAILED: [chars]

Explanation NPV process has failed to bringup the port

Recommended Action No action is required.

Error Message NPV-3-PORT_REINIT_FAILED: [chars]

Explanation Port reinit request initiated by the NPV process has failed

Recommended Action No action is required.

Error Message NPV-3-UNLOCK_FAILED: [chars]

Explanation An error occurred while releasing the lock. The reason for the failure : [chars]

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

NPV-4

Error Message NPV-4-NPV_NPIV_NOT_ENABLED_ON_UPSTREAM_SWITCH: [chars]

Explanation This syslog is printed when the external interface fails to come up due to NPIV feature not enabled on the upstream switch.

Recommended Action Verify and enable NPIV feature in upstream switch.

Error Message NPV-4-NPV_PORT_VSAN_MISMATCH_ON_UPSTREAM_LINK: [chars]

Explanation This syslog is printed when the external interface fails to come up due to upstream port VSAN mis-match with the upstream switch.

Recommended Action Make sure port VSAN is same on both sides of this external link

NPV-5

Error Message NPV-5-ASSERTION_FAILED: Unexpected assertion failure in File [chars] at Line [dec]

Explanation An assertion failed in NPV code

Recommended Action No action is required.

Error Message NPV-5-FLEXATTACH_VPWWN_AUTO_ASSIGNED: A virtual port WWN [chars] has been automatically assigned to interface [chars]

Explanation The virtual port WWN will be used as port WWN for devices logging in on this interface.

Recommended Action No action is required.

Error Message NPV-5-FLEXATTACH_VPWWN_MANUALLY_ASSIGNED: A virtual port WWN [chars] has been manually assigned to interface [chars]

Explanation The virtual port WWN will be used as port WWN for devices logging in on this interface.

Recommended Action No action is required.

Error Message NPV-5-FLEXATTACH_VPWWN_UNASSIGNED: The virtual port WWN has been unassigned from interface [chars]

Explanation The physical port WWN will be used as port WWN for devices logging in on this interface.

Recommended Action No action is required.

Error Message NPV-5-FRAME_DISCARDED: [chars]

Explanation NPV process discarded an FC2 frame.

Recommended Action No action is required.

Error Message NPV-5-NPV_LOAD_BALANCE_REINIT: Server ports reinitialized : [chars]

Explanation Server ports are reinitialized to balance the loads on the external interfaces.

Recommended Action No action is required.

Error Message NPV-5-UNEXPECTED_EVENT: [chars]

Explanation NPV process has received an unexpected event in the current state.

Recommended Action No action is required.

NPV-6

Error Message NPV-6-ABTS_SENT: [chars]

Explanation NPV process sent an ABTS frame.

Recommended Action No action is required.

Error Message NPV-6-ELS_CMD_SENT_TO_CORE: [chars]

Explanation NPV process sent an ELS frame to the core switch.

Recommended Action No action is required.

Error Message NPV-6-ELS_CMD_SENT_TO_SRV: [chars]

Explanation NPV process sent an ELS frame to the server.

Recommended Action No action is required.

Error Message NPV-6-EXT_IF_SELECTED: [chars]

Explanation NPV process has selected an external interface to forward either all frames received on a server interface or frames received from a specific port WWN.

Recommended Action No action is required.

Error Message NPV-6-FABRIC_PROXY_LOGO_SENT: [chars]

Explanation NPV process sent a LOGO frame to the device as the corresponding external interface went down.

Recommended Action No action is required.

Error Message NPV-6-FDISC_RCVD: [chars]

Explanation NPV process received an FDISC frame.

Recommended Action No action is required.

Error Message NPV-6-FDISC_SENT: [chars]

Explanation NPV process sent an FDISC frame to the core switch.

Recommended Action No action is required.

Error Message NPV-6-FLOGI_RCVD: [chars]

Explanation NPV process received an FLOGI frame.

Recommended Action No action is required.

Error Message NPV-6-INTERNAL_FLOGI_SENT: [chars]

Explanation NPV process sent an internal FLOGI frame to the core switch on an external interface.

Recommended Action No action is required.

Error Message NPV-6-LOGO_RCVD: [chars]

Explanation NPV process received a LOGO frame.

Recommended Action No action is required.

Error Message NPV-6-LOGO_SENT: [chars]

Explanation NPV process sent a LOGO frame.

Recommended Action No action is required.

- Error Message** NPV-6-LS_ACC_RCVD: [chars]
Explanation NPV process received an LS_ACC frame.
Recommended Action No action is required.
- Error Message** NPV-6-LS_ACC_SENT: [chars]
Explanation NPV process sent an LS_ACC frame.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_NOTIF_RCVD: [chars]
Explanation NPV process received an MTS notification.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_NOTIF_SENT: [chars]
Explanation NPV process sent an MTS notification.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_REQ_RCVD: [chars]
Explanation NPV process received an MTS request.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_REQ_SENT: [chars]
Explanation NPV process sent an MTS request.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_RESP_RCVD: [chars]
Explanation NPV process received an MTS response.
Recommended Action No action is required.
- Error Message** NPV-6-MTS_RESP_SENT: [chars]
Explanation NPV process sent an MTS response.
Recommended Action No action is required.

Error Message NPV-6-NPIV_DISABLED: [chars]

Explanation NPIV feature has been disabled.

Recommended Action No action is required.

Error Message NPV-6-NPIV_ENABLED: [chars]

Explanation NPIV feature has been enabled.

Recommended Action No action is required.

Error Message NPV-6-NPV_ENABLE_DISABLE_IN_PROGRESS: [chars]

Explanation NPV feature enable/disable is in progress. This syslog is printed at the beginning of various significant phases.

Recommended Action No action is required.

Error Message NPV-6-NPV_LOAD_BALANCE_TIMER_START: (Re)starting automatic load balancing timer for [dec] seconds

Explanation Timer started for upon external interface up or server interface down. When the timer goes off some of the server interfaces may be reinitialized to evenly distribute the server interfaces amongst the eligible external interfaces.

Recommended Action No action is required.

Error Message NPV-6-SERVER_PROXY_LOGO_SENT: [chars]

Explanation NPV process sent a LOGO frame to the core switch as the server interface went down.

Recommended Action No action is required.

NPV-7

Error Message NPV-7-CFS_REQ_RCVD: [chars]

Explanation CFS request is received. The WWN of the switch originated this request and the rr-token of the request are provided in the syslog message.

Recommended Action No action is required.

Error Message NPV-7-CFS_RESP_SENT: [chars]

Explanation CFS response is sent. The rr-token of the corresponding request and the status are provided in the syslog message

Recommended Action No action is required.

NTP Messages

NTP-2

Error Message NTP-2-NTP_SYSLOG_CRIT_ERR: : [chars]

Explanation NTP syslog Critical Error : [chars].

Recommended Action No action is required.

Error Message NTP-2-NTP_SYSLOG_INIT_FAIL: : [chars] [chars]

Explanation NTP Initialization Failed: [chars] [chars].

Recommended Action No action is required.

Error Message NTP-2-NTP_SYSLOG_NO_RESP_FROM_LC: from LC[dec] for [chars]

Explanation NTP did not receive response from the linecard for the request sent.

Recommended Action No action is required.

NTP-3

Error Message NTP-3-NTP_SYSLOG_ALLOC_FAIL: : [chars]

Explanation NTP syslog allocation failed : [chars].

Recommended Action No action is required.

Error Message NTP-3-NTP_SYSLOG_ERR_EXT: : [chars] [chars]

Explanation NTP syslog Error Exit : [chars] [dec].

Recommended Action No action is required.

Error Message NTP-3-NTP_SYSLOG_ERR: : [chars]

Explanation NTP syslog Error : [chars].

Recommended Action No action is required.

Error Message NTP-3-NTP_SYSLOG_MTS_ERR: : [chars]

Explanation NTP MTS Error : [chars].

Recommended Action No action is required.

NTP-6

Error Message NTP-6-NTP_SYSLOG_CREATED: : [chars]; Slot No: [dec]

Explanation NTP syslog created : [chars] [chars].

Recommended Action No action is required.

Error Message NTP-6-NTP_SYSLOG_EXIT: : [chars]

Explanation NTP syslog Exit : [chars].

Recommended Action No action is required.

Error Message NTP-6-NTP_SYSLOG_LOGGING: : [chars]

Explanation NTP logging : [chars].

Recommended Action No action is required.

Error Message NTP-6-NTP_SYSLOG_WARN: : [chars]

Explanation NTP syslog Warning : [chars].

Recommended Action No action is required.

NVP Messages

NVP-6

Error Message NVP-6-NVP_INFO: [chars]

Explanation NVP daemon informational message

Recommended Action No action is required.

Error Message NVP-6-STARTING: daemon started

Explanation The NVP daemon successfully started

Recommended Action No action is required.

NVP-SLOT#-2

Error Message NVP-SLOT#-2-CPP_CATASTROPHIC_ERROR: ERROR: Component ([chars]) caused critical error please reboot SSM

Explanation Component caused critical error

Recommended Action Restart the linecard

NXAPI Messages

NXAPI-3

Error Message NXAPI-3-NXAPI_PSSERROR: NX-API PSS related error

Explanation NX-API failed to read/write from the PSS

Recommended Action No action is required.

NXAPI-5

Error Message NXAPI-5-NXAPI_DISABLED: NX-API disabled

Explanation NX-API service disabled

Recommended Action No action is required.

Error Message NXAPI-5-NXAPI_ENABLED: NX-API enabled

Explanation NX-API service enabled

Recommended Action No action is required.

OC_USD Messages

OC_USD-2

Error Message OC_USD-2-RF_CRC: [chars]

Explanation Octopus received packets with CRC error from fabric

Recommended Action No action is required.

ORI_FWD Messages

ORI_FWD-2

Error Message ORI_FWD-2-CRIT_MSG: [chars]

Explanation Debug log message

Recommended Action No action is required.

ORI_FWD-6

Error Message ORI_FWD-6-ORF_DEBUG_MSG: [chars]

Explanation Debug log message

Recommended Action No action is required.

ORI_MAC Messages

ORI_MAC-2

Error Message ORI_MAC-2-ORI_MAC_CRIT_MSG: [chars]

Explanation Debug log message

Recommended Action No action is required.

ORI_MAC-6

Error Message ORI_MAC-6-ORI_MAC_DEBUG_MSG: [chars]

Explanation Debug log message

Recommended Action No action is required.

OTM Messages

OTM-2

Error Message OTM-2-OTM_EEM_FAIL: OTM failed to register with EEM

Explanation OTM process failed to register with eem, exiting now

Recommended Action No action is required.

OTM-3

Error Message OTM-3-OTM_ERROR: [chars] [chars]

Explanation [chars1][chars2]

Recommended Action No action is required.

OTM-5

Error Message OTM-5-OTM_OBJECT_STATUS: Status of tracking object [dec] changed to [chars]

Explanation Status of tracking object [dec] changed to [chars]

Recommended Action No action is required.

Error Message OTM-5-OTM_OBJ_ADD: : Tracking object [dec] configured, status of the object [chars]

Explanation Tracking Object [dec] configured, status of the object [chars]

Recommended Action No action is required.

OTM-6

Error Message OTM-6-OTM_EXITED: OTM process exited

Explanation OTM process is terminated

Recommended Action No action is required.

Error Message OTM-6-OTM_OBJ_REM: : Tracking object [dec] removed

Explanation Tracking Object [dec] removed

Recommended Action No action is required.

Error Message OTM-6-OTM_STARTED: OTM process started

Explanation OTM process is up and running

Recommended Action No action is required.

Error Message OTM-6-OTM_TRACK_START: Client started tracking object [dec]

Explanation Client has started tracking object [dec]

Recommended Action No action is required.

Error Message OTM-6-OTM_TRACK_STOP: Client stopped tracking object [dec]

Explanation Client has stopped tracking object [dec]

Recommended Action No action is required.

Error Message PATCH-INSTALLER-2-LOG_PATCH_INSTALLER_EXIT: Patch Installer exiting:
[chars]

Explanation Patch Installer exiting.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message PATCH-INSTALLER-3-PATCH_INSTALLER_ID_FILE_ERR: Error opening patch
installer id file

Explanation Could not open the file for storing patch installer request ids

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message PATCH-INSTALLER-3-PATCH_INSTALLER_IMAGE_FILE_OPEN_ERR: Error opening image name file [chars] for patch installer

Explanation Could not open the file to get the name of the image

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message PATCH-INSTALLER-3-PATCH_INSTALLER_IMAGE_FILE_READ_ERR: Error reading image name file [chars] for patch installer

Explanation Could not read the name of the image

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message PATCH-INSTALLER-3-PATCH_INSTALLER_LOG_FILE_ERR: Error opening patch installer log file

Explanation Could not open the log file for logging show install commands

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message PATCH-INSTALLER-3-PATCH_INSTALLER_OP_FAILED: Package Install operation: [chars] , operation ID: [dec], failed with error: [dec] ([chars]) at: [chars]

Explanation Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Recommended Action Patch_installer

